
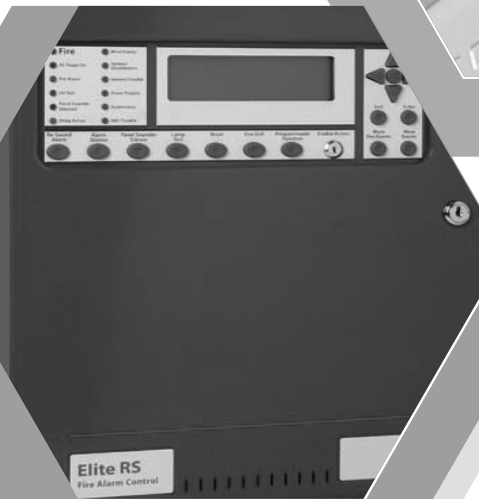


Elite-RS

Fire Alarm Control Panel Installation and Operation Manual

Man-1200 (K3532-00) Issue 01.06 Aug 2013

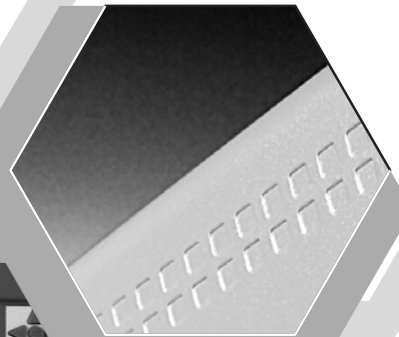

Underwriters Laboratories (UL)

File number (S 8485)

Fire Alarm Equipment

VES, LLC

The Elite-RS Panel is suitable as follows:

- Local Signaling Unit
- Types of signaling services are automatic fire alarm, manual fire alarm, waterflow alarm and sprinkler supervisory.
- Style 4, 6 or 7 for Signaling Line Circuits
- Style Y for Notification Appliance Circuits
- Non-coded Signaling, DACT requires Integrated Dialer
- Remote Station (RS) Protected Premises Unit (PPU) provides non-releasing on models (KYY04, KYY05, KYY08, KYY09), integrated Dialer.
- Remote Station (RS) Protected Premises Unit (PPU) provides releasing, non-releasing and eNet communication on models KXX24, KXX44, KXX04) containing the Modem-DACT or on models (KYY04, KYY05, KYY08, KYY09) containing the integrated Dialer
- Central Station (CS) Protected Premises Unit (PPU) provides releasing, non-releasing and eNet communication on models (KXX24, KXX44, KXX04) containing the Modem-DACT or on models (KYY04, KYY05, KYY08, KYY09) containing the Integrated Dialer
- Proprietary (P) Protected Premises Unit (PPU) provides releasing, non-releasing and eNet communication on models (KXX24, KXX44, KXX04) containing the Modem-DACT or on models (KYY04, KYY05, KYY08, VFYY09) containing the Integrated Dialer

"XX" shown in the model numbering above denotes control panel type where "XX" is "08" for Elite-RS Panels.

"YY" shown in the model numbering above denotes control panel type where "YY" is "08" for A-Series Elite-RS Panels.

FCC

Kentec Electronics Ltd.

This equipment complies with Part 68 of the FCC rule and the requirements adopted by the ACTA. On the Inside cover of this equipment is a label that contains, among other information, a product identifier US:KNTAL00BASA-FACP. If requested, this number must be provided to the telephone company.

The Integrated Dialer is incorporated on the Main Board of the Elite-RS Panel to provide TELCO communication on certain models.

Connect permissive data equipment to TELCO line 1 and line 2 of the Elite-RS Panel using independent RJ31X jacks. Reference Section 3, Installation, Connecting Communication, page 25 of this manual for details concerning these connections.

Reference the following:

- ATIS Technical Report No. 5 for connector details
- Facility Interface Code 02LS2
- Service Order Code 9.0Y

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug must be used. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

This product's REN is 0.0. The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. The REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). The REN is separately shown on the door label.

If the terminal equipment Fire Alarm Control Panel causes harm to the telephone network., the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice is not practical. the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in it's facilities. equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with this equipment Fire Alarm Control Panel, for repairs or warranty information, please contact Kentec Electronics Ltd. Units 25-27 Fawkes Ave, Questor Dartford, Kent DA1 1JQ UK +441322222121 . If the equipment is causing harm to the telephone network., the telephone company may request that you disconnect the equipment until the problem is resolved.

Reference Section 5, Maintenance and Repair of this manual for details describing standby battery and fuse replacement. No other user serviceable components are contained within this assembly. Contact Kentec Electronics technical support for diagnostic assistance when necessary. Reference Section 1, Introduction of this manual for details describing technical support, Return Material Authorization (RMA), Warranty Returns, Advanced Replacements and the Product Return Address.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this Fire Alarm Control Panel does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

Reference the Loop Explorer Configuration Manual, AW-000104, Section 4, Programming, page 10 for details describing the programming of this assembly.

NFPA

Kentec Electronics Ltd.

Install this product in accordance with NFPA 13, NFPA 72 and NEC 70 and all local codes.

Short Circuit Isolator Modules protect SLC loop devices from single-loop-shorts. SLC loops must be wired with Short Circuit Isolator Modules to comply with NFPA 72, Class A Style 7. SLC loop connections must include closed nipping and conduit nipping to maintain compliance with individual enclosures under NFPA 72, Class A, Style 7 requirements. Closed nipping encloses individual devices on SLC loops and conduit nipping encloses wiring between these individual enclosures. For Class A, Style 6 compliance, the Short Circuit Isolator Modules may be located at strategic locations based on the discretion of the designer or installer.

The NFPA requires that two dedicated and independent TELCO lines feed communication features such as the Integrated Dialer.

Install SLC detectors with spacing as specified in section 90.19 of UL 864, 9th edition where units employing the multiple detector operation shall include guidelines for installing a minimum of two detectors in each protected space and to reduce the detector installation spacing to 0.7 times the linear spacing in accordance with National Fire Alarm Code, NFPA 72. Also reference 55.3.1 and 55.3.2 of UL 864, 9th edition for these detector spacing requirements.

All field wiring should be installed using fire rated cables according to the NFPA 72. Riser conductors shall be installed in accordance with the survivability from attack by fire requirements in National Fire Alarm Code, NFPA 72, Sections 6.8.6.3, and 6.9.4. Riser conductors shall employ either a 2 hour rated cable system, or meet requirements approved by the AHJ, or installation of the Supervised Output Module using NFPA Style 7 configuration.”

FM Global Technologies LLC (FM APPROVALS)

Kentec Electronics Ltd.

Copyright 2013 by Kentec Electronics Ltd.
All rights reserved.



Kentec Electronics Ltd.

Kentec is a registered trademark of Kenetec Electronics Ltd. All other product or service names are the property of their respective owners.

**Kentec Electronics Ltd.
Elite-RS Panel Installation Manual
A-Series**

Man-1200, Revision E01.06

Contents

Section 1

Introduction

Using This Manual 3

Related Documentation 3

Document Conventions 4

 Part Numbers 4

 Writing styles 4

If You Need Help 4

Contacting Kentec Tech Support 4

 RMA Returns Required 4

 Warranty Returns 5

 Advanced Replacements 5

Product Return Address 5

Section 2

Overview

Points and Addresses 7

Zone Capability 7

Contact ID Address Restrictions 8

Hardware Features 8

NAC Outputs 8

Panel Controls and Indicators 9

 Left-Panel-Indicators 10

 Right-Panel Controls and indicators 11

 Lower-Control-Pad 12

 Settings and Resets 13

Terminal Connections 13

Internal Power Supply 15

Contents

Section 3

Installation

| | |
|---|-----------|
| General Installation Checklist | 17 |
| Before You Begin | 18 |
| Determining System Current Draw | 18 |
| Standby-Battery Capacity | 18 |
| Operating Constraints | 19 |
| Mounting the Elite-RS Panel | 19 |
| Marking the Location | 19 |
| Anchoring the Cabinet | 20 |
| Feeding Cable | 20 |
| Replacing Cabinet Components | 20 |
| Connecting Power and Devices | 21 |
| Standby-Batteries | 21 |
| Before Wiring and Operating | 23 |
| AC Wiring | 24 |
| Connecting Communication | 25 |
| TELCO Communication | 25 |
| Connecting Class A Loops | 26 |
| NFPA 72, Style 7 | 27 |
| NFPA 72, Style 6 | 28 |
| Connecting Class B Loops | 29 |
| Installing SLC Devices | 29 |
| Detector Spacing | 29 |
| Output Modules Controlling Notification Appliances | 30 |
| Silencing Notification Appliances | 30 |
| NAC Synchronization | 30 |
| Connecting NAC Devices | 31 |
| Connecting Auxiliary 24 VDC | 32 |
| Relay Contacts | 32 |
| Installing Municipal Boxes | 33 |
| Testing the Installation | 34 |
| Confirming a Successful Installation | 34 |
| Testing the Panel Lamps | 36 |
| Trouble-Silence Test | 36 |
| Troubleshooting | 38 |
| Test Zones | 38 |
| Event Log | 41 |
| Loop Data Test | 45 |

Contents

Section 4

Front-Panel Menu

| | |
|----------------------------------|-----------|
| Access Level 2 | 50 |
| Disablesments | 50 |
| View Devices | 52 |
| Test Zones | 52 |
| Set System Time | 53 |
| Sensor Maintenance Early Warning | 53 |
| Events and Status | 53 |
| Access Level 3 | 54 |
| Front-Panel Controls | 56 |
| Alarm Silence | 56 |
| Re-Sound Alarm | 56 |
| Reset | 56 |
| Fire Drill | 56 |
| Programmable Function | 56 |

Section 5

Maintenance and Repair

| | |
|-----------------------------|-----------|
| Maintenance | 57 |
| Inspecting Batteries | 57 |
| Replacing Standby-Batteries | 57 |
| Replacing Fuses | 59 |
| 10 Amp Battery Fuse | 59 |
| 3 Amp Power-Supply Fuse | 60 |
| Removing Cabinet Components | 61 |

Appendix A

Specifications

| | |
|-----------------------------|-----------|
| Electrical | 65 |
| Standby and Alarm Current | 65 |
| Earth Fault Indication | 65 |
| SLC Ratings | 65 |
| SLC Cabling | 66 |
| Programmable Relay Contacts | 66 |
| NAC Outputs | 67 |
| RS485 Serial Bus | 68 |
| eNET Terminals | 68 |

Contents

| | |
|--------------------------------------|-----------|
| 24 V OUT | 68 |
| Auxiliary 24 VDC | 69 |
| AC Line Connection | 69 |
| Power Supply | 69 |
| Cabling | 70 |
| Operating Environment | 71 |
| Physical Specifications | 71 |

Appendix B

Equipment List

| | |
|---|-----------|
| Elite-RS Panels | 73 |
| Loop Devices and Accessories | 74 |
| Replacement Parts | 76 |
| Notification Appliances | 77 |
| Synchronization | 77 |
| Configuring NAC Outputs | 78 |
| Regulated NAC Outputs | 79 |
| Special Application NAC Outputs | 79 |
| Maximum Line Impedance | 93 |
| Compatible Devices for Auxiliary 24V | 93 |

Appendix C

Calculations

| | |
|---|------------|
| Current-Loading | 95 |
| Example of Total Load Current | 96 |
| Determining the Standby-Battery Rating | 97 |
| Battery Rating Equation | 97 |
| Tabulating Data | 98 |
| NAC Wiring Length | 99 |
| Sample Lmax Calculation | 99 |
| Contact ID | 107 |
| Zone ID Reporting | 107 |
| Point ID Reporting | 107 |

Contents

Appendix D Door Label

Appendix E Operating Instructions

Appendix F Communications Format

| | |
|--|------------|
| SIA 108 | |
| Zone ID Reporting | 108 |
| Point ID Reporting | 108 |
| Dialing Methodology | 108 |
| Dialing Facilities | 108 |
| Dialing Sequence | 108 |
| Answering Methodology | 109 |
| 24 Hour Test Report | 109 |
| Configure Dialer Settings | 109 |
| Phone Numbers | 111 |
| Dialing | 112 |
| Use Lines | 112 |
| Number of rings before Answer | 112 |
| Test Code Time | 112 |
| Report By Zone or by Point | 112 |
| Protocol | 112 |
| Account Number | 112 |
| Reporting Criteria | 112 |
| Suspending Reporting | 113 |

Appendix G Reporting Formats

| | |
|-------------------------------------|------------|
| SIA Point Conversion | 115 |
| Contact ID Conversion | 126 |
| Event Code Translation | 137 |

Section 1

Introduction

Notice to users, installers, authorities having jurisdiction, and other involved parties.

This product incorporates field-programmable software. In order for the product to comply with the requirements in the Standard for Control Units and Accessories for Fire Alarm Systems, UL 864 9th Edition, certain programming features or options must be limited to specific values or not used at all as indicated below.

| Program Feature or Option | Permitted in UL 864 ? (Y / N) | Possible Settings | Settings Permitted In UL 864 |
|--|----------------------------------|----------------------------------|---------------------------------|
| AC Fail Delay | Yes | 0 - 24 hours | 1 - 3 hours |
| Alarm Verification | Yes | 5 - 60 seconds | 60 second |
| Disable Buzzer | Yes | Enable / Disable | Enable |
| Disable Ground Trouble | Yes | Enable / Disable | Enable |
| Set Buzzer Silence Access Level | Yes | 1 or 2 | 2 |
| NAC Output Delay Stage 1 | No | 0 - 5 minutes | 0 minutes |
| NAC Output Delay Stage 2 | No | 0 - 5 minutes | 0 minutes |
| Photoelectric Smoke Sensor Delay | No | 0 -120 seconds | 0 seconds |
| Ionization Smoke Sensor Delay | Yes | 0 -120 seconds | 0 seconds |
| Duct Detector | Yes | 0 -120 seconds | 0 seconds |
| Duct Detector with Relay | Yes | 0 -120 seconds, 0 - 5 seconds | 0 seconds |
| Contact Module Delay (All models) | Yes | 0 -120 seconds | 0 seconds |
| Conventional Zone Module Delay | Yes | 0 -120 seconds | 0 seconds |
| Dual Relay Module Delay | Yes | 0 - 5 seconds | 0 seconds |
| Supervised Output Module Delay | Yes | 0 - 5 seconds | 0 seconds |

Reference Appendix B, "Equipment List" for the specific models described in this table.

This manual describes 1 and 2 loop models of the Elite-RS A-Series Panel. All models of the Elite-RS A-Series Panel support Apollo loop protocol.

One loop models include the No Communication VF0850, the Non-Expandable, No Communication VF0870, the eNet Interface VF0855, the Integrated Dialer VF0856, the Non-Expandable, Integrated Dialer VF0876 and the eNet Interface & Integrated Dialer VF0857.

Two loop models include the No Communication with Loop Expansion Module VF0860, the eNet Interface with the Loop Expansion Module VF0865, the Integrated Dialer with the Loop Expansion Module VF0866 and the eNet Interface & Integrated Dialer with the Loop Expansion Module VF0867.

This section describes:

- Using This Manual
- Related Documentation
- Document Conventions
- If You Need Help
- Contacting Kentec For Repair

The figure below illustrates the Elite-RS Panel:

Figure 1-1
Elite-RS Panel



Using This Manual

The following sections provide instructions for installing, testing and troubleshooting the Elite-RS Panel:

- Section 1** **Introduction** provides document conventions, the technical help-line, repair and return information.
- Section 2** **Overview** provides a summary features of the Elite-RS Panel.
- Section 3** **Installation** describes how to setup, install and test the Elite-RS Panel.
- Section 4** **Front-Panel Menu** describes how to operate the Elite-RS Panel from its front-panel.
- Section 5** **Maintenance and Repair** describes how to maintain and repair the Elite-RS Panel.
- Appendix A** **Specifications** provides characteristics of the Elite-RS Panel.
- Appendix B** **Equipment List** provides model numbers for Elite-RS Panels, loop devices, accessories, replacement parts and compatible Notification Appliances.
- Appendix C** **Calculations** provides calculations for determining load capacity, battery rating, and wiring length of the Elite-RS Panel.
- Appendix D** **Front Door Label** is a copy of the Elite-RS Panel front door label.
- Appendix E** **Operating Instructions** provides an overview of Elite-RS Panel status and control instructions.
- Appendix F** **Communication Formats** describes settings and characteristics of the embedded dialer.
- Appendix G** **Reporting Formats** contains tables for SIA point conversion, Contact ID conversion and Event Code translation.

Related Documentation

The following documents shall be used to provide additional information for installing the Elite-RS Panel:

- 16 Channel I/O Interface Installation Manual, Man-1203, E01.XX
- eView Installation Manual, Man-1201, E01.XX
- eMatrix Installation Manual, Man-1202, E01.XX
- eNet Installation Manual, Man-1204, E01.XX

Document Conventions

This document contains conventions for part numbers and writing style.

Part Numbers

Part numbers are provided in Section 1, Appendix B and Appendix D of this manual. Refer to Appendix D, Door Label for a diagram summary of this manual. Refer to Appendix B, Equipment List for a complete list of part numbers required for completing this installation.

Writing styles

Before you begin using the Elite-RS Panel, familiarize yourself with the stylistic conventions used in this manual:

Italic type Denotes a displayed variable, a variable that you must type, or is used for emphasis.

Courier font Indicates text displayed on a computer screen.

If You Need Help

If you need technical support contact Kentec at + 44 (0) 1322 222121 or e-mail the department, techsupport@kentec.co.uk. Kentec technical support is available Monday through Friday, 8:00 AM to 5:00 PM and Saturday 8:00 AM to 12:00 PM.

Limited Returns and Repairs Policy

In-Warranty Items

All equipment supplied by Kentec Electronics Ltd is provided with a warranty, as defined in Section 8 (Warranties & Liability) of the Terms and Conditions of Sale. These warranties are between Kentec Electronics Ltd (the Seller) and the company that placed the order upon the seller (the Buyer). The warranty period is valid for 36 months from the delivery date and is non-transferable.

Damaged Goods

In the event of damage to equipment during transit or any defect in the quality of goods, the Buyer shall notify Kentec Electronics Ltd within seven days of delivery as detailed in Section 8.5 of the Terms & Conditions of Sale. The goods may then be returned to the Customer Service Department of Kentec Electronics Ltd. for repair, or replacement parts may be supplied (by arrangement).

Component Failure

In the event of a defect of the supplied equipment during the warranty period, due to defective materials or workmanship, then replacement parts shall be supplied to the Buyer using the Service Replacement Item (SRI) scheme.

Service Replacement Items

The Buyer shall request the replacement part(s) required from the Customer Service Department. This request shall be made by fax to +44 (0)1322 291794 or e-mail to sales@kentec.co.uk and shall include the parts required, the panel Works Order (W/O) Number and the required delivery address.

If the Buyer is not aware of the required replacement part(s), additional advice may be obtained from the Technical Support Department of Kentec Electronics Ltd. Once the SRI has been approved, items are normally dispatched for next day delivery within the mainland UK, subject to stock availability.

SRI parts are supplied on the following terms and conditions:

- SRI parts are loan items and are not available for resale.
- At all times, Kentec Electronics Ltd. retains the title of SRI parts supplied, as detailed in Section 7.4 of the Terms and Conditions of Sale.
- All SRI parts must be returned to the Customer Service department of Kentec Electronics Ltd within 14 days of delivery.
- Any SRI parts that have not been returned within 28 days of delivery will be invoiced at the price given in the Kentec Price List, less discount.
- Any returned items that are found to have failed due to fair wear and tear, willful damage, negligence, abnormal working conditions, misuse or alteration or repair without the Suppliers approval or failure to follow the sellers instructions will be subjected to a repair fee of up to the price given in the Kentec Price List, less discount.
- Any returned items that are not part of the original equipment or are not in warranty will be invoiced at the price given in the Kentec Price List, less discount where applicable.
- All SRI parts shall be returned in the same packaging as the replacement parts were supplied in. Failure to ensure that adequate anti-static precautions are taken during the replacement of parts, or in the return of SRI parts may result in an invoice of up to the price given in the Kentec Price List, less discount.
- Any SRI parts returned without the completed SRI delivery report or any SRI reference documentation will be invoiced at the price given in the Kentec Price List, less discount.

The right to receive Service Replacement Items is regularly reviewed and may be withdrawn from persistent abusers of this facility. Kentec reserve the right not to supply SRI items without prior notice.

Out Of Warranty Items

Kentec Electronics Ltd provides a test and repair facility for most standard and special build products. This facility can also recondition control panels, subject to availability of components.

Customer Repairs

Items for repair shall be returned to the Customer Service Department of Kentec Electronics Ltd. Any items returned for repair must be accompanied with the following:

- A request for repair work to be undertaken.
- A customer contact name.
- Details of the company requesting the repair.

Failure to supply the required information will result in the returned items being quarantined for a period not exceeding 60 days. If the items are not identified within 60 days of receipt, then Kentec Electronics Ltd reserves the right to dispose of these items or return them.

A written quotation will be provided for all items to be repaired that are not included in the repair prices section of the Kentec Price list. No repairs or refurbishment will be undertaken without prior authorisation from the customer and a written order for the repair work. Returned equipment will be held awaiting authorisation for a period not exceeding 60 days from the date of quotation. After this period, Kentec Electronics Ltd. reserves the right to dispose of these items or return them.

Repair Warranties

Repaired items are not covered by the normal Warranties and Liability conditions in the Terms and Conditions of Sale. Subsequent failures of repaired items will only be covered if the failure is due to a material or workmanship defect directly associated with the repair and for a period not exceeding three months from the date of the repair.

Kentec Electronics Ltd are under no liability if the repaired or replaced components are found to have failed due to fair wear and tear, willful damage, negligence, abnormal working conditions, misuse or alteration or repair without approval or failure to follow the sellers instructions.

Section 2

Overview

Models of the A-Series Elite-RS Panel support SLC devices using Apollo protocol. The standard model of the Elite-RS Panel contains one SLC loop and may be expanded to include a second SLC Loop. The Elite-RS Panel supports the networking flexibility of eNet. In a networking scenario signals for all network nodes are transmitted through a single dialer.

The eNet provides a secure networking architecture, between control panels. Up to 64 Elite-RS Panels can be connected together on the eNet.

In a networking scenario; Elite-RS Panels also supports Remote LCD Annunciators and Graphic Annunciators. Annunciators (repeater panels) and graphical annunciators are fully supported in multiple or single quantities through standard communication bus included with the panel.

The Elite-RS Panel can be equipped with an industry standard digital communicator capable of transmitting both SIA and Contact ID formats. Configurations can be performed through Loop Explorer, or through the use of the front-panel soft-keys.

Configuring with the front-panel soft-keys of the Elite-RS provides limited functionality. We recommend configuring with Loop Explorer for a complete range of programming features.

The Loop Explorer application is a configuration utility for control panels that provides programming for communication, SLC devices, notification appliances and initiation devices. Configure parameters for these attributes remotely or on-site and then download them to the Elite-RS Panel through the serial port of your laptop or through a telephone connection to the dialer.

Points and Addresses

Points and addresses are fundamental to the operation of Elite-RS monitoring and reporting. Devices are identified as points when connected to the Elite-RS Panel. Each Elite-RS Panel supports a maximum of 126 points per loop plus subpoints on any module or 252 points per loop when utilizing subpoints. The 1 and 2 loop Elite-RS Panel supports a maximum of 800 devices per panel.

All Elite-RS Panels support a point and subpoint maximum of 800 addresses per panel.

Zone Capability

Zones are groups containing combinations of control panel input, output and addressable loop devices. The Elite-RS Panel supports 500 zones across the network.

Contact ID Address Restrictions

Address reporting restrictions affect all models of the Elite-RS Panel when using the Contact ID format. The Contact ID format limits reporting to addresses of 99 and above. The format employs three digits in the protocol. The first digit is reserved for the loop number and the remaining digits are reserved for addressing.

Allocation of the first digit is described below:

| First digit | Description of numeric value |
|-------------|---|
| 0 | Zero I/O connections on the control panel |
| 1 | SLC loop 1 |
| 2 | SLC loop 2 |

The Contact ID format can be used for devices as long as the device address is 99 or below. Using contact ID protocol with point reporting will result in truncation of data for points above 99.

FACP reporting can be changed from point reporting to zone reporting when the limit of 99 addresses per loop cannot be avoided. Zone reporting can be used to resolve address assignments in excess of 99 but doing so reduces overall reporting granularity.

Models of the Elite-RS Panel can be programmed for the SIA or Contact ID digital communication format. The SIA and Contact ID format provide status monitoring and reporting to industry-standard receivers at the monitoring-center.


Both of these digital communication formats provide a range of addressing for device-points and sub-points on the Elite-RS Panel. The SIA format allows full reporting from all device-points and sub-points. The Contact ID format provides a limited range of reporting from device-points.

Reference Appendix B, “Equipment List” for all models affected by restrictions of the Contact ID format.

Hardware Features

The figure below illustrates hardware features of the Elite-RS Panel:

Figure 2-1
Hardware Features\

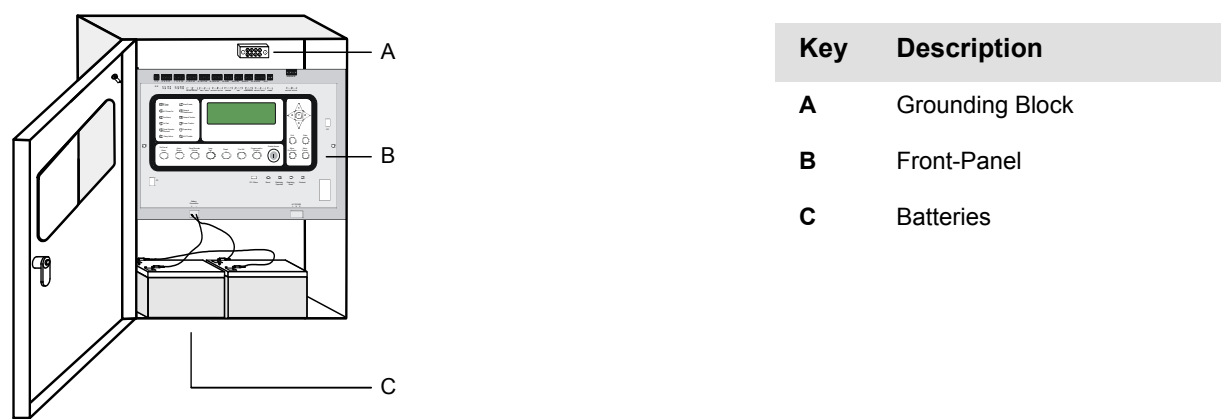

NAC Outputs


NAC outputs of the Elite-RS Panel are programmable and can be operated in regulated or special application mode.

Reference Appendix A, Specifications for constraints and operating levels of these NAC output modes.

Panel Controls and Indicators

The figure below illustrates controls and indicators of the Elite-RS Panel:

Figure 2-2
Controls and Indicators

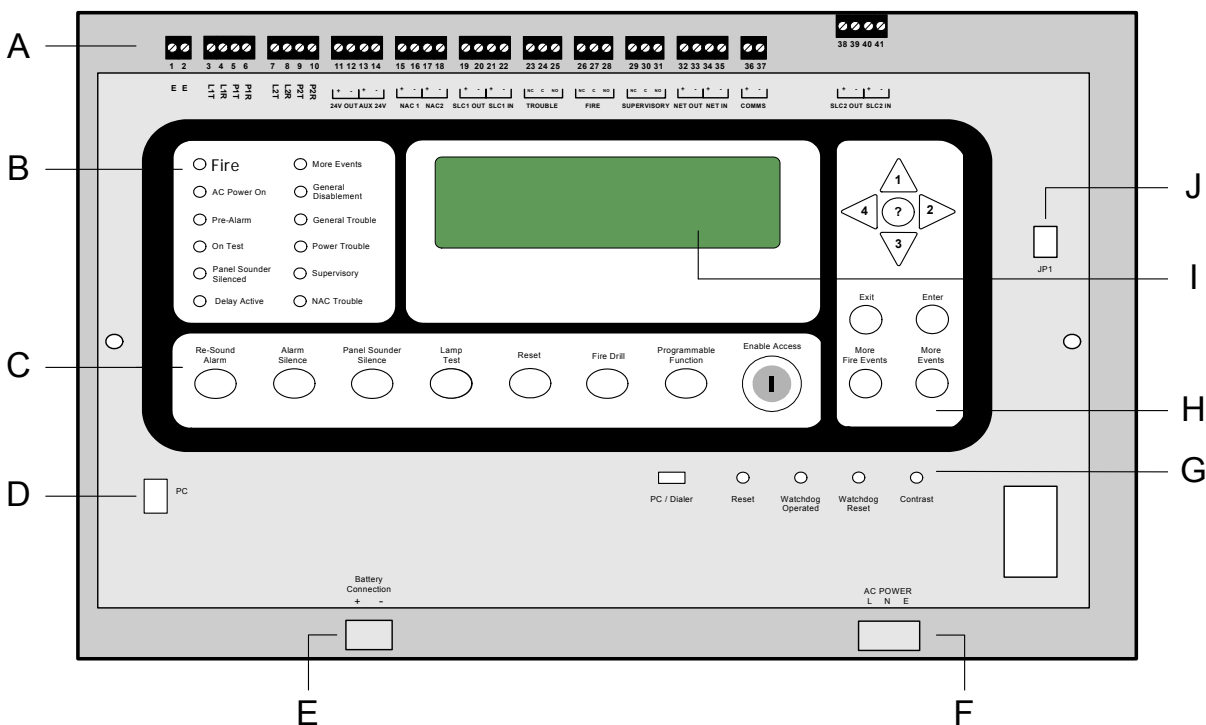


| Key | Description | Key | Description |
|-----|-----------------------|-----|-------------------------------------|
| A | Terminal connections | F | AC power connections |
| B | Left-panel-indicators | G | Settings and controls |
| C | Lower-control-pad | H | Right-panel-controls and indicators |
| D | PC connection | I | LCD Display |
| E | Battery connection | J | JP1 connection |

Left-Panel-Indicators

The figure below illustrates left-panel-indicators:

Figure 2-3
Left-Panel-Indicators

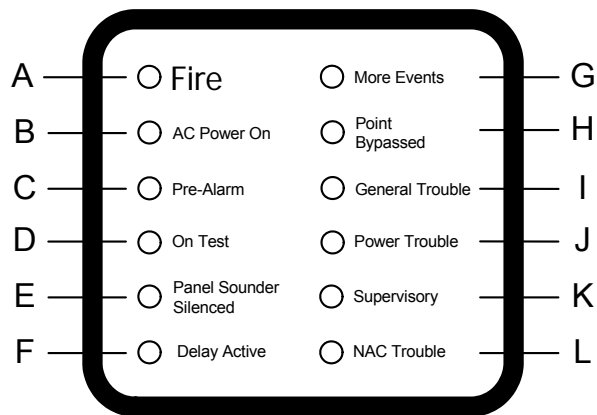


| Key | LED Indicator | Color |
|-----|--|--------|
| A | Fire, NAC Output State - Flashing = NACs Activated - ON Continuous = NACs silenced - OFF = Panel and NACs Reset | Red |
| B | AC Power On | Green |
| C | Pre Alarm | Yellow |
| D | On Test | Yellow |
| E | Panel Sounder Silence | Yellow |
| F | Delay Active | Yellow |
| G | More Events | Yellow |
| H | Point Bypassed | Yellow |
| I | General Trouble | Yellow |
| J | Power Trouble | Yellow |
| K | Supervisory | Yellow |
| L | NAC Trouble | Yellow |

Right-Panel Controls and indicators

The figure below illustrates right-panel controls and indicators:

Figure 2-4
Right-Panel-Indicators

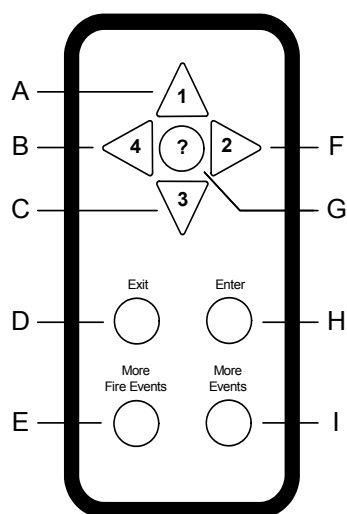


| Key | Name | Description |
|-----|----------------------|--|
| A | Keypad number one | Navigates menu selections up. |
| B | Keypad number four | Navigates menu selections to the left. |
| C | Keypad number three | Navigates menu selections down. |
| D | Exit | Cancels the current menu selection. |
| E | More Fire Events | Displays the number of alarms present on the Elite-RS Panel and overrides the display provided by menu navigation. |
| F | Keypad number two | Navigates menu selections to the right. |
| G | Keypad question mark | Provides a “help screen” for the current menu display and also displays status. For example, recommendations are displayed during alarm or fault conditions. If a menu function is accessed then help relating to that function will be displayed. |
| H | Enter | Enables the menu selection. |
| I | More Events | Displays the number of events present and overrides menu navigation. Provides event status for Fire, Pre-Alarm, Trouble, Disablements and Other. |

Lower-Control-Pad

The figure below illustrates the lower-control-pad:

Figure 2-5
Lower-Control-Pad

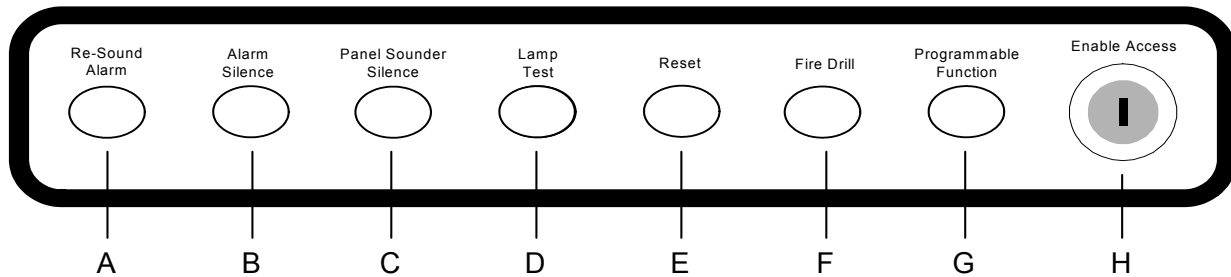


| Key | Name | Description |
|----------|-----------------------|--|
| A | Re-Sound Alarm | Re-sounds the alarm when sounders are silenced using the Alarm Silence button. |
| B | Alarm Silence | Silences NACs connected to the Elite-RS Panel after receiving authorization through Access Level 2. |
| C | Panel Sounder Silence | Silences the internal buzzer of the Elite-RS Panel. No other sounder outputs are affected by this operation. |
| D | Lamp Test | Tests front-panel indicators and the internal buzzer by illuminating all LEDs while darkening the front-panel display and sounding the buzzer. |
| E | Reset | Resets latching inputs such as fire and pre-alarm events after receiving authorization through Access Level 2. Fault events are non-latching inputs and cannot be cleared by the Reset button. Non-latching inputs are cleared when faults are cleared. |
| F | Fire Drill | Provides a fire drill for the Elite-RS Panel after receiving authorization through Access Level 2. During the drill: <ul style="list-style-type: none"> The “On Test” LED illuminates continuously The “Fire” LED blinks The internal buzzer sounds intermittently The display provides the message, “FIRE DRILL:FIRE DRILL ZONE 00” To stop the fire drill: <ol style="list-style-type: none"> Press 4 to display the “SET ACCESS LEVEL 2 MENU”. Provide Access Level 2 authorization. Press Reset or Fire Drill on the lower-control-pad. |
| G | Programmable Function | Activates inputs, outputs or actions defined in the configuration by the installer. |
| H | Enable Access | This feature places the menu of the Elite-RS in ACCESS LEVEL 2. Insert the key in the lock and turn it to the right to obtain ACCESS LEVEL 2. |

Settings and Resets

The figure below illustrates settings and resets of the Elite-RS:

Figure 2-6
Settings and Resets

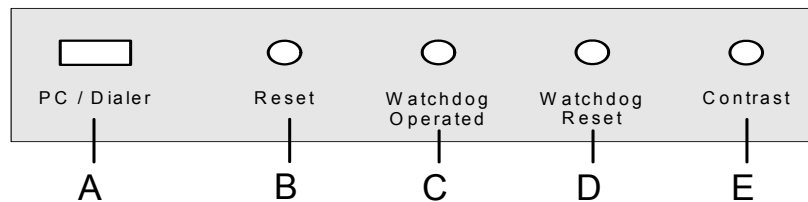


| Key | Name | Description |
|-----|-------------------|--|
| A | PC / Dialer | Two-position slide switch for setting PC or Dialer operation. Place this switch in the PC position when downloading Loop Explorer configurations and in the Dialer position when using utilizing TELCO communication for the Integrated Dialer. Return the PC/Dialer switch to the Dialer position following downloads to provide continued TELCO communication. The Integrated Dialer is an optional feature and may not be provided on certain models. |
| B | Reset | Restores operation by restarting processors in the Elite-RS Panel. Press Reset after a firmware upgrade to re-initialize processors in the panel. |
| C | Watchdog Operated | Illuminates when the processor of the Elite-RS Panel stops running or re-boots. |
| D | Watchdog Reset | Turns off the Watchdog Operated LED by resetting it. |
| E | Contrast | Trim pot adjustment for increasing or decreasing the contrast of the LCD. |

Terminal Connections

The figure below illustrates Terminal connections of the Elite-RS Panel:

Figure 2-7
Terminal Connections

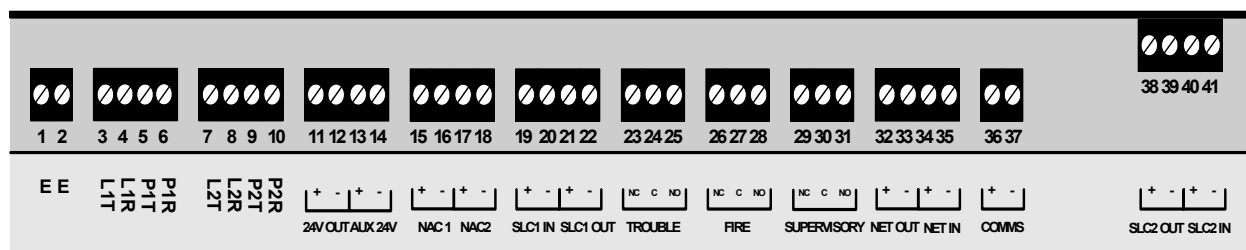

The table below describes Terminal designations of the Elite-RS Panel:

| Designation | Terminal | Description |
|--------------------|---------------|--|
| E, E | 1 and 2 | Earth ground |
| L1T | 3 | TELCO Line 1 tip |
| L1R | 4 | TELCO Line 1 ring |
| P1T | 5 | TELCO Phone line 1 tip. This terminal drops TELCO connection during alarm conditions to allow communication on L1T. |
| P1R | 6 | TELCO Phone line 1 ring. This terminal drops TELCO connection during alarm conditions to allow communication on L1R. |
| L2T | 7 | TELCO Line 2 tip |
| L2R | 8 | TELCO Line 2 ring |
| P2T | 9 | TELCO Phone line 2 tip. This terminal drops TELCO connection during alarm conditions to allow communication on L2T. |
| P2R | 10 | TELCO Phone line 2 ring. This terminal drops TELCO connection during alarm conditions to allow communication on L2R. |
| 24V OUT | 11 and 12 | Terminal connections for the 24 volt output |
| AUX 24V | 13 and 14 | Terminal connections for the auxiliary 24 volt output |
| NAC1 | 15 and 16 | Terminal connections for the NAC 1 circuit. |
| NAC2 | 17 and 18 | Terminal connections for the NAC 2 circuit. |
| SLC1 IN | 19 and 20 | Terminal connections for the "IN" of SLC loop 1. |
| SLC1 OUT | 21 and 22 | Terminal connections for the "OUT" of SLC loop 1. |
| TROUBLE | 23, 24 and 25 | Trouble relay contacts |
| FIRE | 26, 27 and 28 | Fire relay contacts |
| SUPERVISORY | 29, 30 and 31 | Supervisory relay contacts |
| NET OUT | 32 and 33 | Terminals connections for the "OUT" of the eNET network |
| NET IN | 34 and 35 | Terminals connections for the "IN" of the eNET network |
| COMMS | 36 and 37 | Terminal connections for RS485 serial communication |
| SLC2 OUT | 38 and 39 | Terminal connections for the "OUT" of SLC loop 2. |
| SLC2 IN | 40 and 41 | Terminal connections for the "IN" of SLC loop 2. |

Internal Power Supply

The internal power supply of the Elite-RS Panels meets UL 864, 9th edition and provides a 5.25 Amp, off-line switch-mode power-source for operating FACP functions as well as charging the standby batteries.

The 5.25 Amp power supply can operate at 120 or 240 VAC. A jumper connection is provided on the power supply to switch between these operating voltages. Connecting the jumper provides 120 VAC operation and removing it provides 240 VAC operation.

Reference Appendix C, Calculations to determine load current limitations of the 5.25 Amp power supply

Features of the power supply include:

| | |
|---------------------------------|--|
| Battery-backup | Provides battery power to the load when the AC input of the power supply falls below the rated level. The voltage at the load remains within the specified range during these switching-transitions. |
| Battery-boost | Boosts voltage when the battery voltage drops due to a low-battery condition. |
| Short-circuit protection | Provides a shut down on the load side of the power supply when the load-current exceeds the maximum level. |
| Automatic-retry | Restores output to the load when operating conditions return to nominal levels. This feature restores voltage levels at the load following conditions such as over-current and battery depletion. |
| Status | The AC input to the power supply is supervised by the Elite-RS Panel. The control panel provides an LED status display for normal and fault conditions. Normal conditions occur when the power supply is operating in an acceptable range. Fault conditions occur when the power supply is not operating in an acceptable range. |

This page intentionally left blank.

Section 3

Installation

This section provides instructions for connecting cables, mounting and testing the Elite-RS Panel for installation.

General Installation Checklist

To complete the installation:

- 1 Create a plan of the fire alarm system and checklist for installing the Elite-RS Panel.
- 2 Determine the current draw of the fire alarm system.
- 3 Determine the battery capacity of the Elite-RS Panel.
- 4 Remove the Elite-RS Panel from its packaging and check its contents.
- 5 Remove the standby-batteries from the base of the cabinet.
- 6 Mark the location for anchoring the cabinet to the premises-wall.

CAUTION!



Maintain extreme care when anchoring the cabinet and its contents to the premises wall. Electronic components within the Elite-RS Panel are vulnerable to physical damage from severe shock and vibration. Remove the cabinet-door and front-panel from the cabinet when installations cannot guarantee vigilant care during the wall-anchoring process.

- 7 Anchor the cabinet of the Elite-RS to the premises-wall.
- 8 Thread cabling into the cabinet and secure it.
- 9 Place standby-batteries in the base of the empty-cabinet.
- 10 Attach the cabinet-door and the front-panel to the cabinet.
- 11 Connect the standby-batteries to the terminal-connection on the front-panel.
- 12 Connect all cabling.
- 13 Apply power to the Elite-RS Panel from the AC source.
- 14 Configure the Elite-RS Panel.
- 15 Test the Elite-RS Panel installation.

Before You Begin

Before you begin the installation, take a few minutes to review the installation information, gather the required items, and complete the tasks listed below to make the installation as quick and easy as possible.

- 1 Create a plan and checklist before beginning the installation process. Planning can reduce the number of problems that can occur during installation.
- 2 Select a mounting site for the Elite-RS Panel that is suitable for its operating environment. The site chosen for mounting the Elite-RS Panel should be clean and dry and not subject to shock or vibration. Ensure that the Elite-RS Panel environment is free from wire ends, knockout discs and any other debris.

CAUTION!



The Elite-RS Panel installation must be performed by qualified personnel familiar with electronic components. Electronic components within the Elite-RS Panel are vulnerable to damage from electrostatic discharge. Ground straps must be worn by installers before handling Elite-RS Panel circuit boards to prevent damage from electrostatic discharge.

- 3 Acquire the following items that are not included with the Elite-RS Panel, but may be required for the installation:

| Item | Quantity | Description |
|--------------------------|----------|--|
| Dual phone Cable | 1 | The dual phone cable connects to an RJ31X jack assigned to line 1 and to an RJ31X jack assigned to line 2. <i>Reference Figure 3-16, Integrated Dialer Connections for more information on dual phone cable wiring.</i> |
| Mounting Hardware | 1 | The mounting hardware that secures the Elite-RS Panel to the premises-wall is not provided in the Elite-RS Panel packaging. |
| Ground Strap | 1 | A ground strap is required for handling Elite-RS Panel circuit boards. <i>The ground strap is not provided in packaging of the Elite-RS Panel.</i> |

CAUTION!



Disconnect power before removing Elite-RS Panel circuit boards. Never insert or remove circuit boards while the Elite-RS Panel power is on. The Elite-RS Panel can be damaged if its circuit boards are removed while under power.

Determining System Current Draw

Determine the current draw of the fire alarm system for alarm and standby conditions. Use these maximum current values to obtain the battery capacity of the fire alarm system as well as to confirm the operating constraints of the system.

Standby-Battery Capacity

Perform the installation only after calculations have been completed for a suitable battery size.

Battery standby-hours are dependant on battery capacity and load of the FACP system. *Reference Appendix C, Calculations to determine the standby-battery capacity of the system.*

Operating Constraints

Installation of the FACP must include the operating constraints of the system to maintain continuous signal monitoring and reporting. Operating constraints are based on the current-driving capability of the Elite-RS outputs and the external loading caused by devices and cabling.


External loads connected to the Elite-RS outputs must be chosen within the driving limits of each output. The loading placed on these outputs can be caused by individual or multiple combinations of signaling line circuits, notification appliances and initiating devices. Cabling is also an external loading property on the Elite-RS outputs. Select cabling size and length based on the type of circuit connected to the output of the Elite-RS Panel.

Reference Appendix A, Specifications and Appendix C, Calculations to determine specific operating constraints for devices and cabling connected to the Elite-RS Panel.

Mounting the Elite-RS Panel

Select a mounting location that provides adequate room for opening the door of the Elite-RS Panel. Provide a minimum of 1" clearance beyond the door-edge when anchoring the Elite-RS Panel.


Figure 3-1
Door Clearance Recommendation

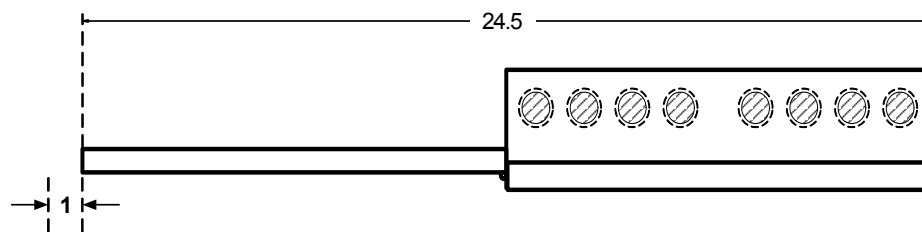

Marking the Location

Mark hole locations on the premises-wall for mounting the Elite-RS Panel.

Figure 3-2
Hole Marking Requirements

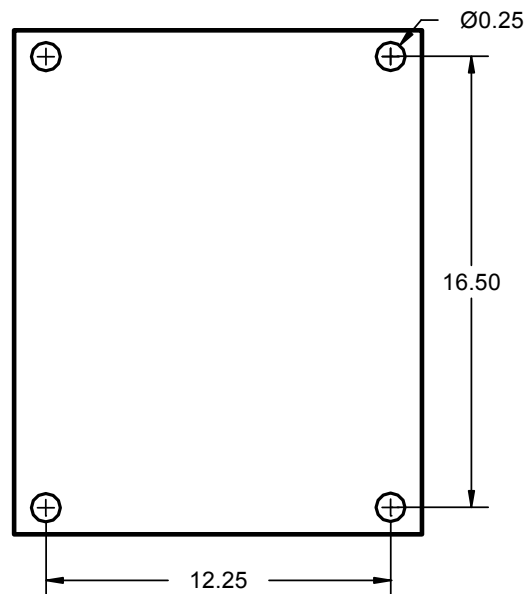

Anchoring the Cabinet

Drill holes in the premises-wall to anchor the empty Elite-RS cabinet using mounting-hardware to secure it.

Feeding Cable


Remove knockout tabs from the cabinet to feed cabling for AC power, 24 VDC, TELCO, eNet, addressable devices, initiation devices and notification appliances. Dress AC cabling as far away as possible from TELCO, and device communication.

Separate high and low voltage wiring in the enclosure with a minimum gap of 0.25". Reference UL 864 12.3.1.


To feed cabling into the cabinet:

- 1 Remove the top-left and top-right knockout tabs from the cabinet.

Figure 3-9
Removing Knockout Tabs

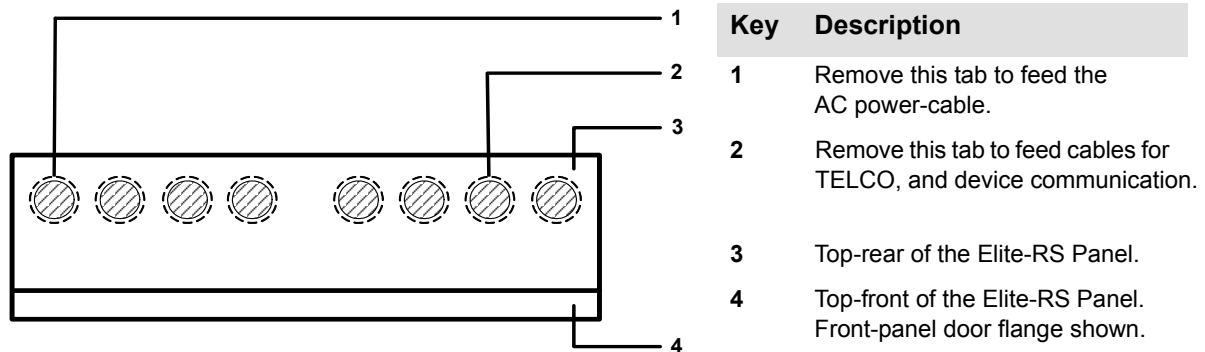

CAUTION!



- 2 Feed the AC power-cable into the top-left-hole provided from the knockout-tab.
- 3 Feed cables for 24 VDC, TELCO, VESNet, addressable devices, initiation devices and notification appliances into the top-right-hole. Remove additional knockout-holes directly adjacent to this knockout-hole, to provide more cabling space as required.

Replacing Cabinet Components

Replace cabinet components of the Elite-RS to prepare for wiring the terminal-connector for AC power.

To prepare for wiring the terminal-connector for AC power:

- 1 Remove debris from the base of the cabinet that may have accumulated during the anchoring process.
- 2 Replace the front-panel on the cabinet-hinges and insert the hinge-pins to secure it.
- 3 Replace the cabinet-door on the cabinet-hinges and insert the hinge-pins to secure it.

Connecting Power and Devices

This section describes connecting power and devices to the Elite-RS panel.

Standby-Batteries

Perform the installation only after calculations have been completed for selecting a suitable battery size. Battery standby-hours are dependant on battery capacity and loading of the FACP system.

*Reference Section 5, “Maintenance and Repair for replacement requirements for the standby-batteries”.
FM Approval requires secondary power to provide a minimum of 90 hours of standby operation followed by a minimum of 10 minutes of alarm operation.*


The Elite-RS Panel accepts battery sizes up to 18AH. Batteries larger than 18AH may be mounted remotely in a UL-listed Battery Cabinet. Batteries smaller than 18 AH do not require special cabinet-mounting considerations. Reference Appendix B, “Equipment List” for UL-listed battery cabinets. The power supply can charge batteries up to 50 AH. Install two 12 VDC, 50 AH batteries in a battery cabinet listed for use by UL 864.

Batteries that are 18AH require special mounting considerations when installing them in the base of the cabinet. Flanges located at the lower and middle-section of the cabinet prevent battery mounting directly at the cabinet-base. Lift the standby-batteries into the cabinet above the flanges and then lower them onto the cabinet-base.

To install standby-batteries:


- 1 Place two 12 VDC batteries in the base of the Elite-RS cabinet that conform to the battery capacity values determined from Appendix C, Calculations.
- 2 Wire the batteries in series using kit K1514-00.
- 3 Remove the battery-terminal-connector from the terminal-socket on the Elite-RS Panel.
- 4 Orient the terminal-connector with the screw-heads facing up.

Figure 3-10
Orienting the AC Terminal-Connector

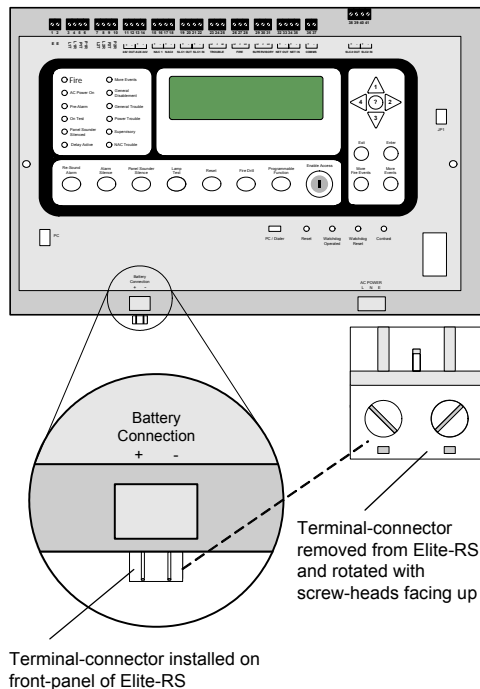

- 5 Connect wires from the standby-batteries to the battery-terminal-connector.


Figure 3-11
Wiring the Terminal Connector

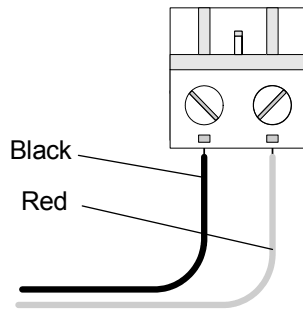

Terminal-connector above shown with screw-heads facing up.

- 6 Insert the terminal-connector in the Battery Connection port on the front-panel of the Elite-RS.

Figure 3-12
Installing the Standby-Batteries

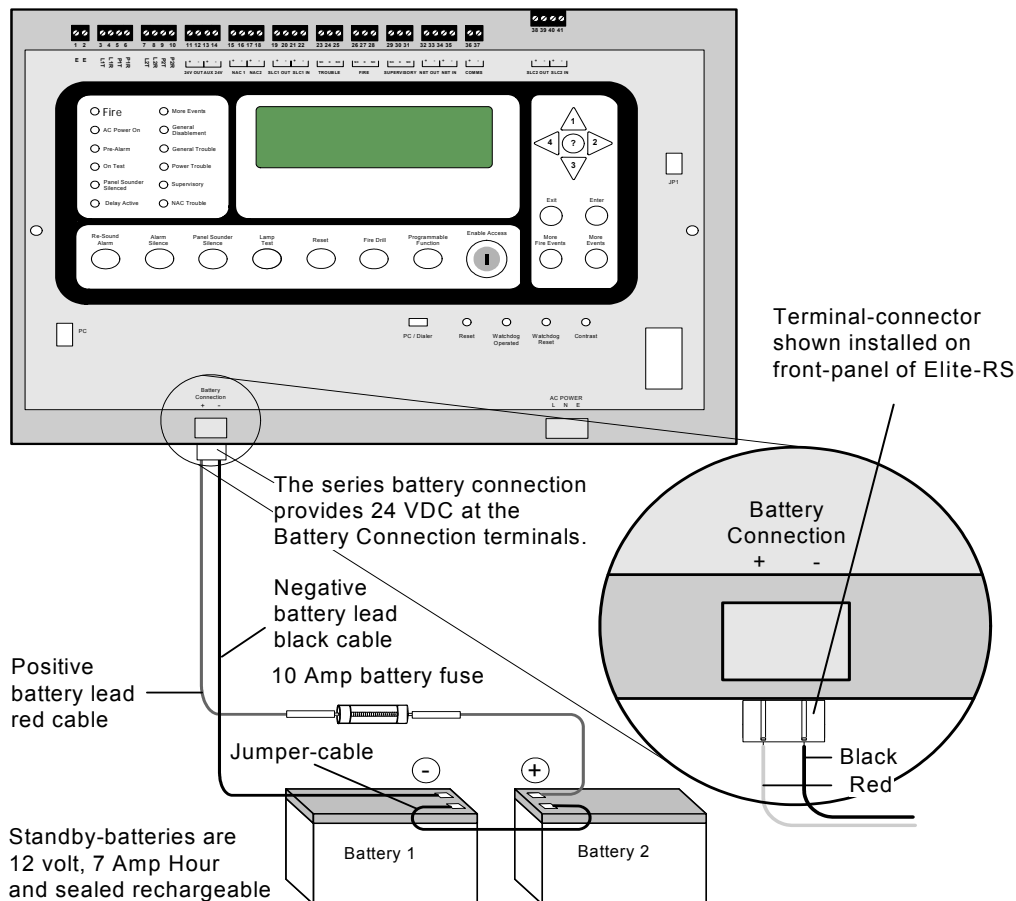

Battery Kit, K1514-00 contains battery leads, jumper and fuse assembly K1548-00. Fuse assembly K1548-00 contains 32 V @10 A fuse with red cabling.

Before Wiring and Operating

The 5.25 Amp power supply of the Elite-RS Panel provides settings for voltage inputs of 120 VAC or 240 VAC. Check these input settings prior to wiring and operating the control panel. Make certain that the power supply is set for 240 VAC before operating at 240 VAC. Failure to make this check will cause permanent damage to the power supply when the input setting is 120 VAC and applied voltage is 240 VAC.

Remove jumper J1 from the circuit-board of the power supply to provide 240 VAC operation. Connect jumper J1 to the circuit-board to provide 120 VAC operation.


WARNING!



Remove jumper J1 before operating the Elite-RS Panel at 240 VAC. Failure to remove jumper J1 before 240 VAC operation will cause severe and permanent damage to Elite-RS components.

The figure below illustrates the location of jumper J1 on the circuit-board of the Elite-RS Panel:

Figure 3-13
Circuit-Board Jumper J1

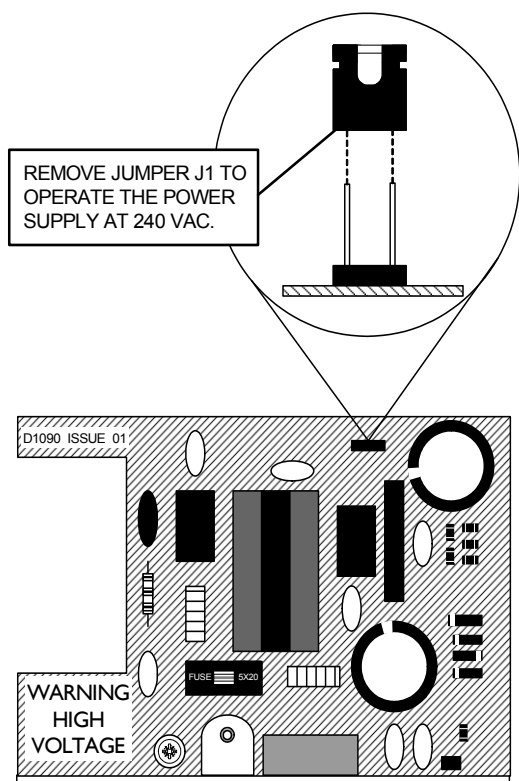

AC Wiring

Connect cabling from the power source to the terminal-connector for AC Power. The AC Power terminal-connector is located on the bottom-right of the Elite-RS Panel.


Protect source connections to the AC Power terminal-connector with a 20 Amp fuse. Complete cabling to the AC Power terminal-connector using three insulated wires that are black, white and green.

Reference Appendix A, Specifications for the wire-gage requirements of these connections.

To wire the terminal-connector:

- 1 Remove the terminal-connector from the AC Power connection of the Elite-RS.
- 2 Orient the terminal-connector with the screw-heads facing up.


Figure 3-14
Orienting the AC Terminal-Connector

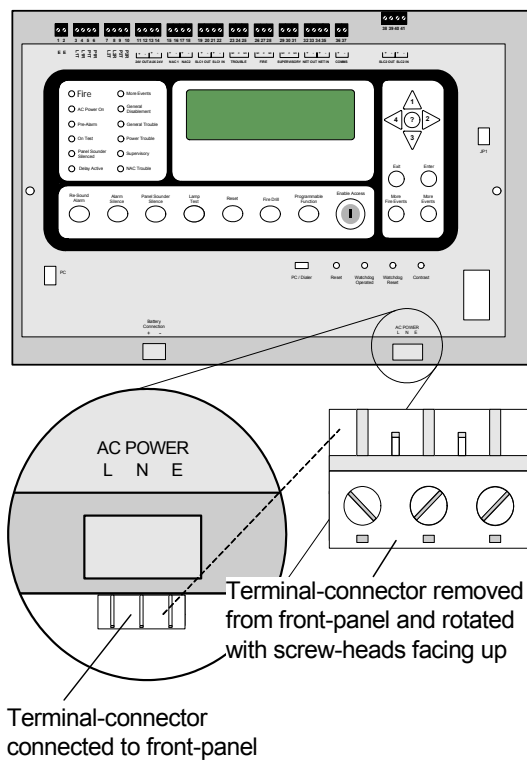

- 3 Cut 3 feet of black wire and strip 1/4" of insulation from one end.
- 4 Insert the stripped end of the black-wire in the left-side of the connector.
- 5 Tighten the left-screw so that the black-wire is secure in the terminal-connector.
- 6 Cut 3 feet of white-wire and strip 1/4" of insulation from one end.
- 7 Insert the stripped end of the white-wire in the right-side of the connector.
- 8 Tighten the right-screw so that the white-wire is secure in the terminal-connector.
- 9 Cut 3 feet of green-wire and strip 1/4" of insulation from one end.

- 10 Connect the ground wire to the cabinet ground-stud.

Figure 3-15
Wiring the terminal-Connector

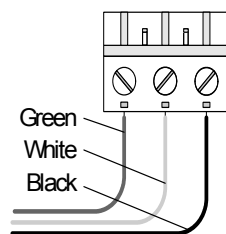

The terminal-connector is shown rotated with screw-heads facing up and is shipped pre-wired from the factory.

To complete the wiring process for AC power:

- 1 Insert the battery terminal-connector in the Battery Connection socket on the front-panel of the Elite-RS.
- 2 Insert the AC terminal-connector in the AC Power socket on the front-panel of the Elite-RS.
- 3 Connect cabling for serial data, TELCO and DC power.
- 4 Connect initiating devices, notification appliances and signalling circuits.
- 5 Test the installation following these connections. *Reference "Testing the Installation" in this section.*

Connecting Communication

The Elite-RS Panel provides options for TELCO and eNet communication.

Reference the eNet Interface Installation Manual, Man-1204 for eNet connections and features.

The NFPA requires that two dedicated and independent TELCO lines feed communication features such as the Integrated Dialer.

TELCO Communication

The Integrated Dialer is incorporated on the Main Board of the Elite-RS Panel and is provided on certain models to provide TELCO communication.

Reference Appendix B, Equipment List for Elite-RS Panel models supporting the Integrated Dialer.

Reference Appendix A, Specifications for wire gages acceptable for these terminal block connections.

Reference Figure 3-16 on the following page for these connections.

Connections For TELCO Line 1

To complete connections for TELCO line 1 connections:


- 1 Connect the tip-wire of the phone-line to terminal P1T.
- 2 Connect the ring-wire of the phone-line to terminal P1R.
- 3 Connect the tip-wire of the Elite-RS-line to terminal L1T.
- 4 Connect the ring-wire of the Elite-RS-line to terminal L1R.

Connections For TELCO 2

To complete connections for TELCO line 2 connections, duplicate the TELCO wiring of line 1 for line 2.

The figure below illustrates connections to the Integrated Dialer for TELCO line 1 and line 2:

Figure 3-16
Integrated Dialer Connections

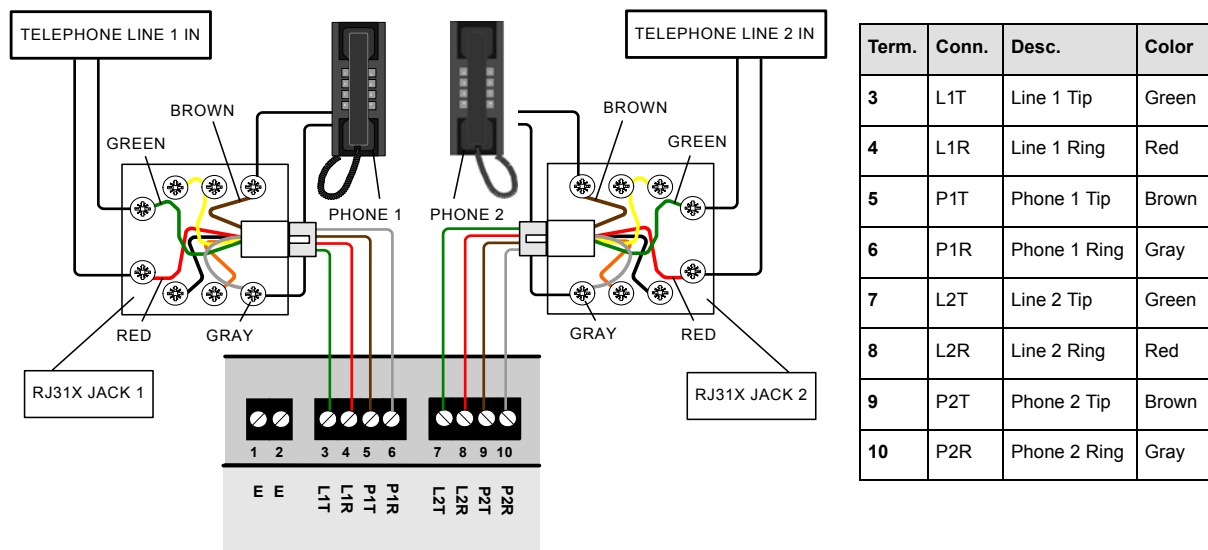

Connecting Class A Loops

The Elite-RS Panel provides Class A loop connections at SLC 1 terminals 19 through 22. Install Loop Expansion Module, K1054-00 to provide a second Class A loop at SLC 2 terminals 38 through 41.

Terminate unused loops of the Elite-RS Panel with zero-ohm shorting-jumpers. Connect zero-ohm shorting-jumpers on the Elite-RS Panel from OUT (-) to IN (-) and OUT (+) to IN (+). The Elite-RS Panel provides a trouble signal when unused loops are not terminated. SLC loops of the Elite-RS Panel are supervised.

SLC loops must be wired with Short Circuit Isolator Modules to comply with NFPA 72, Class A Style 7. Short Circuit Isolator Modules protect SLC loop devices from single-loop-shorts.

During an SLC loop short-circuit:

- The closest Short Circuit Isolator Modules to the short-circuit activate and respond by lighting their LED.
- Devices between the Short Circuit Isolator Modules are isolated and inoperative.
- Other devices on the SLC loop remain operational.
- The Elite-RS Panel indicates a trouble condition.

To install Class A, Style 6 and Style 7 SLC loops:

- Do not use T-taps on Class A SLC loops.
T-taps are not permitted for use on Class A SLC loops.
- Do not permit outgoing loops and return-side loops to share the same conduit or cable.
Feed outgoing and return-side loops separately.
- Refer to NFPA 72 for additional Class A requirements.

NFPA 72, Style 7

Connect wiring in compliance with NFPA 72, Class A, Style 7 requirements. For Class A, style 7 compliance, each device must be wired in a Closed Nipple with two surrounding Short Circuit Isolator Modules. The two Short Circuit Isolator Modules and the addressable device are enclosed individually or are shared in a common enclosure. If they are enclosed individually, the individual enclosures must be joined by “closed-nippling”.


When using Class A, Style 7 wiring, the Short Circuit Isolator Module must be installed before and after each addressable device on the SLC loop. Conduit must enclose wiring of the first and last Short Circuit Isolator Module on the SLC loop.

Isolator Modules shall be connected less than five feet from loop-terminal-connections of the Elite-RS Panel to maintain compliance with Class A, Style 7 requirements. Closed Nipple devices share a common enclosure and include single housings or raceways.

Common Enclosure

The figure below illustrates the “common enclosure” type of Closed Nipple connection containing two short circuit isolator modules and a sensor:

Figure 3-17
Common Enclosure

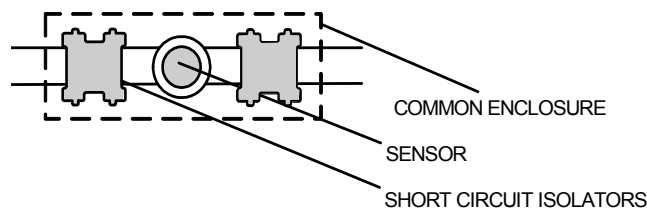


Reference manufacturer specifications for Short Circuit Isolator Module and Sensor connections.

Individual Enclosures

SLC loop connections must include closed nippling and conduit nippling to maintain compliance with individual enclosures under NFPA 72, Class A, Style 7 requirements. Closed nippling encloses individual devices on SLC loops and conduit nippling encloses wiring between these individual enclosures.

The figure below illustrates the use of closed nippling and conduit nippling on an SLC loop of the Elite-RS Panel:


Figure 3-18
Individual Enclosure

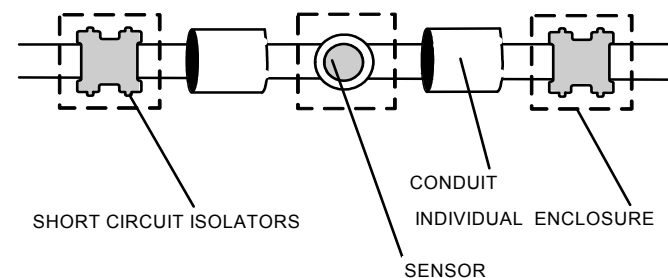

Reference manufacturer specifications for Short Circuit Isolator Module and Sensor connections.

The figure below illustrates a Class A, Style 7 wiring example using three closed nipple enclosures on SLC Loop 1:

Figure 3-19
Class A, Style 7 Wiring Example

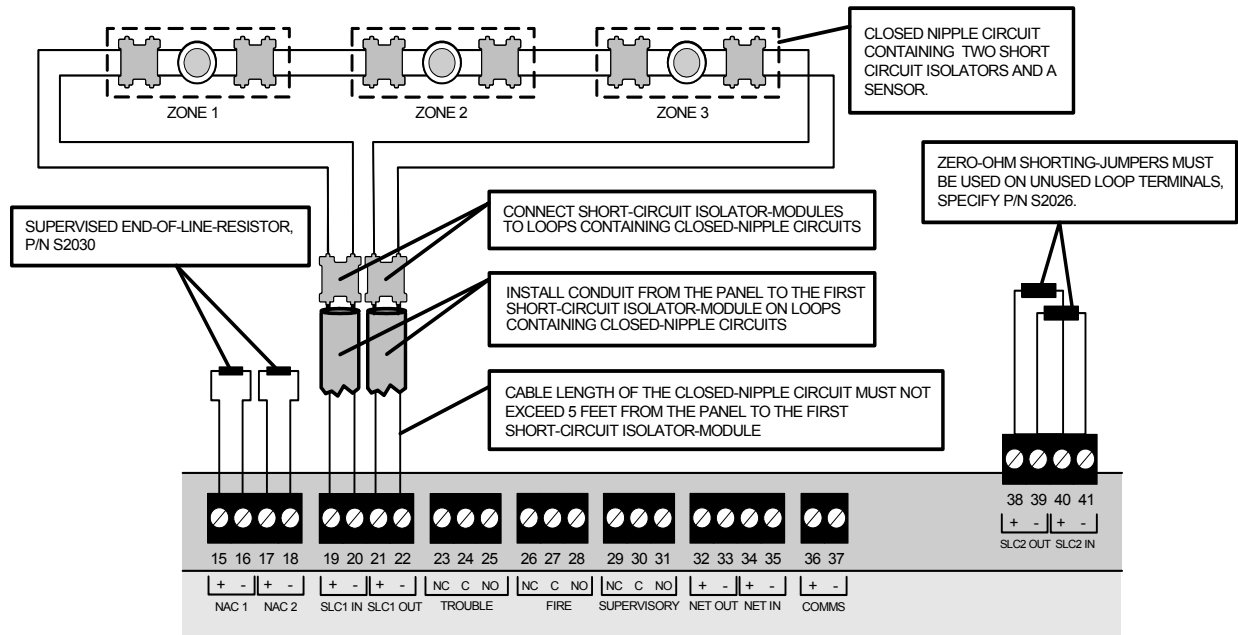

Reference manufacturer specifications for Short Circuit Isolator Module and Sensor connections.

Connect Short Circuit Isolator Modules less than five feet from the loop terminals of the Elite-RS Panel to maintain compliance with Class A, style 7 requirements.

NFPA 72, Style 6

For Class A, Style 6 compliance, the Short Circuit Isolator Modules may be located at strategic locations based on the discretion of the designer or installer.


Connecting Class B Loops

The Elite-RS Panel provides Class B loop connections at SLC 1 terminals 19 through 22. Install Loop Expansion Module, K1054-00 to provide a second Class B loop at SLC 2 terminals 38 through 41.

Terminate used and unused SLC loops with zero-ohm shorting-jumpers. Connect zero-ohm shorting-jumpers from OUT (-) to IN (-) and OUT (+) to IN (+). The Elite-RS Panel provides a trouble signal when unused loops are not terminated. SLC loops of the Elite-RS Panel are supervised.

The figure below illustrates Class B, Style 4 connections on SLC 1 of the Elite-RS Panel:

Figure 3-20
Class B, Style 4 Connections

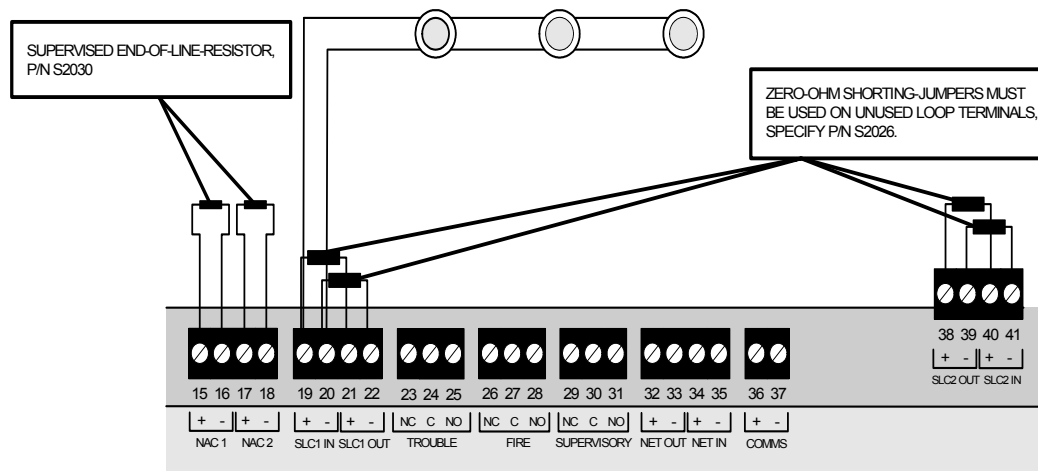

Reference manufacturer specifications for Short Circuit Isolator Module and Sensor connections. The Loop termination jumpers shown are provided in Resistor Kit (8) Zero Ohm. End Of Line Resistors (EOLRs) are used on Class B and not used on Class A, style 6 or 7 SLC loops.

Installing SLC Devices

This section describes installation requirements and constraints for SLC devices on the Elite-RS Panel. The SLC devices described in this section include detectors, addressable notification appliances and output modules.

Detector Spacing

Install SLC detectors with spacing as specified in section 90.19 of UL 864, 9th edition where units employing the multiple detector operation shall include guidelines for installing a minimum of two detectors in each protected space and to reduce the detector installation spacing to 0.7 times the linear spacing in accordance with National Fire Alarm Code, NFPA 72. Also reference 55.3.1 and 55.3.2 of UL 864, 9th edition for these detector spacing requirements.

Output Modules Controlling Notification Appliances

Not more than one notification zone shall be affected by a fault condition when installing output modules on SLC loops for controlling notification appliances. Install devices on an SLC loop of the Elite-RS Panel containing one of the following methods to meet this requirement:

- Perform an SLC loop installation that does not contain output devices.
- Perform an SLC loop installation where output devices are in one zone.
- Perform a Class A, Style 7 SLC loop installation where output devices are in different zones.
- Perform a Class A SLC loop installation with output devices in separate zones, short-circuit-isolators on SLC Loops and output devices on SLC loops with separate notification zones.

Reference “Connecting Class A Loops” for example-circuits containing these features.

Section 51.4.3 of UL 864, 9th edition specifies that a single break, single ground, or wire-to-wire fault on the installation conductors of a signaling line circuit for use with addressable notification appliances or modules shall not effect operation of more than one notification zone.

Silencing Notification Appliances

Notification Appliance (NA) silencing on the Elite-RS Panel meets exception 1, item 33.3.4. of UL 864, 9th edition. Individual NA zones can be re-sounded by addressable loops on the Elite-RS Panel after receiving the global silence command for multiple NA zones.

Exception 1 states, “When a system is intended to provide signaling service to two or more physically separated buildings or zones, re-energizing of the notification appliance circuits only on a zone basis meets the intent of the requirement.”

NAC Synchronization

NAC 1 and 2 outputs on the Elite-RS Panel can be connected for dual-output synchronization. These NAC outputs cannot be utilized for cross-panel synchronization.

Synchronized device connections on multiple Elite-RS Panels require special conditions when installing audible and visual Notification Appliances:

| | |
|------------------------|--|
| Audible Devices | The installation of synchronized-audible notification appliances on one control panel shall not be installed in hearing range of another control panel operating synchronized-audible notification appliances. <i>NAC outputs on the Elite-RS Panel are synchronized however these outputs cannot be synchronized with other control panels operating synchronized-audible notification appliances.</i> |
| Visual Devices | The installation of synchronized-visual notification appliances on one control panel shall not be installed in the line-of-sight of another control panel operating synchronized-visual notification appliances. <i>NAC outputs on the Elite-RS Panel are synchronized however these outputs cannot be synchronized with other control panels operating synchronized-visual notification appliances.</i> |

Connecting NAC Devices

Connect NAC devices to terminals 15 and 16 of NAC channels 1 or terminals 17 and 18 of NAC channel 2. NAC channels 1 and 2 can be operated simultaneously provided current loading on each output is within Elite-RS specifications. NAC channels 1 and 2 are supervised.


Reference Appendix A, “Specifications” for operating limits of these NAC outputs.

To install Notification Appliance Circuits (NACs) on the Elite-RS Panel:

- 1 Connect Notification Appliances and End-Of-Line-Devices to the NAC channel.
- 2 Connect End-Of-Line- to unused NAC channels.
- 3 Maintain the limit for maximum wire length of the circuit.

The figure below illustrates an example of Class B, Style Y Notification Appliances on NAC 1.

Figure 3-21
Connecting NAC Devices

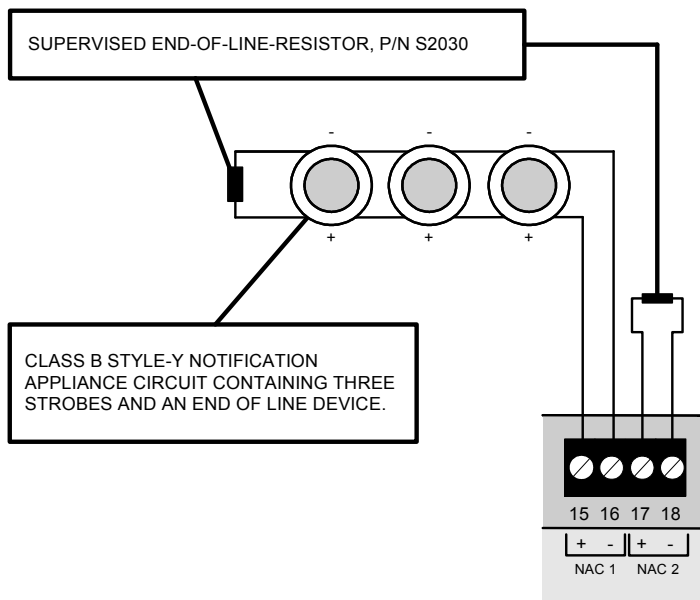

Connecting Auxiliary 24 VDC

The 24 V OUT and AUX 24 V power-source can be used to operate expansion-boards or low-current auxiliary-devices. Devices connected to these terminals must not draw current in excess of 360 mA on each of these outputs. Connect circuits to terminals 11 and 12 for the 24 V OUT power-source. Connect circuits to terminals 13 and 14 for the AUX 24 V power-source.

Provide cabling connections to these outputs using wire with a 3 volt maximum line loss.

Maintain these connections using the wire gages defined in Appendix A, Specifications.

Reference Appendix B, "Equipment List" for the list of devices authorized for these outputs.

Relay Contacts


Configurable dry Form C relays are located on the Elite-RS Panel for providing contact-actuation. The relays can be operated from default parameters or configured for specific functions in Loop Explorer.

Relay contacts of the Elite-RS Panel include:

- | | |
|--------------------|--|
| Trouble | The default operation of this relay is set to perform a Trouble output. Configurable settings are provided for Delay, Alarm Silence, Zone and Location Text. Default settings for these attributes are disabled from operating. |
| Fire | The default operation of this relay is set to perform a General Alarm and Emergency output. Configurable settings are provided for Delay, Alarm Silence, Zone and Location Text. Default settings for these attributes are disabled from operating. |
| Supervisory | The default operation of this relay is set to perform a Supervisory Alarm output and the Alarm Silence button is enabled for operating. Configurable settings are provided for Delay, Zone and Location Text. Default settings for these attributes are disabled from operating. |

The figure below illustrates an example circuit using the normally-open contacts of the trouble relay:

Figure 3-22
Trouble Relay Example

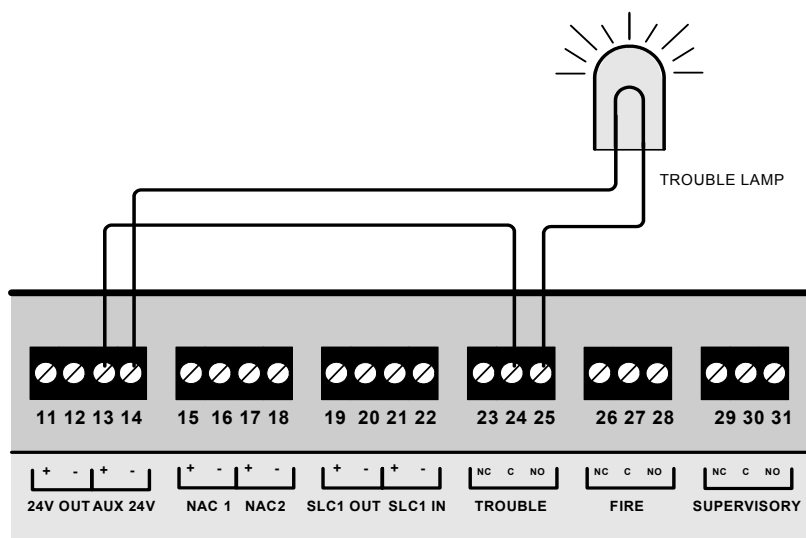


The adjacent figure illustrates a trouble-condition caused by the absence of end-of-line resistors and end-of-line-devices on terminals of the Elite-RS Panel.

Installing Municipal Boxes

The figure below illustrates typical municipal box connections of the Elite-RS Panel:

Figure 3-23
Municipal Box Connections

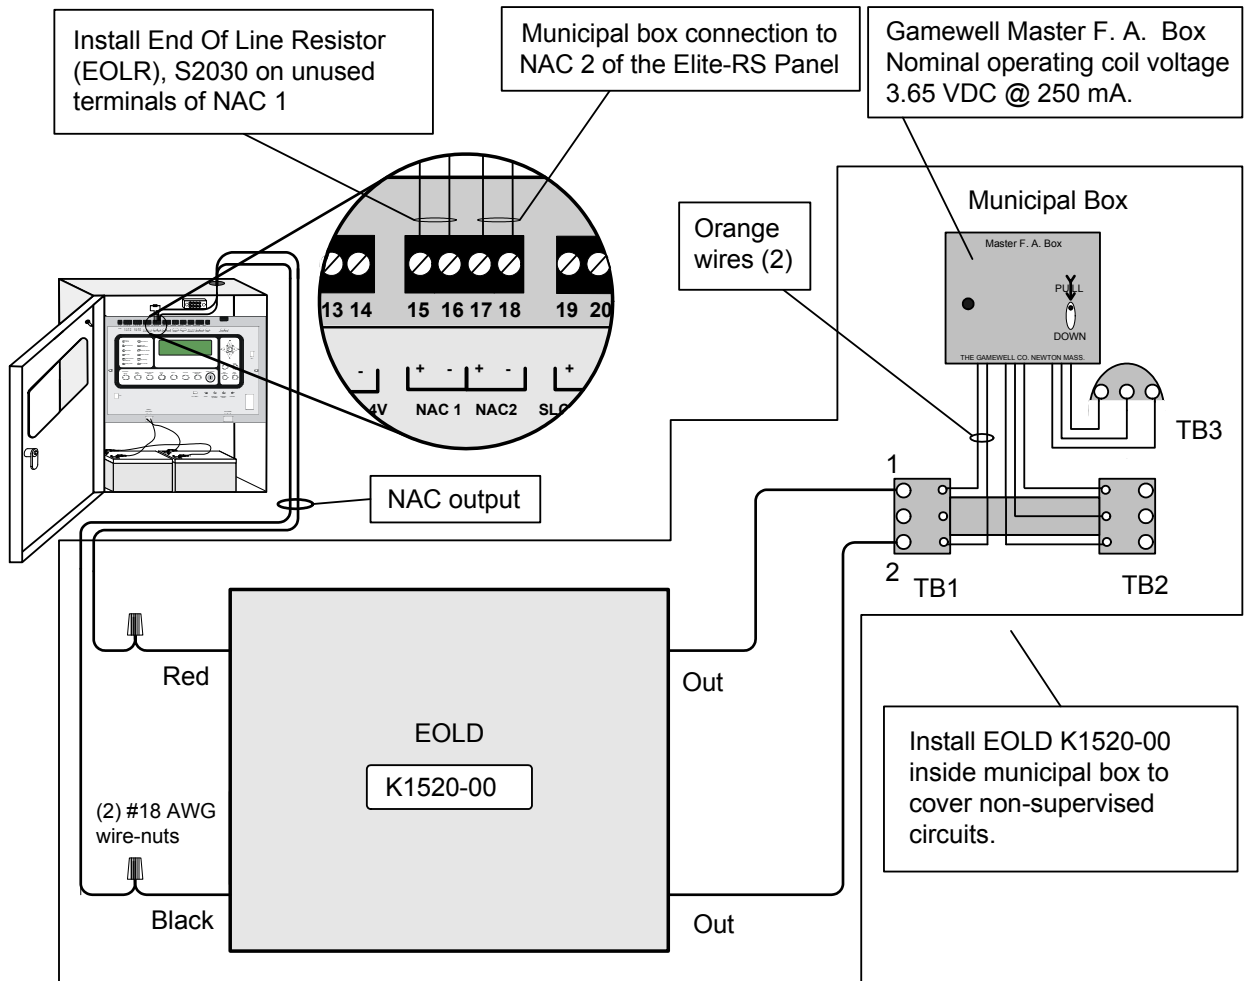

Perform this installation to connect the Gamewell Master F. A. Box for municipal-station notification.
Install this product in accordance with NFPA 72, NEC 70, the National Electrical Code and all local codes.
 Each NAC output provides a regulated 24 VDC, 1.6A maximum output when a fire condition is reported to the Elite-RS Panel.

Terminate all connections using three 18 AWG wire-nuts. The maximum wire-length between the Elite-RS and the EOLD must not exceed 847 feet of 18 AWG wire. The “Out” leads of the EOLD shall connect directly to the terminal block of the municipal box.

Testing the Installation

Perform the following before testing the Elite-RS Panel:

- 1 Connect loops, sounder circuits, inputs and outputs to the control panel.
- 2 Confirm that correct connections exist between the batteries and the power supply.
- 3 Apply AC power to the Elite-RS Panel.
- 4 Verify that the panel display illuminates.
- 5 Perform an AUTO LEARN and confirm that the Front-Panel Menu does not contain errors.

AUTO LEARN is a feature of the Elite-RS Panel for testing the health of external devices and connections. Operate AUTO LEARN through Access Level 3 of the front-panel menu. External devices receive default configuration settings during the AUTO LEARN sequence and circuit connections are tested for opens, shorts and ground fault conditions.

CAUTION!



The Elite-RS Panel buzzer may activate following AUTO LEARN. Buzzer activation indicates that an installation error condition exists. Disable the buzzer after determining the cause of the alarm and then rectify the installation problem.

- 6 Test the Elite-RS Panel lamps.


Confirming a Successful Installation

The Elite-RS Panel installation is successful when it completes the following sequence of front-panel displays:


- 1 Panel Initialization Tests internal hardware and firmware responsible for operating loop devices.
- 2 Loop Initialization Configures the Elite-RS Panel to existing loop conditions.
- 3 Normal-Standby Displays the Normal Standby after a successful boot process.

The front-panel displays shown are intended for reference only.

Panel initialization

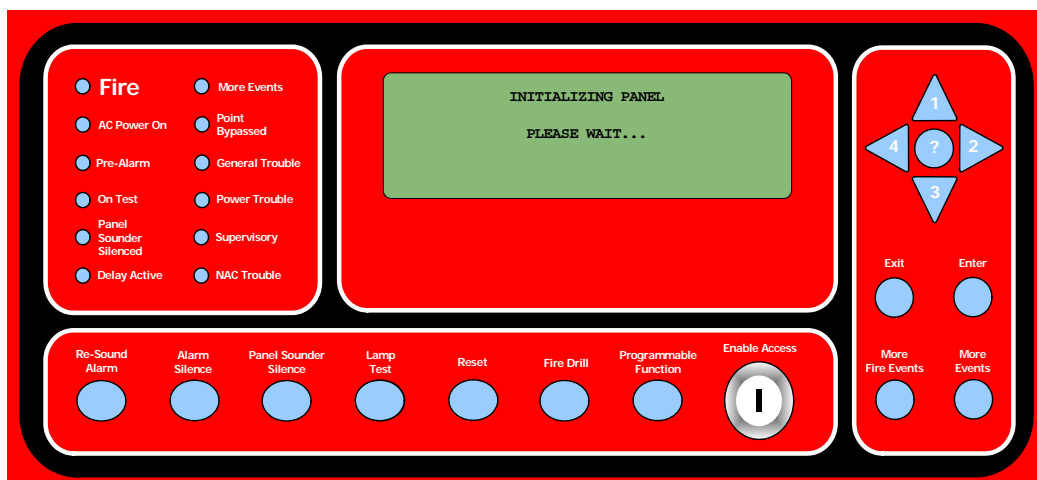

Loop initialization

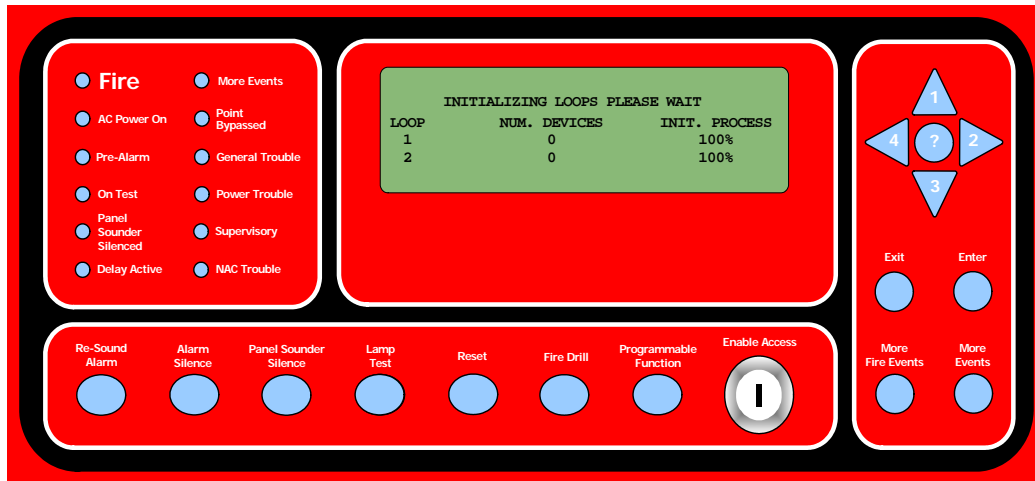


Normal-Standby



Initializations performed during the booting process are complete when the Normal Standby condition displays. The Normal Standby condition indicates that the Elite-RS Panel is operating properly and that the installation was successful.

Testing the Panel Lamps

- 1 Press the lamp test button to light the front-panel lamps.

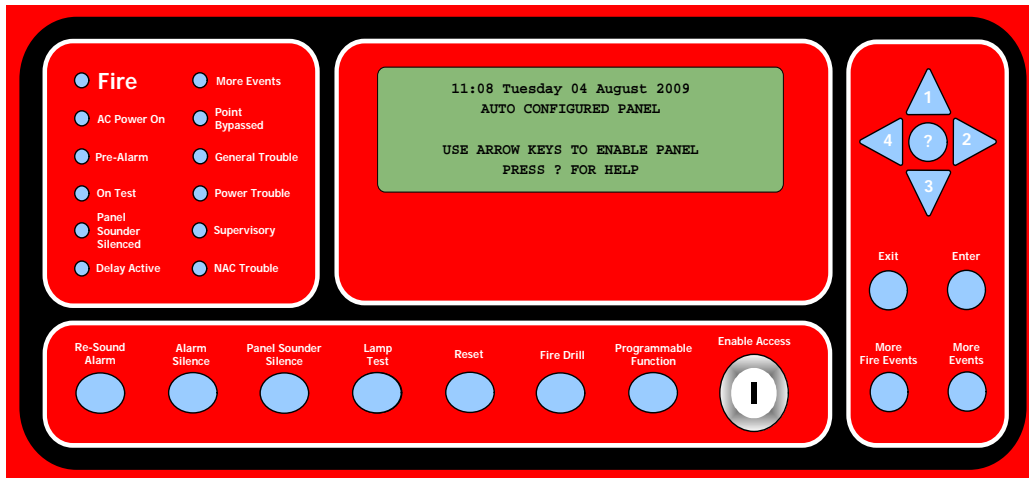

- 2 Verify that all front-panel lamps are lit.

Contact the help desk if front-panel lamps do not light.

Reference Section 2, "Overview" for a description of Lamp Test operation.

Trouble-Silence Test

This test checks the silencing operation of the Elite-RS Panel during a trouble condition.

To perform the Trouble-Silence Test:

- 1 Confirm that the Elite-RS Panel is in the Normal-Standby mode before performing this test. The Normal-Standby mode is shown below:

```
11:08 Tuesday 04 August 2009
  AUTO CONFIGURED PANEL

USE ARROW KEYS TO ENABLE PANEL
PRESS ? FOR HELP
```

The first line of the message format contains the time, day and date.

The second line of the format contains a default or user defined message.

- 2 Press any numeric arrow-button on the right-control-panel or turn the enable key-switch to the right to display "SET ACCESS LEVEL 2 MENU" on the LCD.
- 3 Provide Access Level 2 authorization and then press Enter on the right-control-panel.

4 Remove the black-lead from the negative terminal of the standby-battery in the Elite-RS Panel.

The following conditions occur on the front-panel of the Elite-RS Panel:

- The General Trouble LED flashes yellow.
- The Power Trouble LED flashes yellow.
- The internal sounder annunciates.
- The LCD display provides the following message to identify this condition:

```
ALM=000  TBL=0002  SUP=000  OOS=000  REL=00
          * TROUBLE *
NODE=1  PANEL NAME
Low battery voltage
More Events
```

In the example display above the trouble condition is identified by * TROUBLE * and "TBL=0002". TBL=0002 indicates that two trouble conditions exist. The first trouble condition, "Low battery voltage" is displayed above. The second trouble condition, "battery disconnected" is displayed in the MORE EVENTS menu.

5 Identify the second trouble condition on the Elite-RS Panel.

To display the second trouble condition on the Elite-RS Panel:

- 1 Press More Events on the front-panel of the Elite-RS.
- 2 Press 3 on the central-key-pad to scroll down to "MORE TROUBLE".
- 3 Press 2 on the central-key-pad to display "battery disconnected".

```
MORE TROUBLE 001/002
          * TROUBLE *
NODE=1  PANEL NAME
Battery disconnected
Use UP/DOWN arrow keys to scroll events
```

6 Silence the sounder on the Elite-RS Panel.

Press the Panel Sounder Silence button on the front-panel to silence the internal alarm of the Elite-RS Panel.

The following conditions occur on the front-panel of the Elite-RS Panel:

- The General Trouble LED flashes yellow.
- The Power Trouble LED flashes yellow.
- The internal sounder does not annunciate.
- The LCD display provides the following message to identify this condition:

```
ALM=000  TBL=0002  SUP=000  OOS=000  REL=00
          * TROUBLE *
NODE=1  PANEL NAME
Low battery voltage
More Events
```

- 7 Re-connect the black-lead to the negative terminal of the standby-battery in the Elite-RS Panel.

The LCD display provides the following message to identify the return to the normal-standby condition:

```
11:08 Tuesday 04 August 2009
      AUTO CONFIGURED PANEL
```

```
USE ARROW KEYS TO ENABLE PANEL
      PRESS ? FOR HELP
```

Troubleshooting

This section describes how to troubleshoot using the Front-Panel Menu of the Elite-RS Panel.

Perform troubleshooting techniques on the Elite-RS Panel when messages on the front-panel are not consistent with those described in “Confirming a Successful Installation”.

Options on the Front-Panel Menu include:

| | |
|-----------------------|--|
| Test Zones | Tests zones 1 to 500 including local NACs, panel outputs and loop outputs. |
| Event Log | Provides event log view function as well as an event log clear function. |
| Loop Data Test | Tests devices connected to Elite-RS Panel loops. |

Test Zones

The TEST ZONES menu tests NAC, panel and loop outputs. Options for this menu feature are described below:

| | | |
|---------------------|---------------|---|
| Test Zones | Default = 1 | Sets the test for zones 1 to 500. |
| Local NACs | Default = On | Tests Elite-RS Panel NACs. Audible and visual notification circuits activate for 3-second durations during this test. |
| Loop Outputs | Default = Off | Tests loop driven outputs other than the loop sounders. |

Refer to Section 4, “Front-Panel Menu” for more information about Test Zones.

Test Zones reverts to the MAIN MENU after 25 seconds when there is no navigation activity on the front-panel display.

To troubleshoot using the TEST ZONES menu feature:

- 1 Press 3 on the upper-control-pad to display the SET ACCESS LEVEL 2 MENU.

```
SET ACCESS LEVEL 2 MENU
Enter Access Level 2 Password
Use numbered arrow keys
*****
Access will automatically expire after
120 seconds if no key is pressed.
ENTER TO PROCEED - EXIT TO QUIT
```

- 2 Type the five digit code in the password field and press Enter.
The default password is 22222.

- 3 Press 3 on the upper-control-pad to display the MAIN MENU.

```
MAIN MENU - V07.0007A
>DISABLEMENTS
VIEW DeviceS
TEST ZONES
SET SYSTEM TIME
SENSOR MAINTENANCE EARLY WARNING
ACCESS LEVEL 3
```

- 4 Press 3 on the upper-control-pad to navigate down to TEST ZONES.

```
MAIN MENU - V07.0007A
DISABLEMENTS
VIEW DeviceS
>TEST ZONES
SET SYSTEM TIME
SENSOR MAINTENANCE EARLY WARNING
ACCESS LEVEL 3
```

- 5 Press 2 on the upper-control-pad to select TEST ZONES.

```
TEST ZONES MENU
>TEST ZONE: 01 - (NORMAL)
Use Up/Down arrow keys to select.
Press > to proceed. Press < to go back.
```

- 6 Press 1 on the upper-control-pad to select a TEST ZONE from 1 to 500.

- 7 Press 2 on the upper-control-pad to select the TEST ZONE option for LOCAL NAC: - ON.

```
TEST ZONE: 1

>LOCAL NAC: - ON

Use Up/Down arrow keys to select.
Press > to proceed. Press < to go back.
```

- 8 Press 1 on the upper-control-pad to set LOCAL NAC: - OFF.

- 9 Press 2 on the upper-control-pad to select the TEST ZONE option for PANEL OUTPUTS: -OFF.

```
TEST ZONE: 1

>PANEL OUTPUTS: - OFF

Use Up/Down arrow keys to select.
Press > to proceed. Press < to go back.
```

- 10 Press 1 on the upper-control-pad to set PANEL OUTPUTS: - ON.

- 11 Press 2 on the upper-control-pad to select the TEST ZONE option for Loop OUTPUTS: - OFF.

```
TEST ZONE: 1

>Loop OUTPUTS: - OFF

Use Up/Down arrow keys to select.
Press > to proceed. Press < to go back.
```

- 12 Press 1 on the upper-control-pad to set Loop OUTPUTS: - ON.

- 13 Press 2 on the upper-control-pad to display the test mode for the TEST ZONE:

```
START TEST MODE ?
TEST ZONE: 1
Test Mode will expire after 15 minutes if zone is idle.
Press ENTER to start Test Mode.
Press EXIT to quit.
Press < to go back.
```

- 14 Press ENTER on the upper-control-pad to begin the test or press EXIT to quit.
Test mode runs for 15 minutes.

During the test:

- The "On Test" LED illuminates continuously
- The More events LED illuminates continuously
- The General Trouble LED blinks.
- The internal buzzer sounds intermittently

The front-panel display provides the following message:

```
ZONES IN Alarm=000 TRBL=0001 DISAB=0000
* TROUBLE *
NODE=1 AUTOLEARN
Test mode
More Events
```

- 15 Press ENTER (again) to cancel the test.

Event Log

All FACP system activities are displayed in the event log. Operators of the Elite-RS Panel can use the event log to trouble-shoot system problems or confirm conditions such as Fire Drills.

Refer to Section 4, “Front-Panel Menu” for more information about Event Log.

Displaying the Event Log

To display the Event Log:

- 1 Press 3 on the upper-control-pad to display the SET ACCESS LEVEL 2 MENU.

```
SET ACCESS LEVEL 2 MENU
Enter Access Level 2 Password
Use numbered arrow keys
*****
Access will automatically expire after
120 seconds if no key is pressed.
ENTER TO PROCEED - EXIT TO QUIT
```

- 2 Type the five digit code in the password field and press Enter.
The default password is 22222.
- 3 Press 3 on the upper-control-pad to display the MAIN MENU.

```
MAIN MENU - V07.0007A
>DISABLEMENTS
VIEW DeviceS
TEST ZONES
SET SYSTEM TIME
SENSOR MAINTENANCE EARLY WARNING
ACCESS LEVEL 3
```

- 4 Press 1 on the upper-control-pad to navigate to ACCESS LEVEL 3.

```
MAIN MENU - V07.0007A
DISABLEMENTS
VIEW DeviceS
TEST ZONES
SET SYSTEM TIME
SENSOR MAINTENANCE EARLY WARNING
>ACCESS LEVEL 3
```

- 5 Press 2 on the upper-control-pad to display the SET ACCESS LEVEL 3 MENU:

```
SET ACCESS LEVEL 3 MENU
Enter Access Level 3 Password
Use numbered arrow keys
*****
ENTER TO PROCEED - EXIT TO QUIT
```

- 6 Type the five digit code in the password field and press Enter.
The default password is 33333.

```
ACCESS LEVEL 3 MENU
>EDIT CONFIGURATION
  SET TIMES
  VIEW PRINT EVENT LOG
  PRINT CONFIGURATION
  SYSTEM DISABLEMENTS
  Loop DATA TEST
```

- 7 Press 3 on the upper-control-pad and navigate to EVENT LOG.

```
ACCESS LEVEL 3 MENU
EDIT CONFIGURATION
SET TIMES
>VIEW PRINT EVENT LOG
  PRINT CONFIGURATION
  SYSTEM DISABLEMENTS
  Loop DATA TEST
```

- 8 Press 2 on the upper-control-pad to display the VIEW/CLEAR EVENT LOG MENU.

```
VIEW/CLEAR EVENT LOG MENU
>View Event Log
  Print Event Log
  Clear Event Log
  View Archived Event Log
  Clear Archived Event Log
```

- 9 Press 2 on the upper-control-pad to display the View Event Log.

```
SELECT EVENT TYPES TO VIEW
>FIRE- 0
  PRE-Alarm- 1
  TROUBLE- 0
  DISABLEMENT- 0
  OTHER EVENTS- 0
  ALL EVENTS- 0
```

- 10 Press 3 on the upper-control-pad to scroll down the list of event types.
- 11 Press 2 on the upper-control-pad to display the event type.
Event logs are not displayed when events are shown with zeros in "SELECT EVENT TYPES TO VIEW". An example of a pre-alarm condition is shown below:

```
VIEW PRE-Alarm EVENTS 001/016
    *PRE-Alarm: HEAT SENSOR ZONE 02 *
ADR=011.00 Loop=2 ND=1 AUTOLEARN
TIME 10:35 02/18/2004
Pre-Alarm
Use UP/DOWN arrow keys to scroll events
```

- 12 Press 4 on the upper-control-pad to go back or press Exit to quit.

Clearing the Event Log

The Clear Event Log feature removes the event log from Elite-RS Panel memory.

To clear the event log:

- 1 Press 3 on the upper-control-pad to display the SET ACCESS LEVEL 2 MENU.

```
SET ACCESS LEVEL 2 MENU
Enter Access Level 2 Password
Use numbered arrow keys
*****
Access will automatically expire after
120 seconds if no key is pressed.
ENTER TO PROCEED - EXIT TO QUIT
```

- 2 Type the five digit code in the password field and press Enter.
The default password is 22222.
- 3 Press 3 on the upper-control-pad to display the MAIN MENU.

```
MAIN MENU - V07.0007A
>DISABLEMENTS
VIEW DeviceS
TEST ZONES
SET SYSTEM TIME
SENSOR MAINTENANCE EARLY WARNING
ACCESS LEVEL 3
```

- 4 Press 1 on the upper-control-pad to navigate to ACCESS LEVEL 3.

```
MAIN MENU - V07.0007A
DISABLEMENTS
VIEW DeviceS
TEST ZONES
SET SYSTEM TIME
SENSOR MAINTENANCE EARLY WARNING
>ACCESS LEVEL 3
```

- 5 Press 2 on the upper-control-pad to display the SET ACCESS LEVEL 3 MENU:

```
SET ACCESS LEVEL 3 MENU
Enter Access Level 3 Password
Use numbered arrow keys
*****
ENTER TO PROCEED - EXIT TO QUIT
```

- 6 Type the five digit code in the password field and press Enter.
The default password is 33333.

```
ACCESS LEVEL 3 MENU
>EDIT CONFIGURATION
SET TIMES
EVENT LOG
SYSTEM DISABLEMENTS
Loop DATA TEST
```

- 7 Press 3 on the upper-control-pad and navigate to EVENT LOG.

```
ACCESS LEVEL 3 MENU
EDIT CONFIGURATION
SET TIMES
>EVENT LOG
SYSTEM DISABLEMENTS
Loop DATA TEST
```

- 8 Press 2 on the upper-control-pad to display the VIEW/CLEAR EVENT LOG MENU.

```
VIEW/CLEAR EVENT LOG MENU
>View Event Log
Clear Event Log
```

- 9 Press 3 on the upper-control-pad to scroll down to Clear Event Log.

- 10 Press 2 on the upper-control-pad to display the CLEAR EVENT LOG MENU.

```
CLEAR EVENT LOG MENU
Event Log has 1 entries
Press ENTER to clear Event Log.
Press EXIT to quit.
Press < to go back.
```

- 11 Press ENTER to clear the Event log.

```
CLEAR EVENT LOG MENU
Event Log has 0 entries
Press ENTER to clear Event Log.
Press EXIT to quit.
Press < to go back.
```

- 12 Press EXIT to quit or press 4 to go back.

Loop Data Test

The Loop Data Test feature tests loop devices connected on the Elite-RS Panel. Refer to Section 4, “Front-Panel Menu” for more information about the Loop Data Test feature.

To perform the Loop Data Test:

- 1 Press 3 on the upper-control-pad to display the SET ACCESS LEVEL 2 MENU.

```
SET ACCESS LEVEL 2 MENU
Enter Access Level 2 Password
Use numbered arrow keys
*****
Access will automatically expire after
120 seconds if no key is pressed.
ENTER TO PROCEED - EXIT TO QUIT
```

- 2 Type the five digit code in the password field and press Enter.
The default password is 22222.
- 3 Press 3 on the upper-control-pad to display the MAIN MENU.

```
MAIN MENU - V07.0007A
>DISABLEMENTS
VIEW DeviceS
TEST ZONES
SET SYSTEM TIME
SENSOR MAINTENANCE EARLY WARNING
ACCESS LEVEL 3
```

- 4 Press 1 on the upper-control-pad to navigate to ACCESS LEVEL 3.

```
MAIN MENU - V07.0007A
DISABLEMENTS
VIEW DeviceS
TEST ZONES
SET SYSTEM TIME
SENSOR MAINTENANCE EARLY WARNING
>ACCESS LEVEL 3
```

- 5 Press 2 on the upper-control-pad to display the SET ACCESS LEVEL 3 MENU:

```
SET ACCESS LEVEL 3 MENU
Enter Access Level 3 Password
Use numbered arrow keys
****
ENTER TO PROCEED - EXIT TO QUIT
```

- 6 Type the five digit code in the password field and press Enter.
The default password is 33333.

```
ACCESS LEVEL 3 MENU
>EDIT CONFIGURATION
SET TIMES
EVENT LOG
SYSTEM DISABLEMENTS
Loop DATA TEST
```

- 7 Press 1 on the upper-control-pad scroll up to Loop DATA TEST.

```
ACCESS LEVEL 3 MENU
EDIT CONFIGURATION
SET TIMES
EVENT LOG
SYSTEM DISABLEMENTS
>Loop DATA TEST
```

- 8 Press 2 on the upper-control-pad to display the Loop DATA TEST.

```
Loop DATA TEST
>SELECT Loop 1
SET TIMES
```

- 9 Press 2 on the upper-control-pad to START TEST.

```
Loop DATA TEST
>START TEST
```


- 10 Press 2 on the upper-control-pad to begin the test .

```
Loop DATA TEST ( Loop: 1)
Start Date : 12/10/2009 10:37:00
Good Readings: 0100800
Bad Readings: 0000000
Current Date: 12/10/2009 10:58:13
```

The test example above indicates that the loop test was started 12/10/2009 at 10:37. It also reveals that over one-hundred-thousand test readings have been recorded since the beginning of the test.

- 11 Press 4 on the upper-control-pad to back out of the Loop DATA TEST screen.

```
Loop DATA TEST
>VIEW DATA
CANCEL TEST
```

- 12 Press 3 on the upper-control-pad to scroll down to CANCEL TEST.

- 13 Press 2 on the upper-control-pad to display the window for stopping the test.

```
Loop DATA TEST
PLEASE PRESS ENTER TO STOP TEST
```

- 14 Press ENTER to cancel the loop test.

```
Loop DATA TEST
>SELECT Loop 1
```

- 15 Press EXIT to return to the main menu.

```
11:12 Thursday December 10 2009
AUTO CONFIGURED PANEL

USE ARROW KEYS TO ENABLE PANEL
PRESS ? FOR HELP
```

This page intentionally left blank.

Section 4

Front-Panel Menu

This section describes the operation of the Front-Panel Menu on the Elite-RS Panel. Navigate the menu using the upper-control-pad of the Elite-RS Panel. The Elite-RS Panel provides navigation of the Front-Panel Menu for Access Level 2 and Access Level 3. Access Level 2 controls front-panel-buttons and menu settings. Access Level 3 controls Elite-RS Panel system settings.

To operate the Front-Panel Menu of the Elite-RS Panel:

- 1 Confirm that the display of the Front-Panel Menu does not contain errors after performing AUTO LEARN.
AUTO LEARN is a feature of the Elite-RS Panel for testing the health of external devices and connections. Operate AUTO LEARN through Access Level 3 of the front-panel menu. External devices receive default configuration settings during the AUTO LEARN sequence and circuit connections are tested for opens, shorts and ground fault conditions.
Reference "Section 3, Troubleshooting" if error messages are displayed on the front-panel following the AUTO LEARN process.
- 2 Press 3 on the upper-control-pad to display the SET ACCESS LEVEL 2 MENU.
- 3 Type the five digit code in the password field and press Enter.
The default password is 22222.
- 4 Press 3 on the upper-control-pad to display the MAIN MENU.
- 5 Press 3 on the upper-control-pad to navigate to LOCAL MENU.
- 6 Press 2 on the upper-control-pad to select LOCAL MENU and display MAIN MENU.
- 7 Press 1 on the upper-control-pad to navigate to ACCESS LEVEL 3.
- 8 Press 2 on the upper-control-pad to select ACCESS LEVEL 3 and display SET ACCESS LEVEL 3 MENU.
- 9 Type the five digit code in the password field and press Enter.
The default password is 33333.
- 10 Press 1 to navigate to ACCESS LEVEL 3 MENU.

The Front-Panel Menu display returns to the Main Menu when navigation activity stops for more than 25 seconds.

Access Level 2

Access Level 2 provides functions for:

- Disablements
- View Devices
- Test Zones
- Set System Time
- Sensor Maintenance Early Warning
- Access Level 3

```
MAIN MENU - V07.0007A
>DISABLEMENTS
VIEW DeviceS
TEST ZONES
SET SYSTEM TIME
SENSOR MAINTENANCE EARLY WARNING
ACCESS LEVEL 3
```

Disablements

The Disablements Menu provides an option for viewing and restoring disabled features as well as setting timed or un-timed disablements for loops, zones, addresses, audible devices and panel I/O:

```
DISABLEMENTS MENU
>DISABLE Loops
DISABLE ZONES
DISABLE ADDRESSES
DISABLE AUDIBLE DeviceS
DISABLE PANEL I/O
VIEW & RESTORE DISABLED FEATURES
```

The timed function provides a disablement-duration of 30 minutes to 24 hours and stops the disablement when the duration-time expires. The un-timed function provides an infinite disablement that stops when “cleared” on the menu.

Disable Loops

The DISABLE Loops function disables loop-devices from reporting fire signals to the Elite-RS Panel. This function does not disable loop-devices from reporting trouble and supervisory signals to the Elite-RS Panel.

CAUTION!



The DISABLE Loops function does not isolate the Elite-RS Panel from SLC connections. Disconnect SLC connections to the Elite-RS Panel when troubleshooting or when performing wiring changes.

Disable Zones

All detection devices, including manual pull stations, are disabled in the selected zone.

When a device is disabled, the Elite-RS Panel ignores the analog value reported by the device. All other faults for the device such as missing device, double address, internal fault, type changed and bad data are still reported by the Elite-RS Panel.

Disable Addresses

Any loop device can be disabled using this menu option. Sub-addresses may be individually disabled when using devices with more than one input or output.

When a device is disabled, the Elite-RS Panel ignores the analog value reported by the device. All other faults for the device such as missing device, double address, internal fault, type changed and bad data are still reported by the Elite-RS Panel.

Disable Audible Devices

This menu option disables all audible device outputs connected to the control panel. An audible device output is defined as any output that has been set to respond to Silence and Evacuate panel commands. Audible device outputs may be directly wired to NAC 1 and NAC 2 or loop driven devices.

The NAC Trouble indicator will be illuminated, as well as the Point Bypassed Indicator.

Disable Panel I/O

This menu option disables or enables panel input and output functions. Timed disabling can be set to occur between 30 minutes to 24 hours. Un-timed disabling can be set to occur indefinitely.

Panel Inputs

| | | |
|---------------------|-------------------|---|
| Programmable | Default = Enabled | Disables or enables the front-panel Programmable Function button. |
| Fire Drill | Default = Enabled | Disables or enables the front-panel Fire Drill button. |

Panel Outputs

| | | |
|--------------|-------------------|---|
| NAC 1 | Default = Enabled | Disables or enables NAC 1 on Terminal X1 of the Main Board. To set these parameters using the Elite-RS Panel Front-Panel Menu: 1 Select ACCESS LEVEL 2 2 Select ACCESS LEVEL 3 3 Select EDIT CONFIGURATION 4 Select EDIT PANEL I/O 5 Select EDIT PANEL OUTPUTS 6 Scroll through the options for NAC CIRCUIT 1 |
| NAC 2 | Default = Enabled | Disables or enables NAC 2 on Terminal X1 of the Main Board. To set these parameters using the Elite-RS Panel Front-Panel Menu: 1 Select ACCESS LEVEL 2 2 Select ACCESS LEVEL 3 3 Select EDIT CONFIGURATION 4 Select EDIT PANEL I/O 5 Select EDIT PANEL OUTPUTS 6 Scroll through the options for NAC CIRCUIT 2 |

View & Restore Disabled Features

To cancel disablements, scroll through the menu options and toggle disablements to the normal condition. Another way to cancel disablements is to use the View / Restore Disablements option to scroll through active disablements and individually enable each disablement by pressing the Enter button.

View Devices

This menu option is used by experienced personnel to investigate system status and may help in fault finding.

The View Devices option displays addresses connected to each detection circuit. For each address & sub-address, the LCD status display provides the device type, zone and location text.

Analog devices are displayed in the menu with indicators representing the connected device. Digital input devices such as the points of manual pull stations and switch monitor units are displayed as Normal or Activated. Output devices are displayed as either Off, Intermittent or Continuous.

Status conditions are displayed in the Devices By Loop or View Devices By Zone area of the menu.

Test Zones

Each zone may be individually put into a Test Mode condition.

Test Zone (1 – 500)

When test mode is selected, devices in the zone may be tested and the Elite-RS Panel will automatically reset after 3 seconds. When a zone is put into test mode, the user is prompted to select a number of test mode options. These options are retained for each zone, but may be changed at any time.

Local NAC On – Off (Default = On)

When set to the ON position, all NAC outputs will sound for the duration of the fire event. The NACs will be silenced when the panel automatically resets.

NAC devices may not activate within the three second fire period on systems operating high numbers of loop-powered NAC devices. Loop confirmation of these NAC devices may be intermittent under these conditions.

Loop Outputs On – Off (Default = Off)

When selected in the ON position, all loop driven outputs other than the loop NAC outputs will operate in accordance with their standard configuration.

Start Test Mode?

Initiate zone testing using this screen after setting parameters in Test Zone (1 – 500), Local NAC On – Off, Panel Outputs On – Off and Loop Outputs On – Off.

The screen display is:

```
Test Mode will expire after 15 minutes
if zone is idle.
Press ENTER to start Test Mode.
Press EXIT to quit.
Press < to go back,
```

A 15 minute timer begins decrementing when a zone is set in test mode. The test will automatically stop after the timer stops. The timer automatically resets to 15 minutes whenever a device is activated in the zone test.

Include Pull Stations Yes – No (Default = No)

When selected to the ON position, all manual pull stations will also be included in the Test Mode for the zone. The normal use of this facility is to set the Include Pull Stations to No and test all smoke detection devices in the zone. At this stage, all manual pull stations will still operate and will take the panel out of test mode. When all devices in the zone have been tested, then the zone is put into test, including manual pull stations.

All manual pull stations can then be tested and will operate the test mode when a zone (or zones) has been set to test mode, then a 15 minute timer is started. This timer will decrement and after 15 minutes the zone will be automatically taken out of test mode. Whenever a device is activated in the zone in test, the timer will automatically be reset to 15 minutes.

Set System Time

This menu option sets the panel date and time. Set the system time to log events in the event log.

Control panel changes performed in 2010 provide automatic compensation for daylight saving time.

Sensor Maintenance Early Warning

This option provides contamination status for Loop 1 and 2.

Events and Status

This section describes events and the status of the front-panel display while operating the Elite-RS Panel. The following events are described:

- Fire Event
- Trouble Event
- Pre Alarm Event

Fire Event

In the event of a fire, the red FIRE lamp and the appropriate Fire Zone indicator flash (if connected). Details of the fire activation (address and location text) display on the front-panel.

Fire warning NACs sound throughout the building and the panel fire relay contact energizes. The panel buzzer pulses, but can be silenced by pressing the Silence Buzzer button.

To silence fire NACs, press any of the menu navigation buttons and enter the Access 2 password then press the Enter button. Panel controls will be enabled and will remain enabled for one minute after pressing the last key. Pressing the Alarm Silence button will silence the NACs. The NACs can be started again by pressing the Re-Sound Alarm button. The system can be reset by pressing the Reset button.

Press the More Events button on the front-panel to display the status of more than two fire events.

The maximum Fire event delay setting shall be less than 10 seconds.

Trouble Event

If there is a fault on the system, the yellow General Trouble indicator will flash and there may be other fault LED indications which identify the nature of the fault. The Fault Contact and Fault Routing outputs will energize and the panel buzzer will sound continuously.

Details of the fault will be provided on the front-panel display. The panel buzzer can be silenced at any time by pressing the Silence Buzzer button.

Press the More Events button on the front-panel to display the status of more than two fire events.

The maximum Trouble event delay setting shall be less than 120 seconds.

Pre-alarm Event

Sensors or inputs can generate a pre-alarm. A pre-alarm is used to warn of a slow change in the analog level of detection devices. A smoldering fire can be an example of a condition that can cause a pre alarm event. When a pre-alarm is generated, the control panel will illuminate the pre-alarm LED and will sound the internal buzzer continuously. The address and location of the source of the pre-alarm will be indicated in the LCD status display.

The source of the pre-alarm input should be investigated. The panel buzzer can be silenced at any time by pressing the Silence Buzzer button.

Press the More Events button on the front-panel to display the status of more than two fire events.

The maximum Pre-Alarm event delay setting shall be less than 60 seconds.

Access Level 3


Access Level 3 of the Elite-RS Panel provides menu settings for:

- Edit Configuration
- Set Times
- View Event Log
- System Disablements
- Loop Data Test

Figure 4-1 illustrates a menu map describing menu commands for navigating Access Level 3:

Figure 4-1

Access Level 3 Menu

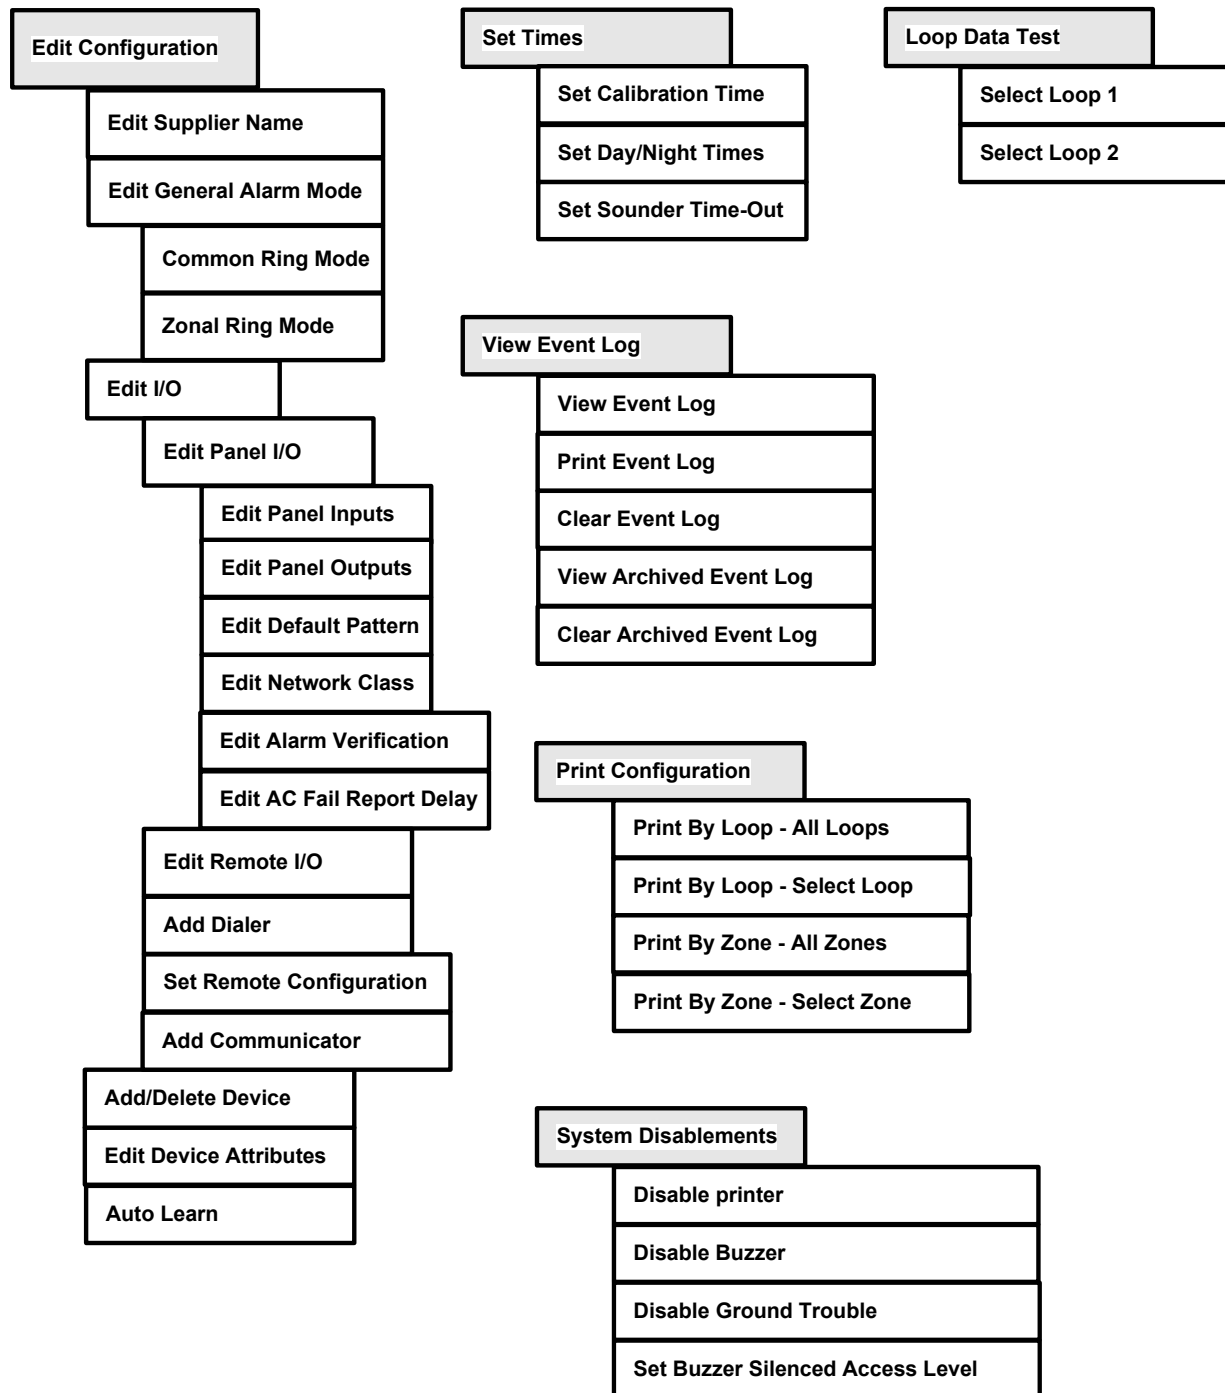

Front-Panel Controls

Access Level 2 operates the following front-panel button-controls:

- Alarm Silence
- Re-sound Alarm
- Reset
- Fire Drill
- Programmable Function

Obtain Access level 2 with the menu-password or with the Enable Access key.

Reference “Section 2, Overview” for a summary of these controls and “Appendix E, Operating Instructions” for detailed functional descriptions.

Alarm Silence

The Alarm Silence button silences the internal buzzer as well as sounders connected to the Elite-RS Panel.

CAUTION!



Pressing the Alarm Silence button silences sounders on the entire network.

Press the Panel Sounder Silence button to silence the internal buzzer without silencing sounders on the entire network.

Re-Sound Alarm

The Re-Sound Alarm button re-sounds the alarm following a silence condition initiated by the Panel Sounder Silence or Alarm Silence command.

Reset

The Reset button clears latching inputs on the control panel. Latching inputs remain active after correcting the cause of the input event. Perform a reset to clear latching inputs on the control panel caused by supervisory, trouble, pre-alarm and fire signals. Non-latching inputs do not require reset. Non-latching inputs clear after correcting the cause of the input condition.

Fire Drill

The Fire drill button initiates a fire drill on the control panel. Cancel the fire drill by pressing the Fire Drill button while in Access Level 2. The Fire Drill button can also be configured for specific functions with eSP Discovery.

Programmable Function

The Programmable Function button is disabled as a default condition, but can be configured to perform specific functions while in Access Level 3, eSP Discovery or Loop Explorer. Operate the Programmable Function button in Access Level 2 of the Elite-RS Panel menu.

Section 5

Maintenance and Repair

This section provides procedures to maintain and repair the Elite-RS Panel.

Reference Appendix B, "Equipment List" for component-part-numbers described in this section.

Maintenance

Perform the following procedures to maintain operation of the Elite-RS Panel.

Inspecting Batteries

Inspect the standby-batteries annually to determine the connection integrity to the power supply and to confirm the voltage capacity available for operating the Elite-RS Panel during power failures.

Replacing Standby-Batteries

Replace standby-batteries when the service period reaches 3 to 5 years. Specify replacement batteries that are sealed-lead-acid and that are UL recognized.

Removing the Standby-Batteries

To remove the existing standby-batteries:

- 1 Disconnect the jumper-cable connection between Battery 1 and Battery 2.
- 2 Disconnect the red-cable from the positive Terminal of Battery 1.
- 3 Disconnect the black-cable from the negative Terminal of Battery 2.
- 4 Remove Battery 1 and Battery 2 from the bottom of the Elite-RS cabinet.
- 5 Re-cycle Battery 1 and Battery 2 according to the manufacturer procedures provided in the packaging of the batteries.

Installing the Standby-Batteries


To install the replacement standby-batteries:

- 1 Place standby-batteries at the bottom of the Elite-RS Panel cabinet.
- 2 Connect the black-cable to the negative terminal of Battery 2.
- 3 Connect the red-cable to the positive terminal of Battery 1.
- 4 Connect the jumper-cable from the negative terminal of Battery 1 to the positive terminal of Battery 2.
- 5 Mark a “placed into service date” on Battery 1 and Battery 2.

Reference Section 3, Installation for more information describing the standby battery installation process.

The figure below illustrates the connection required for installing replacement standby-batteries in the Elite-RS Panel:

Figure 5-1

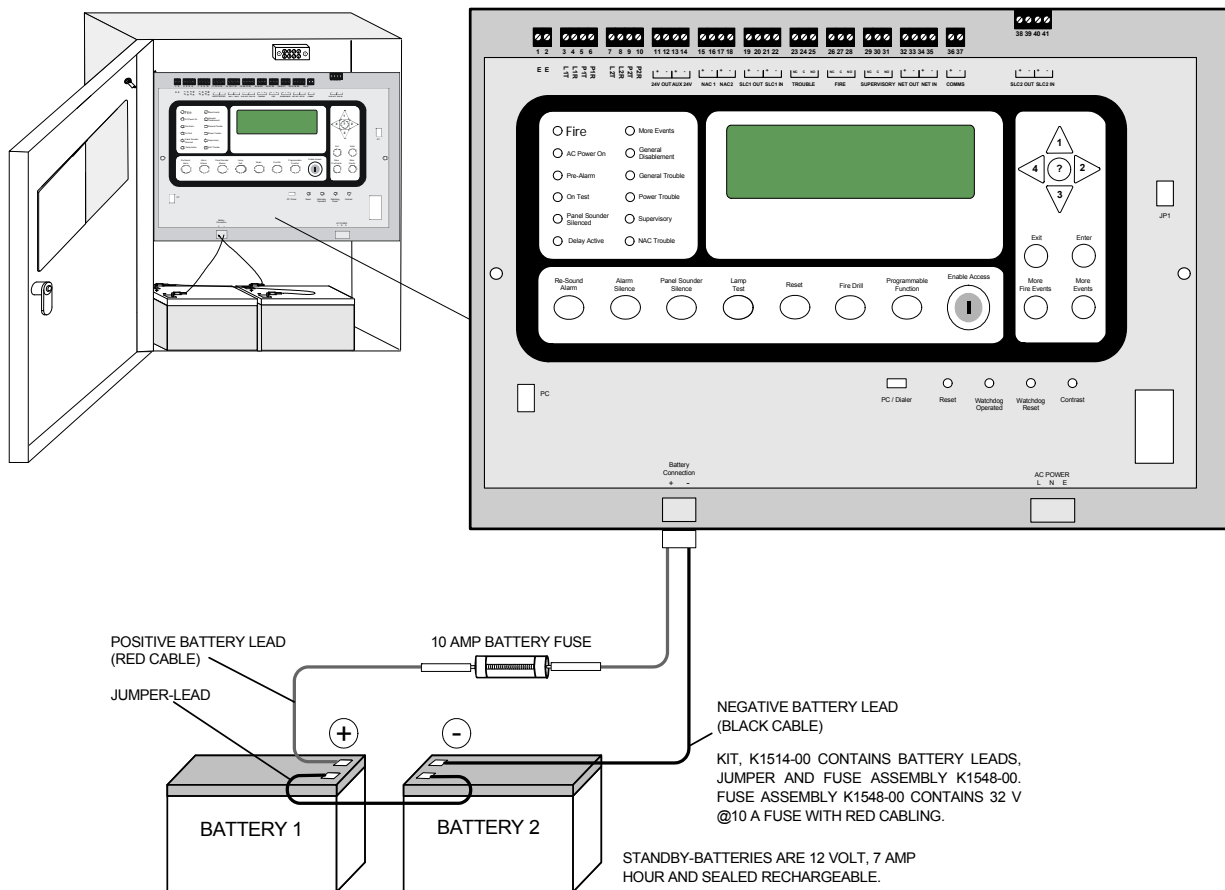

The series connection illustrated above provides the 24 volt standby voltage required by the Elite-RS Panel. Do not connect the two batteries in parallel. A parallel connection will not provide the 24 volts required for operating the Elite-RS Panel in a standby condition.

Replacing Fuses

A 10 Amp battery fuse and a 3 Amp power-supply fuse are provided to protect the Elite-RS Panel against circuit overloads. During the life of the product it may be necessary to replace one or both of the fuses to restore operation to the Elite-RS Panel.

Replace a fuse only after replacing the components responsible for causing the fuse failure. Fuse failure is not a condition caused by the fuse. Diagnose and replace components in the fuse-circuit before replacing the fuse and operating the Elite-RS Panel.

10 Amp Battery Fuse

Replace the 10 Amp battery-fuse by removing the fuse, the battery wiring and the standby-batteries.

Specify kit K1548-00 to replace the red-cable containing the 10 Amp fuse or specify battery-lead-kit K1514-00 to replace the red-cable containing the 10 Amp fuse, the jumper-cable and the black-cable.

Replace the 3 Amp Power-Supply Fuse by removing it from the housing contained on the circuit board of the power supply. Install the replacement fuse in the housing and then test the power supply to determine that it operates.

Removing the 10 Amp Battery-Fuse

To remove the fuse:

- 1 Remove the battery-connector from the Battery Connection on the front-panel of the Elite-RS.
- 2 Disconnect the jumper-cable connection between Battery 1 and Battery 2.
- 3 Disconnect the red-cable from the positive terminal of Battery 1.
- 4 Disconnect the black-cable from the negative terminal of Battery 2.
- 5 Dispose the battery-leads described in steps 1 through 3 above.

Installing the 10 Amp Battery-Fuse

To install the new 10 Amp Battery-Fuse:

- 1 Connect the jumper-lead from the negative terminal of Battery 1 to the positive terminal of Battery 2.
- 2 Connect the red-cable to the positive terminal of Battery 1.
- 3 Connect the black-lead to the negative terminal of Battery 2.
- 4 Connect the battery-connector to the Battery Connection on the front-panel of the Elite-RS.
- 5 Determine that trouble conditions are not reported by the Elite-RS Panel following the fuse replacement. This step will confirm if the installation was performed correctly.

3 Amp Power-Supply Fuse

The 3 Amp fuse located on the circuit board of the power supply. Remove this fuse and install a replacement by following the procedures described below.

Removing the Fuse

To remove the fuse:

- 1 Turn off AC power to the control panel at the source.

WARNING!




This is a high voltage circuit area. An electrical shock hazard exists in this area when the control panel is operating. Do not remove the fuse while the control panel is powered. Disconnect AC power at the source before attempting to remove the 3 Amp fuse.

- 2 Remove the AC Power terminal-connector from the connection at the lower-front of the control panel.
- 3 Locate the housing containing the 3 Amp fuse.

The figure below illustrates the location of the 3 Amp fuse on the power supply of the Main Board.

Figure 5-2

3 Amp Fuse Location

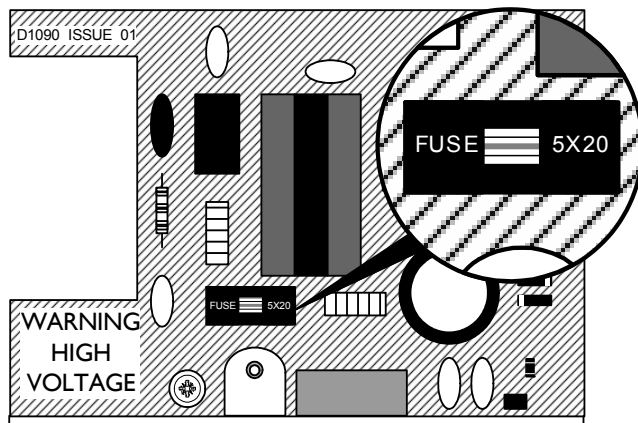

- 4 Remove the upper-half of the fuse-housing with long-nose-pliers.
- 5 Remove the fuse from the upper-half of the fuse-housing.

Installing the Replacement Fuse

To install the replacement fuse:

- 1 Insert the fuse in the upper-housing.
- 2 Center the position of the fuse in the upper-housing.
- 3 Press the upper-housing on the lower-housing until the halves snap together.
- 4 Restore AC power to the power supply.
- 5 Verify that the Elite-RS Panel completes the booting process to confirm that the Power Supply is operating correctly.


Removing Cabinet Components

Remove cabinet components of the Elite-RS to prepare for the mounting process.

To prepare the Elite-RS Panel for mounting:


- 1 Turn the key in the cabinet-door-lock to the right to unlock and open the cabinet-door of the Elite-RS.

Figure 4-3
Unlocking and Opening The Cabinet-Door

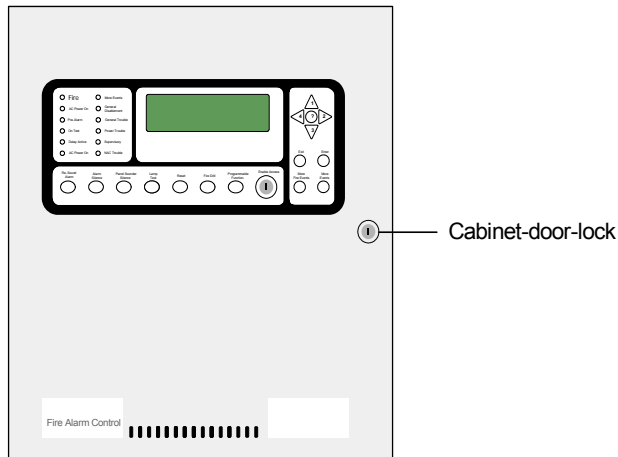

- 2 Remove the upper and lower hinge-pins to remove the cabinet-door.

Figure 4-4
Removing Upper and Lower Hinge-Pins

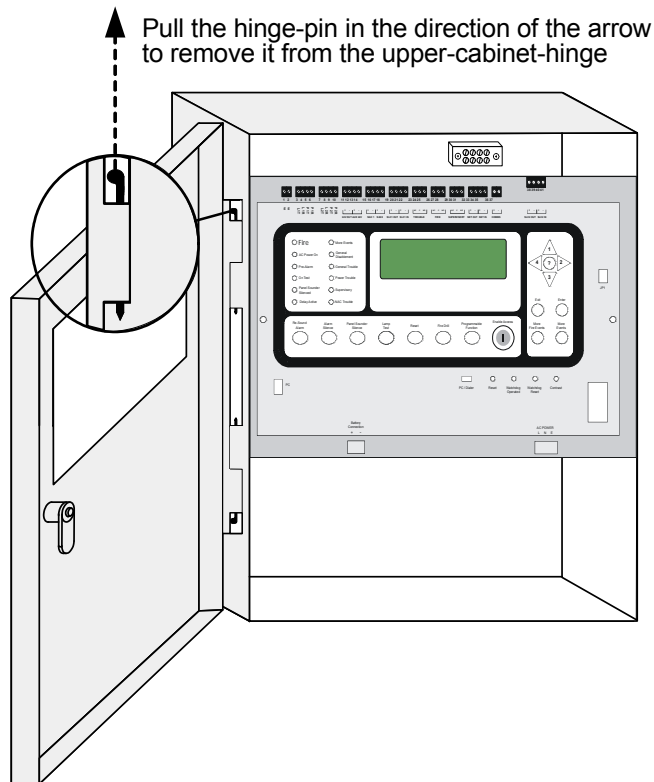


To remove hinge-pins from the cabinet:

- 1 Pull the head of the upper-hinge-pin away from the hinge-assembly using needle-nose-pliers.
- 2 Brace the top-corner of the cabinet-door to maintain alignment with the lower-hinge.
- 3 Pull the head of the lower-hinge-pin away from the hinge-assembly using needle-nose-pliers.


- 3 Remove the cabinet-door from the Elite-RS.

Figure 4-5
Removing the Cabinet-Door

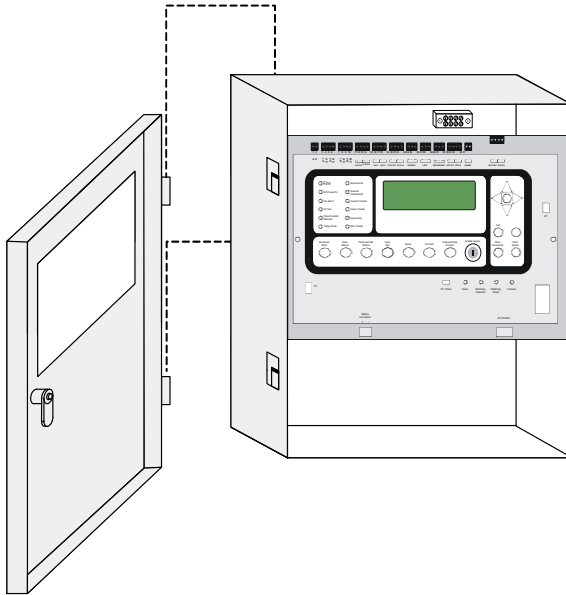


- 4 Remove the terminal-connector from the AC Power socket.

Figure 4-6
Removing the AC Power Connector

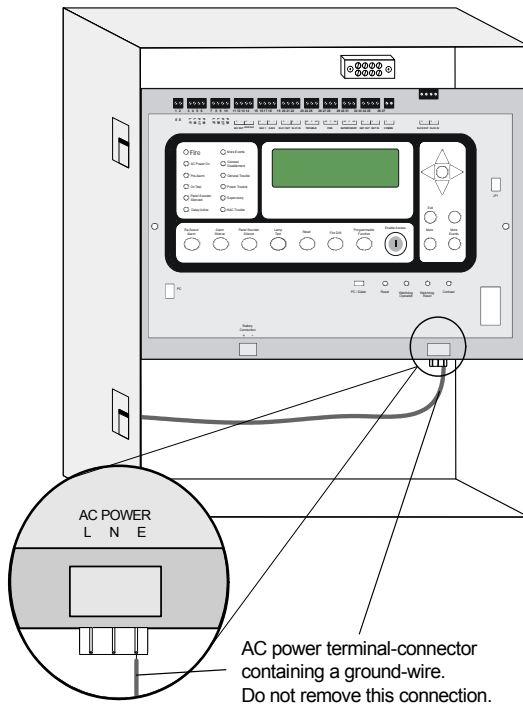


The AC power terminal-connector remains in the cabinet during the mounting process. Disconnect it from the control panel and place it on the bottom of the cabinet. Cover the terminal-connector to prevent debris from contaminating it during the mounting process.

The AC power terminal-connector contains a ground-wire that terminates on the cabinet-wall. The ground-wire is secured to the cabinet-wall with a lock-washer and nut combination. Do not remove this connection during the installation process.

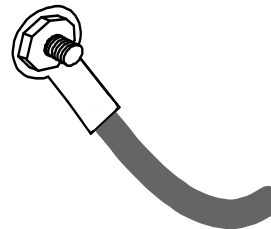


- 5 Remove the retaining screw from the front-panel of the Elite-RS cabinet.

Figure 4-7
Retaining Screw

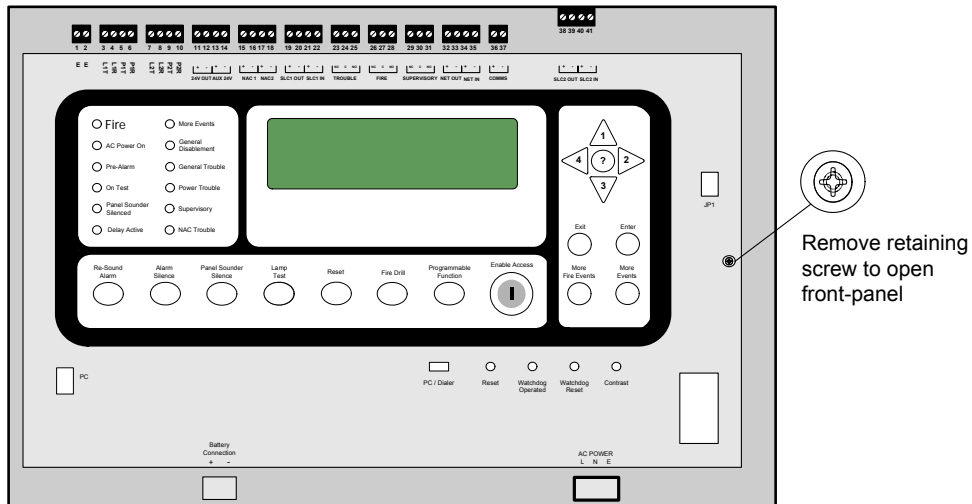

- 6 Open the front-panel of the Elite-RS cabinet.
7 Remove the hinge-pins from the front-panel.

Figure 4-8
Removing the Front-Panel

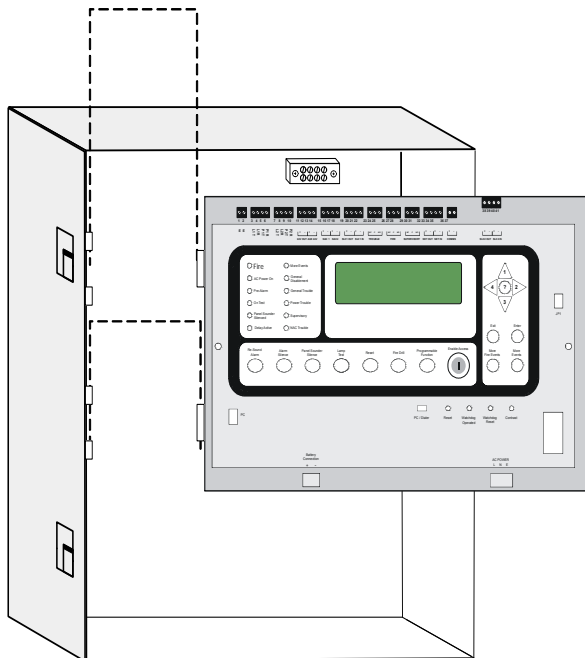

To remove hinge-pins from the front-panel:

- 1 Pull the head of the upper-hinge-pin away from the hinge-assembly using needle-nose-pliers.
- 2 Brace the top-corner of the front-panel to maintain alignment with the lower-hinge.
- 3 Pull the head of the lower-hinge-pin away from the hinge-assembly using needle-nose-pliers.
- 4 Remove the front-panel from the cabinet.

Place the front-panel button-side-down on a clean, dry and uncluttered-surface. Do not place the front-panel down on the component side.

This page intentionally left blank.

Appendix A

Specifications

This appendix provides electrical and environmental specifications for the Elite-RS Panel.

Electrical

The electrical specifications provided for Standby and Alarm Current are typical values.

Standby and Alarm Current

| Loops | Standby | Alarm (mA) | Description |
|----------|------------------|------------------|---|
| 1 | 160 mA @ 120 VAC | 220 mA @ 120 VAC | Line current for standby and alarm when battery current is less than 30 mA. |
| | 200 mA @ 24 VDC | 220 mA @ 24 VDC | Battery current for standby and alarm when a power failure condition occurs on the AC line. |
| 2 | 200 mA @ 120 VAC | 250 mA @ 120 VAC | Line current for standby and alarm when battery current is less than 30 mA. |
| | 270 mA @ 24 VDC | 290 mA @ 24 VDC | Battery current for standby and alarm when a power failure condition occurs on the AC line. |

Earth Fault Indication

A ground fault indication occurs on the Elite-RS Panel when a minimum of 30K Ohms exists between earth-ground and either DC RTN or +24 VDC of the power-supply.

SLC Ratings

| Terminal | Connection | Rating |
|-----------|----------------|-----------------|
| 19 | Loop 1 (+ IN) | 32 VDC @ 250 mA |
| 20 | Loop 1 (- IN) | |
| 21 | Loop 1 (+ OUT) | 32 VDC @ 250 mA |
| 22 | Loop 1 (- OUT) | |
| 38 | Loop 2 (+ OUT) | 32 VDC @ 250 mA |
| 39 | Loop 2 (- OUT) | |
| 40 | Loop 2 (+ IN) | 32 VDC @ 250 mA |
| 41 | Loop 2 (- IN) | |

SLC Cabling

The Elite-RS Panel requires the following wire gage and length when connecting Class A and B SLC loops:

| Wire Gage | Wire Length |
|-----------|-------------|
| 18 AWG | 1950 Feet |
| 16 AWG | 3100 Feet |
| 14 AWG | 5,000 Feet |

Programmable Relay Contacts

| Terminal | Connection | Rating |
|----------|----------------------------------|-------------|
| 23 | Trouble (NC), Not Supervised | 30 VDC @ 1A |
| 24 | Trouble (C), Not Supervised | 30 VDC @ 1A |
| 25 | Trouble (NO), Not Supervised | 30 VDC @ 1A |
| 26 | Fire (NC), Not Supervised | 30 VDC @ 1A |
| 27 | Fire (C), Not Supervised | 30 VDC @ 1A |
| 28 | Fire (NO), Not Supervised | 30 VDC @ 1A |
| 29 | Supervisory (NC), Not Supervised | 30 VDC @ 1A |
| 30 | Supervisory (C) Not Supervised | 30 VDC @ 1A |
| 31 | Supervisory (NO) Not Supervised | 30 VDC @ 1A |

NAC Outputs

| Terminal | Connection | Rating |
|----------|------------|--|
| 15 | NAC 1 (+) | Regulated: 24 VDC @ 1.6 A continuous DC or 900 mA pulsed DC Special Application: 24 VDC @ 2.3 A continuous with the combined current of NAC 1 and NAC 2 not to exceed 3.1 A |
| 16 | NAC 1 (-) | |
| 17 | NAC 2 (+) | Regulated: 24 VDC @ 1.6 A continuous DC or 900 mA pulsed DC Special Application: 24 VDC @ 2.3 A continuous with the combined current of NAC 1 and NAC 2 not to exceed 3.1 A |
| 18 | NAC 2 (-) | |

Reference Appendix B, “Equipment List” for NAC devices that are authorized for use with the Elite-RS Panel.

NAC outputs of the Elite-RS Panel can be operated in regulated or special application modes.

Regulated Outputs

NAC outputs of the Elite-RS Panel operate in a regulated mode when conforming to specific levels of continuous or pulsed DC. NAC outputs meet requirements for regulated levels when the output current does not exceed the constraints described below:

Continuous Current

Continuous DC currents cannot exceed 1.6 A from either NAC output when operating in a regulated output mode:

Regulated continuous DC output = 1.6 A_{NAC 1} + 1.6 A_{NAC 2} = 3.2 A total

Pulsed Current

Pulsed DC currents cannot exceed 900 mA from either NAC output when operating in a regulated output mode:

Regulated pulsed DC output = 900 mA_{NAC 1} + 900 mA_{NAC 2} = 1.8 A total

Synchronization

Synchronize the regulated output of NAC 1 and NAC 2 using UL listed and compatible synchronization modules. Connect End-Of-Line-Device S2030 to the output of each Synchronization Module installed.

Reference Appendix B, Equipment List for more information about NAC synchronization on the Elite-RS Panel.

Special Application Output

NAC outputs of the Elite-RS Panel operate in a special application mode when conforming to specific levels of continuous DC. NAC outputs meet requirements for special application levels when the output current does not exceed the 2.3 A of NAC 1 or NAC 2 with the combined current of NAC 1 and NAC 2 not to exceed 3.1 A.

Synchronization

The Elite-RS Panel provides internal device synchronization between the outputs of NAC 1 and NAC 2 when operating NAC devices from Gentex, Amseco, System Sensor or Wheelock.

External synchronization modules must not be used on the NAC outputs when operating in the special application mode.

Reference Appendix B, Equipment List for more information about NAC synchronization on the Elite-RS Panel.

Phone Line Connections

| Terminal | Connection | Description |
|----------|------------|--------------------|
| 3 | L1T | TELCO Line 1 Tip |
| 4 | L1R | TELCO Line 1 Ring |
| 5 | P1T | TELCO Phone 1 Tip |
| 6 | P1R | TELCO Phone 1 Ring |
| 7 | L2T | TELCO Line 2 Tip |
| 8 | L2R | TELCO Line 2 Ring |
| 9 | P2T | TELCO Phone 2 Tip |
| 10 | P2R | TELCO Phone 2 Ring |

RS485 Serial Bus

| Terminal | Connection | Rating |
|----------|------------|--------------------------|
| 36 | COMMS (+) | (+) Data 3.3 VDC @ 30 mA |
| 37 | COMMS (-) | (-) Data |

eNET Terminals

| Terminal | Connection | Rating |
|----------|-------------|--------------------------|
| 32 | NET OUT (+) | (+) Data 3.3 VDC @ 30 mA |
| 33 | NET OUT (-) | (-) Data |
| 34 | NET IN (+) | (+) Data 3.3 VDC @ 30 mA |
| 35 | NET IN (-) | (-) Data |

24 V OUT

| Terminal | Connection | Rating |
|----------|--------------|---------------------------|
| 11 | 24 V OUT (+) | Regulated 24 VDC @ 360 mA |
| 12 | 24 V OUT (-) | |

The 24 V OUT connection is a common output and provides a regulated 24 VDC output.

Auxiliary 24 VDC

| Terminal | Connection | Rating |
|----------|-------------|---------------------------|
| 13 | AUX 24V (+) | Regulated 24 VDC @ 360 mA |
| 14 | AUX 24V (-) | |

The AUX 24 VDC connection is a common output and provides a regulated 24 VDC output.

AC Line Connection

| Terminal | Description | Voltage | Current |
|----------|--------------|------------------|---------|
| L | AC line | 120 VAC, 50/60Hz | 2.1 A |
| | | 240 VAC, 50/60Hz | 1.1 A |
| N | AC neutral | | |
| G | Earth ground | | |

Power Supply

| | |
|-----------------------|---|
| Fuse | 3A, 250VAC, SLOW-BLOW, 5 x 20mm |
| Input (Supervised) | 120 or 240 VAC 50/60Hz |
| Output Voltage | 24 VDC Regulated |
| Output Current | 0 - 4 Amps |
| Charge Current | Fast charge: 1.25 A Trickle charge: 1.25 A (voltage limited) |
| Battery-Charging Type | Two 12 VDC SLA standby batteries wired in series |
| Transfer Voltage | 120 VAC transfer @ 75 VAC 240 VAC transfer @ 160 VAC |

The specifications above pertain to terminations of the standby-battery at the Battery Connection of the Elite-RS Panel.

Cabling

The following specifications identify the range of acceptable wire gages for field wiring, battery and power connections:

Field Wiring

| Designation | Terminal | Wire Range | Description |
|--------------------|---------------|-------------|---|
| E, E | 1 and 2 | 14 - 26 AWG | Earth ground |
| L1T | 3 | 14 - 26 AWG | Line 1 phone tip |
| L1R | 4 | 14 - 26 AWG | Line 1 phone ring |
| P1T | 5 | 14 - 26 AWG | Phone line 1 tip for telephone operation. Drops connection during alarm conditions to allow TELCO reporting on L1T. |
| P1R | 6 | 14 - 26 AWG | Phone line 1 ring for telephone operation. Drops connection during alarm conditions to allow TELCO monitoring on L1R. |
| L2T | 7 | 14 - 26 AWG | Line 2 phone tip |
| L2R | 8 | 14 - 26 AWG | Line 2 phone ring |
| P2T | 9 | 14 - 26 AWG | Phone line 2 tip for telephone operation. Drops connection during alarm conditions to allow TELCO reporting on L2T. |
| P2R | 10 | 14 - 26 AWG | Phone line 2 ring for telephone operation. Drops connection during alarm conditions to allow TELCO monitoring on L2R. |
| 24V OUT | 11 and 12 | 14 - 26 AWG | Terminal connections for the 24 volt output |
| AUX 24V | 13 and 14 | 14 - 26 AWG | Terminal connections for the auxiliary 24 volt output |
| NAC1 | 15 and 16 | 14 - 26 AWG | Terminal connections for the NAC 1 circuit. |
| NAC2 | 17 and 18 | 14 - 26 AWG | Terminal connections for the NAC 2 circuit. |
| SLC1 IN | 19 and 20 | 14 - 26 AWG | Terminal connections for the "IN" of SLC loop 1. |
| SLC1 OUT | 21 and 22 | 14 - 26 AWG | Terminal connections for the "OUT" of SLC loop 1. |
| TROUBLE | 23, 24 and 25 | 14 - 26 AWG | Normally closed (NC) and normally open (NO) contacts of the trouble circuit. |
| FIRE | 26, 27 and 28 | 14 - 26 AWG | Normally closed (NC) and normally open (NO) contacts of the fire circuit. |
| SUPERVISORY | 29, 30 and 31 | 14 - 26 AWG | Normally closed (NC) and normally open (NO) contacts of the supervisory circuit. |

| Designation | Terminal | Wire Range | Description |
|-----------------|-----------|-------------|---|
| NET OUT | 32 and 33 | 14 - 26 AWG | Terminals connections for the eNET "OUT" network |
| NET IN | 34 and 35 | 14 - 26 AWG | Terminals connections for the eNET "IN" network |
| COMMS | 36 and 37 | 14 - 26 AWG | Terminal connections for RS485 serial communication |
| SLC2 OUT | 38 and 39 | 14 - 26 AWG | Terminal connections for the "OUT" of SLC loop 2. |
| SLC2 IN | 40 and 41 | 14 - 26 AWG | Terminal connections for the "IN" of SLC loop 2. |

Battery and Power

| Designation | Terminal | Wire Range | Description |
|---------------------------|----------|-------------|---|
| Battery Connection | + | 12 - 24 AWG | Positive connection for the Standby-batteries |
| | - | 12 - 24 AWG | Negative connection for the Standby-batteries |
| AC Power | L | 12 - 24 AWG | Line connection |
| | N | 12 - 24 AWG | Neutral connection |
| | E | 12 - 24 AWG | Ground connection |

Cabling Construction

| | |
|-----------------------------|--|
| Material | All field wiring should be installed using fire rated cables according to the NFPA. |
| Cross Sectional Size | The cross sectional size of the SLC cables should be determined based on length and the number of devices in use. Connect SLC cabling using a minimum of 1mm cross sectional area. |

Operating Environment

| | | |
|--------------------------|--------------------------------------|---|
| Low Temperature | 32 +/- 3°F (0 +/- 2°C) | Dry indoor use only |
| High Temperature | 120 +/- 3°F (49 +/- 2°C) | Dry indoor use only |
| Relative Humidity | 93% +/- 2% @ 90 +/- 3°F (32 +/- 2°C) | This device functions in an atmosphere of relative humidity up to 93 percent, non-condensing. |

Physical Specifications

| | |
|-------------------|------------------------------|
| Dimensions | 18.50"H X 14"W X 4.25"D |
| Mounting | 0.25" Maximum screw diameter |

This page intentionally left blank.

Appendix B

Equipment List

This appendix lists models and supporting equipment of the Elite-RS Panel. *All models provided in this appendix are affected by the Contact ID restrictions described in Section 2, “Overview” and Section 3, “Installation”.*

Elite-RS Panels

The following models are provided for the Elite-RS A-Series Panel:

[illegible]

| Models | Features | Color |
|------------------|---|-------|
| VF0860-10 | 2 Loop Panel, No Communication, Loop Expansion Module | Red |
| VF0860-40 | 2 Loop Panel, No Communication, Loop Expansion Module | Gray |
| VF0865-10 | 2 Loop Panel, eNet Interface, Loop Expansion Module | Red |
| VF0865-40 | 2 Loop Panel, eNet Interface, Loop Expansion Module | Gray |
| VF0866-10 | 2 Loop Panel, Integrated Dialer, Loop Expansion Module | Red |
| VF0866-40 | 2 Loop Panel, Integrated Dialer, Loop Expansion Module | Gray |
| VF0867-10 | 2 Loop Panel, eNet Interface & Integrated Dialer, Loop Expansion Module | Red |
| VF0867-40 | 2 Loop Panel, eNet Interface & Integrated Dialer, Loop Expansion Module | Gray |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

Loop Devices and Accessories

The following A-Series loop devices and accessories are authorized for use with the Elite-RS Panel:

| Air Products Models | Loop Devices |
|---------------------|---|
| MB-SDRT-AA | Multi-Flex Sounder Base Analog Addressable |
| SL-DAA-P | 2-Wire Analog Addressable Photoelectric Duct Smoke Detector |
| SL-DA4R-P | 4-Wire Analog Addressable Photoelectric Duct Smoke Detector |
| Apollo Models | Loop Devices |
| 45681-210 | 95A Mounting Base 4" |
| 45681-211 | 95A Isolator Base-SC |
| 45681-225 | 95A Mounting Base 6" |
| 45681-234 | 95A Low Profile Relay Base 6" |
| 45681-242 | 95A Relay Base 4" |
| 45681-250 | Base 6" E-Z Fit |
| 45681-321 | 95A Base 20D Isolator |

| Apollo Models | Loop Devices |
|----------------------|---|
| 555000-750 | 95A Isolator |
| 55000-790 | 95A Dual Priority Switch Monitor Module |
| 55000-805 | 95A Switch Monitor Module |
| 55000-806 | 95A Priority Switch Monitor Module |
| 55000-820 | 95A Switch Monitor Input/Output Module. |
| 55000-825 | 95A Sounder Control Module |
| 55000-830 | 95A Mini Priority Switch Monitor Module |
| 55000-831 | 95A Mini Switch Monitor Module |
| 55000-863 | 95A Relay Output Module |
| 55000-450 | 95A Heat Detector |
| 55000-550 | Ion Smoke Detector |
| 55000-650 | Optical Smoke Detector |
| 55000-886 | Multi Sensor |
| 55000-04X | XP95A Open area Sounder |
| 45681-52X | XP95A Sounder Base |
| 58000-01X | Discovery Open Area Sounder Beacon |
| 45681-52X | Discovery Open Area Sounder Beacon Base |
| 56000-005 | Polycarbonate Manual Pull Station |
| 56000-006 | Polycarbonate Back Box |
| 58000-450 | Discovery Heat Detector |
| 58000-550 | Discovery Ionization Smoke Detector |
| 58000-650 | Discovery Photo-Electric Smoke Detector |
| 58000-651USM | Discovery Photo-Electric Smoke Detector |
| 58000-551USM | Discovery Ionization Smoke Detector |
| 58000-751USM | Discovery Multisensor Detector |
| 58000-451USM | Discovery Heat Detector |
| 55000-788USM | XP95A Isolator |
| 45681-538USM | XP95A Isolator Base |
| 45681-530USM | XP95 Mounting Base |
| 45681-532USM | XP95A Isolating Base |
| 45681-533USM | XP95 Low Power Relay Base |

| Apollo Models | Loop Devices |
|----------------------|--|
| 55000-767USM | Mini Monitor Module |
| 55000-791USM | XP95A Sounder Control Module |
| 55000-792USM | XP95A Relay Output Module |
| 55000-859 | XP95A 120 VAC Input/ Output Module |
| 58000-750 | Discovery Multi-sensor Detector |
| 55000-765 | New Mini Switch Monitor |
| 53832-070 | Mini Disc Remote Indicator |
| MS-RA | Remote Test Station for Duct Detectors – Alarm LED |
| MS-RA/R | Remote Test Station for Duct Detectors – Alarm LED w/ Reset Button |
| MS-RA/K | Remote Test Station for Duct Detectors – Alarm LED w/ Reset Key-Switch |
| 56000-001 | Manual Pull-Station, Single Action, Addressable |
| 56000-002 | Manual Pull-Station, Dual Action, Addressable |

“X” shown in the Apollo Models above denotes a variable numeric value for package color.

Replacement Parts

The following replacement parts are provided for the Elite-RS Panel:

| Models | Description |
|-----------------|---|
| K1054-00 | Loop Expansion Module |
| K1170-00 | eNet Interface |
| K1607-00 | Main Board without Integrated Dialer |
| K1609-00 | Main Board with Integrated Dialer |
| K1507-00 | Panel Key Lock Set |
| K1508-00 | Panel Bonding Strap |
| K1509-00 | Panel Grounding Block |
| K1511-00 | Panel Standoff Kit |
| K1513-00 | Panel Main AC Input Fuse |
| K1514-00 | Battery Leads & Jumper |
| Man-1200 | Elite-RS Installation Manual |
| K3534-00 | Elite-RS Door Label |
| K3535-00 | Operating Instructions |
| S2028-6 | Resistor Kit (6) 10K Ohm |
| S2028 | EOL Resistor 10K |
| S2026-8 | Resistor Kit (8) Zero Ohm |
| K1539-00 | EOLD for Synchronization Module outputs only |
| K1520-00 | EOLD for municipal boxes |
| K5450-00 | Standby-Battery, 12 Volt, 7 AH, two per cabinet |
| K5455-00 | Battery Cabinet |
| K1171-00 | 16 Channel I/O Interface |
| | |
| | |
| | |

| Models | Description |
|------------------|--|
| K13XX-YYY | The eMatrix is a graphical annunciator. Configure features of this device to assign numerical values to part number variables XX-YYY. Specify model number VF13XX-YYY for the base version of this unit. Reference eMatrix Installation Manual, Man-1202 for configuration features required for your application. |
| K1172-10 | eView, annunciator, red |
| K1172-40 | eView, annunciator, gray |
| K1173-10 | eView, flush mount kit, red |
| K1173-40 | eView, flush mount kit, gray |
| K1071-40 | Trim ring for the Elite-RS Panel, gray |
| K1071-10 | Trim ring for the Elite-RS Panel, red |

Notification Appliances

Notification Appliances furnished in this manual operate with the Elite-RS Panel in a special application or regulated mode. The Elite-RS Panel supports the simultaneous operation of regulated and special application outputs between NAC 1 and NAC 2.

The Elite-RS Panel does not support the simultaneous operation of regulated and special application outputs on the same NAC channel.

The Elite-RS Panel supports regulated outputs when operating:

- Gentex NAC devices without synchronization modules
- System Sensor NAC devices with synchronization modules
- Wheelock NAC devices with synchronization modules
- Amseco NAC devices with synchronization modules

The Elite-RS Panel supports special application outputs when operating:

- Gentex NAC devices without synchronization modules
- System Sensor NAC devices without synchronization modules
- Wheelock NAC devices without synchronization modules
- Amseco NAC devices without synchronization modules

Synchronization

NAC channels 1 and 2 of the Elite-RS Panel provide single and dual circuit synchronization. Single circuit synchronization provides synchronized NAC outputs on one channel of the Elite-RS Panel. Dual circuit synchronization provides synchronized NAC outputs on two channels of the Elite-RS Panel.

NAC synchronization can be performed on individual Elite-RS Panels.

NAC synchronization cannot be performed on between multiple Elite-RS Panels.

Configuring NAC Outputs

Settings are provided in eSP Discovery and Loop Explorer for controlling the NAC outputs of the Elite-RS Panel. Selections are available in these utilities for providing outputs with synchronization or various forms of constant power. Settings are also provided to allow the Alarm Silence button to operate on the front-panel in various modes.

NAC channels of the Elite-RS Panel can be configured as independent outputs as long as the same manufacturer types are used when operating synchronized outputs.

Strobe operations are disabled as default functions on the Elite-RS Panel. Settings are available to enable the operation of sounders and strobes when operating NAC channels in the constant power mode.

Review the settings described below to configure each NAC output for operation: .

| | |
|-----------------------|---|
| Output Options | <p>General Alarm and Emergency are selected as default conditions. Alternative output options for this field include Auxiliary Output, Pre Alarm Output, Supervisory Alarm, Trouble and Security Output.</p> <p><i>Do not select the General Alarm option if the NAC channel is to be controlled by cause and effect programming.</i></p> |
| Strobe | <p>Strobe Output is not selected for operation as a default condition. Selecting this field allows the user to define which synchronization protocol to be used.</p> |
| NAC Aux 24 DC | <p>When the Strobe option above is not selected, Off is selected as the default operating condition. Options for this output are continuous constant power, door holder continuous power and resettable constant power. Continuous constant power provides a voltage output identical to Aux 24 VDC. Door holder continuous power drops out during fire alarm conditions or when an AC fail event occurs. Resettable constant power drops out between four and five seconds after the reset of the control panel.</p> |
| Alarm Silence | <p>Each NAC circuit is configurable in reaction to the Alarm Silence button on the front-panel of the Elite-RS. Edit properties of the NAC channel in Loop Explorer or eSP Discovery. Select the box for Silencing if NAC silencing is required on this channel. If Internal Synchronization Protocols are in use, an option is also available to Silence the strobe.</p> <p><i>Failure to check the Strobe Silence box will cause horns to be silenced with continued operation of the strobe.</i></p> |

Regulated NAC Outputs

NAC outputs of the Elite-RS Panel operate in a regulated mode when conforming to specific levels of continuous or pulsed DC. NAC outputs meet requirements for regulated levels when the output current does not exceed the constraints described below:

Regulated Continuous Output Current

Continuous DC currents cannot exceed 1.6 A from either NAC output when operating in a regulated output mode:

Regulated continuous DC output = 1.6 A_{NAC 1} + 1.6 A_{NAC 2} = 3.2 A total

Regulated Pulsed Output Current

Pulsed DC currents cannot exceed 900 mA from either NAC output when operating in a regulated output mode:

Regulated pulsed DC output = 900 mA_{NAC 1} + 900 mA_{NAC 2} = 1.8 A total

Reference Appendix A, Specifications for operating NAC outputs in the regulated mode.

Synchronization Modules

Synchronize the regulated output of NAC 1 and NAC 2 using UL listed and compatible synchronization modules. Connect End-Of-Line-Device VF1539-00 to the output of each Synchronization Module installed.

Operating the NAC outputs of the Elite-RS Panel in a regulated output mode requires the use of external synchronization-modules when performing synchronization. Notification Appliances and Synchronization Modules are described in the table below for regulated NAC outputs of the Elite-RS Panel:

| Manufacturer | Manufacturer Sync Module | Manufacturer NAC Device | Maximum NAC Load |
|---------------|---------------------------|-------------------------|------------------|
| System Sensor | MDL (Red) MDLW (White) | *** | 0.90 A |
| Wheelock | SM-24-R DSM-24-R | *** | 0.90 A |
| Amseco | SMD10-3A | *** | 0.90 A |

*** All NAC devices determined to be compatible with the synchronization modules above are compatible for operation with the Elite-RS Panel.

Special Application NAC Outputs

NAC outputs of the Elite-RS Panel operate in a special application mode when conforming to specific levels of continuous DC. Outputs meet these requirements when NAC currents do not exceed the 2.3 A of NAC 1 or NAC 2 with the combined current of NAC 1 and NAC 2 not to exceed 3.1 A.

Reference Appendix A, Specifications for operating NAC outputs in the special application mode.

Synchronization

The Elite-RS Panel provides internal device synchronization between the outputs of NAC 1 and NAC 2 when operating NAC devices from Gentex, Amseco, System Sensor or Wheelock.

External synchronization modules must not be used on the NAC outputs when operating in the special application mode.

NAC devices from Amseco, Gentex, System Sensor and Wheelock do not require external synchronization modules when operating in the special application mode. The Elite-RS Panel contains an internal synchronization feature that supports these NAC devices.

Amseco Compatible NAC Devices

The following series of Amseco NAC devices are compatible for use on the special application outputs of NAC 1 and 2 when these outputs are configured for “Amseco” synchronization protocol:

| Name of Series | Environment | Model Series | Description | Mount |
|------------------------------|--------------------|---------------------|--------------------|--------------|
| Select-A-Strobe/Chime | Indoor | CM24C | Chime | Ceiling |
| Select-A-Strobe/Chime | Indoor | SCM24C | Chime Strobe | Ceiling |
| Select-A-Horn | Indoor/Outdoor | H-1224 | Horn | Wall |
| Select-A-Strobe/Horn | Indoor | SH-1224 | Horn Strobe | Wall |
| Select-A-Strobe/Horn | Outdoor | SH-1224WP | Horn Strobe | Wall |
| Select-A-Strobe/Horn | Indoor | SH24C-177 | Horn Strobe | Wall/Ceiling |
| Select-A-Strobe/Horn | Indoor | SH24C-3075110 | Horn Strobe | Wall/Ceiling |
| Speaker/Strobe Square | Indoor/Outdoor | SSS-2 | Speaker Strobe | Wall |
| Speaker/Strobe Square | Indoor/Outdoor | SSS-8 | Speaker Strobe | Wall |
| Speaker/Strobe Round | Indoor/Outdoor | SSR-2 | Speaker Strobe | Wall/Ceiling |
| Speaker/Strobe Round | Indoor/Outdoor | SSR-8 | Speaker Strobe | Wall/Ceiling |
| Speaker/Strobe Round | Indoor | SSC-2 | Speaker Strobe | Wall/Ceiling |
| Speaker/Strobe Round | Indoor | SSC-8 | Speaker Strobe | Wall/Ceiling |
| Select-A-Strobe | Indoor | SL-1224 | Strobe | Wall |
| Select-A-Strobe | Indoor/Outdoor | SL-1224-WP | Strobe | Wall |
| Select-A-Strobe | Indoor | SL24C-3075110 | Strobe | Wall/Ceiling |
| Select-A-Strobe | Indoor | SL24C-177 | Strobe | Wall/Ceiling |
| Bell/Select-A-Strobe | Indoor | SB24 | Bell Strobe | Wall/Ceiling |
| Select-A-Strobe/Chime | Indoor | SCM24W-153075 | Chime Strobe | Wall |
| Select-A-Strobe/Chime | Indoor | SCM24W-75110 | Chime Strobe | Wall |

| Name of Series | Environment | Model Series | Description | Mount |
|--------------------------------|----------------|---------------|----------------|--------------|
| Select-A-Horn | Indoor | H24W | Horn | Wall/Ceiling |
| Select-A-Strobe/Horn | Indoor | SH24W-1530 | Horn Strobe | Wall |
| Select-A-Strobe/Horn | Indoor | SH24W-75110 | Horn Strobe | Wall |
| Indoor/Outdoor Horn/ Strobe | Indoor/Outdoor | SHB24-75 | Horn Strobe | Wall |
| Speaker/Strobe | Indoor | SSC25-177 | Speaker Strobe | Wall/Ceiling |
| Select-A-Strobe/Speaker | Indoor | SSC25-3075110 | Speaker Strobe | Wall/Ceiling |
| Speaker/Strobe | Indoor | SSC70-177 | Speaker Strobe | Wall/Ceiling |
| Select-A-Strobe/Speaker | Indoor | SSC70-3075110 | Speaker Strobe | Wall/Ceiling |
| Select-A-Strobe/Speaker | Indoor | SFH45-153075 | Speaker Strobe | Wall/Ceiling |
| Select-A-Strobe/Speaker | Indoor | SFH47-75110 | Speaker Strobe | Wall/Ceiling |
| Select-A-Strobe | Indoor | SL24W-1530 | Strobe | Wall |
| Select-A-Strobe | Indoor | SL24W-75110 | Strobe | Wall |
| Indoor/Outdoor Strobe | Indoor/Outdoor | SLB24-75 | Strobe | Wall |
| Select-A-Strobe | Indoor/Outdoor | SB24 | Strobe | Wall/Ceiling |
| Select-A-Strobe/Horn | Indoor | SH24W-153075 | Horn Strobe | Wall |
| Select-A-Strobe | Indoor | SL24W-153075 | Strobe | Wall |
| Select-A-Strobe | Indoor | ASH-2475110R | Horn Strobe | Wall |
| Select-A-Strobe | Indoor | RSB24-153075 | Strobe | Wall/Ceiling |
| Select-A-Strobe | Indoor | RSD24-153075 | Strobe | Wall/Ceiling |
| Select-A-Strobe | Indoor | RSD24-75110 | Strobe | Wall/Ceiling |
| Select-A-Strobe | Indoor | SA24 SERIES | Strobe | Wall |
| Select-A-Strobe | Indoor | SAD24-153075 | Strobe | Wall/Ceiling |
| Select-A-Strobe | Indoor | SAD24-75110 | Strobe | Wall |

Gentex Compatible NAC Devices

The following series of Gentex NAC devices are compatible for use on the special application outputs of NAC 1 and 2 when these outputs are configured for “Gentex” synchronization protocol:

| Name of Series | Environment | Model Series | Description | Mount |
|---------------------------------|-------------|---------------|----------------|---------|
| WSSPK Series | Outdoor | WSSPK24-15/75 | Speaker Strobe | Wall |
| SSPK24WLP Series | Indoor | SSPK24WLP | Speaker Strobe | Wall |
| SSPKCLP Series | Indoor | SSPK24CLP | Speaker Strobe | Ceiling |
| Commander4 Series | Indoor | GCC24 | Horn Strobe | Ceiling |
| Commander4 Series | Indoor | GCS24 | Strobe | Ceiling |
| Commander3 Series | Indoor | GEC3-24 | Horn Strobe | Wall |
| Commander3 Series | Indoor | GES3-24 | Strobe | Wall |
| Commander3 Series | Indoor | GEH24 | Horn | Wall |
| Commander2 Series | Indoor | GEC24 | Horn Strobe | Wall |
| Commander2 Series | Indoor | GES24 | Strobe | Wall |
| Commander2 Series | Indoor | GEH24 | Horn | Wall |
| Outdoor Commander Series | Outdoor | WGEC24 | Horn Strobe | Wall |
| Outdoor Commander Series | Outdoor | WGES24 | Strobe | Wall |
| Outdoor Commander Series | Outdoor | GEH24 | Horn | Wall |
| GX91/GX93 Series | Indoor | GX93 | Mini Horn | Wall |

Gentex Models

| Gentex Models | Gentex Part Numbers | Description |
|----------------------|----------------------------|--|
| GEH24-R | 904-1205-002 | Horn, Wall Red (GEH) |
| GEH24-W | 904-1207-002 | Horn, Wall White (GEH) |
| GES3-24WR | 904-1321-002 | Strobe, Wall Red Multi Candela (GES3) |
| GES3-24WW | 904-1319-002 | Strobe, Wall White Multi Candela (GES3) |
| GEC3-24WR | 904-1317-002 | Horn/Strobe, Wall Red Multi Candela (GEC3) |
| GEC3-24WW | 904-1315-002 | Horn/Strobe, Wall White Multi Candela (GEC3) |
| GCS24CR | 904-1213-002 | Strobe, Ceiling Red Multi Candela (GCS) |
| GCS24CW | 904-1215-002 | Strobe, Ceiling White Multi Candela (GCS) |
| GCC24CR | 904-1209-002 | Horn/Strobe, Ceiling Red Multi Candela (GCC) |
| GCC24CW | 904-1211-002 | Horn/Strobe, Ceiling White Multi Candela (GCC) |
| WGEC24-75WR | 904-1217-002 | Weatherproof Horn/Strobe (Gentex) Red |

System Sensor Compatible NAC Devices

The following series of System Sensor NAC devices are compatible for use on the special application outputs of NAC 1 and 2 when these outputs are configured for “System Sensor” synchronization protocol:

| Name of Series | Environment | Model Series | Description | Mount |
|----------------------------|--------------------|---------------------|------------------------|--------------|
| SpectrAlert Advance | Indoor | SPS | Speaker Strobe | Wall |
| SpectrAlert Advance | Indoor | SPSC | Speaker Strobe | Ceiling |
| SpectrAlert Advance | Outdoor | SPS (K) | Speaker Strobe | Wall |
| SpectrAlert Advance | Outdoor | SPSC (K) | Speaker Strobe | Ceiling |
| SpectrAlert Advance | Indoor | P2 | Horn Strobe, 2-Wire | Wall |

| Name of Series | Environment | Model Series | Description | Mount |
|----------------------------|-------------|--------------|------------------------|--------------|
| SpectrAlert Advance | Indoor | P4 | Horn Strobe, 4-Wire | Wall |
| SpectrAlert Advance | Indoor | S | Strobe | Wall |
| SpectrAlert Advance | Indoor | PC2 | Horn Strobe, 2-Wire | Ceiling |
| SpectrAlert Advance | Indoor | PC4 | Horn Strobe, 4-Wire | Ceiling |
| SpectrAlert Advance | Indoor | SC | Strobe | Ceiling |
| SpectrAlert Advance | Indoor | H | Horn | Wall/Ceiling |
| SpectrAlert Advance | Outdoor | P2 (K) | Horn Strobe, 2-Wire | Wall |
| SpectrAlert Advance | Outdoor | P4 (K) | Horn Strobe, 4-Wire | Wall |
| SpectrAlert Advance | Outdoor | S (K) | Strobe | Wall |
| SpectrAlert Advance | Outdoor | PC2 (K) | Horn Strobe, 2-Wire | Ceiling |
| SpectrAlert Advance | Outdoor | PC4 (K) | Horn Strobe, 4-Wire | Ceiling |
| SpectrAlert Advance | Outdoor | SC (K) | Strobe | Ceiling |
| SpectrAlert Advance | Outdoor | H (K) | Horn | Wall/Ceiling |
| SpectrAlert Advance | Indoor | CH | Chime | Wall/Ceiling |
| SpectrAlert Advance | Indoor | CHS | Chime Strobe | Wall |
| SpectrAlert | Indoor | CH24MC | Chime Strobe | Wall |
| SpectrAlert | Indoor | CH1224 | Chime | Wall/Ceiling |
| SpectrAlert | Indoor | SP2x1224MC | Speaker Strobe | Wall |
| SpectrAlert | Indoor | SP3x1224MC | Speaker Strobe | Wall |
| SpectrAlert | Outdoor | SP2R1224MCK | Speaker Strobe | Wall |
| SpectrAlert | | S1224MC | Strobe | Wall |
| SpectrAlert | | P1224MC | Horn Strobe, 4-Wire | Wall |
| SpectrAlert | | H12/24 | Horn | Wall/Ceiling |

Wheelock Compatible NAC Devices

The following series of Wheelock NAC devices are compatible for use on the special application outputs of NAC 1 and 2 when these outputs are configured for “Wheelock” synchronization protocol:

| Model Number Series | Description |
|------------------------|---|
| AMT-12/24 | Mutilating - 3 inputs |
| AMT-241575, AMT-24MCW | Mutilating Strobe - 1575cd or 15,30,75,110 cd, wall |
| AMT-241575 | Mutilating Strobe (NYC) - 1575 cd, wall |
| AMT-12/24 Audible Only | Mutilating Audible only |
| AS-121575, AS-241575 | Audible Strobe - 1575 cd, wall |
| AS-24MCW | Audible Strobe - 15,30,75,110 cd, wall |
| AS-24MCC | Audible Strobe - 15,30,75,95 cd, ceiling |
| AS-24MCWH | Audible Strobe - 135,185 cd, wall |
| AS-24MCCH | Audible Strobe - 115,177 cd, ceiling |
| AH-12, AH-24 | Audible |
| ASWP-2475 | Audible Strobe - 180 cd, weatherproof |
| AHWP | Audible - outdoor |
| CH70, CH90 | Chime |
| CH70-241575 | Chime - 1575 cd, wall |
| CH70-24MCW | Chime - 15,30,75,110 cd, wall |
| CH90-24MCC | Chime - 15,30,75,95 cd, ceiling |
| CH70-MCWH | Chime - 135,185 cd, wall |
| CH90-MCCH | Chime - 115,177 cd, ceiling |
| E50-241575W | Speaker Strobe-wall |
| E50-MCW | Speaker Strobe - 15,30,75,110 cd, wall |
| E50-MCWH | Speaker Strobe - 135,185 cd, wall |
| E60-24MCC | Speaker Strobe 15,30,75,95 cd, ceiling |
| E60-MCCH | Speaker Strobe 115/177 cd, ceiling |
| E70A, E70B, E90A, E90B | Speaker Strobe - amber or blue lens |

| Model Number Series | Description |
|---------------------------------------|---|
| E70-241575 | Speaker Strobe - 1575 cd, wall |
| E70-24MCW | Speaker Strobe - 15,30,75,110 cd, wall |
| E90-24MCC | Speaker Strobe - 15,30,75,95 cd, ceiling |
| E70-24MCWH | Speaker Strobe - 135,185 cd, wall |
| E90-24MCCH | Speaker Strobe - 115,177 cd, ceiling |
| ET70-241575 | Speaker Strobe - 1575 cd, wall |
| ET70-24MCW | Speaker Strobe - 15,30,75,110 cd, wall |
| ET90-24MCC | Speaker Strobe - 15,30,75,95 cd, ceiling |
| ET70-24MCWH | Speaker Strobe - 135,185 cd, wall |
| ET90-24MCCH | Speaker Strobe - 115,177 cd, ceiling |
| ET80-24MCW | Speaker Strobe - vandal resist, 15,30,75,110 cd, wall |
| ET80-24MCWH | Speaker Strobe - vandal resist, 135,185 cd, wall |
| ET70WP-2475 | Speaker Strobe - weatherproof |
| HS-24 | Audible |
| HS4-241575 | Audible Strobe - 1575 cd, wall |
| HS4-24MCW | Audible Strobe - 15,30,75,110 cd, wall |
| HS4-24MCWH | Audible Strobe - 135,185 cd, wall |
| MIZ-24S | Mini Horn - continuous, code-3, sync |
| MT | Multitone |
| MT-121575, MT-241575, MT-24MCW | Multitone Strobe - 1575 cd or 15,30,75,110 cd, wall |
| MTWP-2475 | Multitone Strobe - weatherproof |
| MTWP B or A | Multitone Strobe - weatherproof-Blue or Amber lens |
| NH | Audible |
| NS-24MCC | Audible Strobe - 15,30,75,95 cd, ceiling |
| NS-24MCCH | Audible Strobe - 115, 177 cd, ceiling |
| NS-24MCW | Audible Strobe - 15,30,75,110 cd, wall |
| NS-121575, NS-241575 | Audible Strobe - 1575 cd, wall |
| RSS-121575 | Strobe-15,75 cd, wall |

| Model Number Series | Description |
|--------------------------------|---|
| RSS-241575, RSSP-241575 | Strobe - 15,75 cd, wall |
| RSS-24MCW, RSSP-24MCW | Strobe - 15,30,75,110 cd, wall |
| RSS-24MCC, RSS-24MCCR | Strobe - 15,30,75,95 cd, ceiling, round or square |
| RSS-24MCWH, RSSP-24MCWH | Strobe - 135,185 cd, wall |
| RSS-24MCCH, RSS-24MCCHR | Strobe - 115,177 cd, ceiling, round or square |
| S8, S8-24MCC, S8-24MCCH | Speaker or Speaker Strobe - 8-inch, ceiling |
| SA-S90-24MCC | Speaker Strobe - amplified, 15,30,75,95 cd, ceiling |
| SA-S70-24MCW | Speaker Strobe - amplified, 15,30,75,115 cd, wall |
| STH w/opt strobe | Cluster Speakers - with optional DC-MAX strobe |
| STH MCCH | Cluster Speakers - with 115/177 cd strobe |
| STH-4R24MCCH110 | Cluster Speaker with three strobes |
| STx | Strobe - 15,15/75,30,75,95,110,135,185 cd, wall |
| STxC | Strobe - 15,30,60,75,95,115,150,177 cd, ceiling |
| HSx | Audible Strobe - 15,15/75,30,75,95,110,135,185 cd, wall |
| HSxC | Audible Strobe - 15,30,60,75,95,115,150,177 cd, ceiling |
| HNx | Audible, wall |
| HNxC | Audible, ceiling |

Wheelock Models

| Wheelock Models | Description |
|-----------------|-----------------------------|
| AH-24-R | Horn, Red (AH) |
| AH-24-W | Horn, White (AH) |
| AH-24WP-R | Weatherproof Horn, Red (AH) |
| NH-12/24-R | Horn, Red (NH) |
| NH-12/24-W | Horn, White (NH) |
| MT-12/24-R | Multi Tone Flush Red |
| MT-12/24-W | Multi Tone Flush White |

| Wheelock Models | Description |
|-----------------|--|
| AMT-12/24-R | Audible Multi Tone Addressable Red |
| AMT-12/24-W | Audible Multi Tone Addressable White |
| CH70-24-R | Chime Square, Red |
| CH70-24-W | Chime Square, White |
| CH90-24-W | Chime Round White |
| RSS-24MCW-FR | Strobe Wall Multi-Candela Red (RSS) |
| RSS-24MCW-FW | Strobe Wall Multi-Candela White (RSS) |
| RSS-241575W-FR | Strobe Wall Mount Red 15/75 cd |
| RSS-241575W-FW | Strobe Wall Mount White 15/75cd |
| RSS-24150W-FR | Strobe Wall Mount Red 150cd |
| RSS-24177W-FR | Strobe Wall Mount Red 177 cd |
| RSS-24185W-FR | Strobe Wall Mount Red 185cd |
| RSS-24MCC-FR | Strobe Ceiling Multi-Candela, Red (RSS) |
| RSS-24MCC-FW | Strobe Ceiling Multi-Candela, White (RSS) |
| RSS-24MCCR-FR | Strobe Ceiling Multi-Candela, Round, Red (RSS) |
| RSS-24MCCR-FW | Strobe Ceiling Multi-Candela, Round, White (RSS) |
| RSS-24MCCH-FR | Strobe Ceiling, 115/177cd, Red (RSS) |
| RSS-24MCCH-FW | Strobe Ceiling, 115/177cd, White (RSS) |
| RSS-24MCCHR-FR | Strobe Red Multi Ceiling Round 115/177 cd |
| RSS-24MCCHR-FW | Strobe White Multi Ceiling Round 115/177 cd |
| RSS-24MCWH-FR | Strobe, Wall, 135/185cd, Red (RSS) |
| RSS-24MCWH-FW | Strobe, Wall, 135/185cd, White (RSS) |
| RSS-24150C-FW | Strobe Ceiling Mount White 150cd |
| RSS-35288C-FW | Strobe Ceiling Mount White 177cd |
| RSS-2415CR-FR | Strobe Ceiling Mount Round Red 15cd |
| RSS-2415CR-FW | Strobe Ceiling Mount Round White 15cd |
| RSS-2430CR-FR | Strobe Ceiling Mount Round Red 30cd |
| RSS-2430CR-FW | Strobe Ceiling Mount Round White 30cd |

| Wheelock Models | Description |
|-----------------|---|
| RSS-2475CR-FR | Strobe Ceiling Mount Round Red 75cd |
| RSS-2475CR-FW | Strobe Ceiling Mount Round White 75cd |
| RSS-24100CR-FR | Strobe Ceiling Mount Round Red 100cd |
| RSS-24100CR-FW | Strobe Ceiling Mount Round White 100cd |
| RSS-24150CR-FW | Strobe Ceiling Mount Round White 150cd |
| RSS-24177CR-FW | Strobe Ceiling Mount Round White 177cd |
| RSSWP-2475W-FR | Strobe Wall Weatherproof, 75cd, Red |
| RSSP-24MCW-FR | Strobe Retro Multi-Candela, Red |
| RSSP-24MCW-FW | Strobe Retro Multi-Candela, White |
| RSSP-241575W-FR | Strobe Wall Mount Retrofit Plate Red 15/75cd |
| RSSP-24150W-FR | Strobe Wall Mount Retrofit Plate Red 150cd |
| RSSP-24177W-FR | Strobe Wall Mount Retrofit Plate Red 177cd |
| RSSP-24185W-FR | Strobe Wall Mount Retrofit Plate Red 185cd |
| RSSP-24MCWH-FR | Strobe Wall Mt Red Multi cd 135/185 |
| NS-24MCW-FR | Horn/Strobe, Multi-Candela, Red (NS) |
| NS-24MCW-FW | Horn/Strobe, Multi-Candela, White (NS) |
| NS-241575W-FR | Horn/Strobe Wall Mount Flush Red 15/75cd |
| NS-241575W-FW | Horn/Strobe Wall Mount Flush White 15/75cd |
| HS4-24MCW-FR | Horn/Strobe 4-Wire, Multi-Candela, Red (NS) |
| HS4-24MCW-FW | Horn/Strobe 4-Wire, Multi-Candela, White (NS) |
| HS4-24MCWH-FR | Horn/Strobe Wall 4 Wire Red 135/185 cd |
| HS4-24MCWH-FW | Horn/Strobe Wall 4 Wire White 135/185 cd |
| NS-24MCCH-FR | Horn/Strobe, Ceiling, Round, 115/177cd, Red |
| AS-24MCW-FR | Horn/Strobe, Wall, Multi-Candela, Red (AS) |
| AS-24MCW-FW | Horn/Strobe, Wall, Multi-Candela, White (AS) |
| AS-241575W-FR | Audible Strobe Wall Mounted Red 15/75cd |
| AS-241575W-FW | Audible/Strobe Wall Mounted White 15/75cd |
| AS-241575W-FW | Audible Strobe Wall Mounted White 15/75cd |

| Wheelock Models | Description |
|-----------------|---|
| ASWP-2475W-FR | Weatherproof Horn/Strobe, Red (AS) |
| MT-241575W-FR | Audible Multi Tone Strobe Flush Red 15/75cd |
| MT-2475W-FR | Audible Multi Tone Strobe Flush Red 75cd |
| MTWP-2475W-FR | Audible Multi Tone Strobe Weatherproof Red 75cd |
| AMT-241575W-FR | Audible Multi Tone/Strobe Red 15/75cd |
| AMT-2475W-FR | Audible Multi Tone/Strobe Red 75cd |
| AS-24MCC-FR | Horn/Strobe, Ceiling, Multi-Candela, Red (AS) |
| AS-24MCC-FW | Horn/Strobe, Ceiling, Multi-Candela, White (AS) |
| AS-24MCCH-FR | Horn/Strobe, Ceiling, 115/177, Red (AS) |
| AS-24MCCH-FW | Horn/Strobe, Ceiling, 115/177, Red (AS) |
| AS-24MCWH-FR | Horn/Strobe, Wall, 135/185, Red (AS) |
| AS-24MCWH-FW | Horn/Strobe, Wall, 135/185, White (AS) |
| HSR | Exceder Multi-Candela Horn / Strobe Red Wall Mount |
| HSW | Exceder Multi-Candela Horn / Strobe White Wall Mount |
| HSRC | Exceder Multi Candela Horn / Strobe Ceiling Mount Red |
| HSWC | Exceder Multi Candela Horn / Strobe Ceiling Mount White |
| STR | Exceder Multi Candela Strobe Wall Mount Red |
| STW | Exceder Multi Candela Strobe Wall Mount White |
| STRC | Exceder Multi Candela Strobe Ceiling Mount Red |
| STWC | Exceder Multi Candela Strobe Ceiling Mount White |
| HNR | Exceder Horn - Red / Wall Mount |
| HNW | Exceder Horn - White / Wall Mount |
| HNRC | Exceder Horn - Red / Ceiling Mount |
| HNWC | Exceder Horn - White / Ceiling Mount |
| CH70-24MCW-FR | Chime/Strobe, Wall, Multi-Candela, Red (CH) |
| CJ70-24MCW-FW | Chime/Strobe, Wall, Multi-Candela, White (CH) |
| CH70-24MCWH-FR | Chime/Strobe Red Wall 135/185 cd |
| CH70-24MCWH-FW | Chime/Strobe White Wall 135/185 cd |

| Wheelock Models | Description |
|-----------------|--|
| CH70-241575-FR | Chime/Strobe Square Red 15/75cd |
| CH70-241575W-FW | Chime/Strobe Square White 15/75cd |
| CH90-24MCC-FR | Chime/Strobe, Ceiling, Multi-Candela, Red (CH) |
| CH90-24MCC-FW | Chime/Strobe, Ceiling, Multi-Candela, White (CH) |
| CH90-2475C-FW | Chime/Strobe Round White 75cd |
| CH90-24100C-FW | Chime/Strobe Round White 100cd |
| CH90-24MCCH-FW | Chime/Strobe White Round 15/30/75/95 cd |
| E70-24MCW-FR | Speaker/Strobe, Wall, Multi-Candela, Red (E Series) |
| E70-24MCW-FW | Speaker/Strobe, Wall, Multi-Candela, White (E Series) |
| E70-24MCWH-FR | Speaker/Strobe, Wall, 135/185, Red (E Series) |
| E70-24MCWH-FW | Speaker/Strobe, Wall, 135/185, White (E Series) |
| E70-241575W-FR | Speaker/Strobe Square 2 watt Red 15/75cd |
| E70-241575W-FW | Speaker/Strobe Square 2 watt White 15/75cd |
| E50-24MCW-FR | Speaker/Strobe Wall Mount 2 Watt Multi Candela Red |
| E50-24MCW-FW | Speaker/Strobe Wall Mount 2 Watt Multi Candela White |
| E90-24MCC-FR | Speaker/Strobe Round 2 watt Multi-Candela 15/30/75/110 Red |
| E90-254MCC-FW | Speaker/Strobe Round 2 watt Multi-Candela 15/30/75/110 |
| E90-24MCCh-FW | Speaker/Strobe Ceiling White 115/177 cd |
| E50-241575W-FR | Speaker/Strobe Square 2 Watt Red 15/75cd |
| E50-241575W-FW | Speaker/Strobe Square 2 Watt White 15/75cd |
| E50-24MCWH-FR | Speaker/Strobe Wall Mount 2 Watt High Multi Candela Red |
| E50-24MCWH-FW | Speaker/Strobe Sq. 2 Watt Multi Candela White 135/185 |
| ET70-24MCW-FR | Speaker/Strobe, Wall, Multi-Candela, Red (ET Series) |
| ET70-24MCW-FW | Speaker/Strobe, Wall, Multi-Candela, White (ET Series) |
| ET70-24MCWH-FR | Speaker/Strobe Wall Red 135/185 cd |
| ET70-24MCWH-FW | Speaker/Strobe Wall White 135/185 cd |
| ET7-241575W-FR | Speaker/Strobe Square 8 watt Red 15/75cd |
| ET70-241575W-FW | Speaker/Strobe Square 8 watt White 15/75cd |

| Wheelock Models | Description |
|-----------------|--|
| E60-MCC-FR | Speaker/Strobe Ceiling Mount 2 Watt Multi Candela Red |
| E60-24MCC-FW | Speaker/Strobe Ceiling Mount 2 Watt Multi Candela White |
| E60-24MCCH-FR | Speaker/Strobe Ceiling Mount 2 Watt High Multi Candela Red |
| E60-24MCCH-FW | Speaker/Strobe Ceiling Mount 2 Watt High Multi Candela White |
| ET70WP-2475W-FR | Weatherproof Speaker Strobe, Wall |
| ET90-24MCC-FW | Speaker/Strobe, Ceiling, Multi-Candela, Red (ET Series) |
| ET90-24MCCH-FW | Speaker/Strobe White Ceiling 8 Watt 115/177 cd |
| ET90-24150C-FW | Speaker/STrobe Round 8watt White 150cd |
| ET90-24177C-FW | Speaker/Strobe Round 8 watt White 177cd |
| ET-1080-LS-24-V | Speaker/Strobe Vandal-Proof 8watt Flush Red 15cd |
| ET-1080-LS-24-V | Speaker/Strobe Vandal-Proof 8 Watt Flush White 15cd |
| ET-1080-LSM-24- | Speaker/Strobe Vandal-Proof 8watt Flush Red 15/75cd |
| ET-1080-LSM-24- | Speaker/Strobe Vandal Proof 8 Watt Flush White 15/75cd |
| ET-1080-MS-24-V | Speaker/Strobe Vandal Proof 8watt Flush Red 30cd |
| ET-1080-MS-24-V | Speaker/Strobe Vandal Proof 8watt Flush White 30cd |
| ET-108-IS-24-VF | Speaker/Strobe Vandal Proof 8 watt Flush Red 75cd |
| ET-1080-IS-24-V | Speaker/Strobe Vandal Proof 8 watt Flush White 75cd |
| ET-1080-SLM-24- | Speaker/Strobe Vandal Proof 8watt Flush Red 15/75cd |
| ET-1080-SLM-24- | Speaker/Strobe Vandal Proof 8 watt Flush White 15/75cd |
| MIZ-24S-R | Mini Horn, Red |
| MIZ-24S-W | Mini Horn, White |
| PS-24-8MC | NAC Extender, 8 Amp, 4 Output, Red |

Riser conductors shall be installed in accordance with the survivability from attack by fire requirements in National Fire Alarm Code, NFPA 72, Sections 6.8.6.3, and 6.9.4. Riser conductors shall employ either a 2 hour rated cable system, or meet requirements approved by the AHJ, or installation of the Supervised Output Module using NFPA Style 7 configuration."

Maximum Line Impedance

**Kentec Electronics Ltd.
Elite-RS Panel Installation Manual
A-Series**

Man-1200, Revision E01.06

Reference Section 1-D, Notification Appliance Circuit (NAC) for calculations of maximum line impedance.

Compatible Devices for Auxiliary 24V

| DEVICE | MODEL | DESCRIPTION |
|---------------------------------|-----------|--------------------------|
| Remote display and annunciator | K1172 | eView |
| | | |
| Graphic Annunciator | K13XX-YYY | eMatrix |
| | | |
| Multichannel Input/ Output Card | K1171 | 16 Channel I/O Interface |

Power connections of the remote display and annunciators must be terminated at the 24 volt terminals of the 24V OUT or AUX 24V on the Elite-RS Panel.

This page intentionally left blank.

Appendix C

Calculations

This section describes current-loading, the standby-battery rating and the NAC wiring length.

Current-Loading

Current-loading of the Elite-RS Panel is limited to the capacity of the 5.25 Amp power supply. FACP installers must determine the loading placed on the power supply by adding the sum of device-loads to the no-load-alarm current of the Elite-RS Panel. The result obtained from this calculation must be below 4 Amps of the 5.25 Amp power supply so that the Elite-RS Panel can operate.

The power supply of the Elite-RS is rated at 5.25 Amps where 1.25 Amps is reserved for charging the standby-batteries and 4 Amps is reserved for operating the control panel and external loads. The 4 Amp reserve of the 5.25 Amp power supply is the maximum current capacity of the Elite-RS Panel. The control panel will not function properly if the operating constant of 4 Amps is exceeded.

Current limits are provided in *Appendix A, "Specifications"* for each of the circuit-connections on the Elite-RS Panel. Installers must identify the current-draw of each device on the circuit-connection and then compare the sum of these device-currents with the current limit provided for each of the circuit-connections. The total of device-currents must be below the limits provided in *Appendix A, "Specifications"* for each circuit-connection.

The calculation of total-current-loading must include the sum of device-loads on each of the Elite-RS circuits. Circuits to be included in this calculation for total-current-loading are:

- Panel standby and alarm currents
- SLC Loops
- NAC Outputs
- 24V OUT
- AUX 24V

The current limits provided in Appendix A, "Specifications" are maximums for each of the circuit-connections on the Elite-RS Panel. These levels are not intended to be summed together to determine the total-current available from the Elite-RS Panel. Refer to these levels only when determining the limit of device-loading on each circuit.

Example of Total Load Current

The following example demonstrates the process for determining the total load-current of the Elite-RS Panel:

- 1 Identify the current-draw of each device on the circuit-connection.
- 2 Add the device-currents together in each circuit-connection.
- 3 Compare the sum of the device-currents with the current-limit of each circuit-connection to verify that the summed level is below the current-limit value.
- 4 Add the device-load-currents together that were obtained for each of the circuit-connections:

| Circuit-Connection | Current Limit | Device Load Current |
|--|--|----------------------|
| SLC Loop 1 | 250 mA | 150 mA |
| SLC Loop 2 | 250 mA | 50 mA |
| 24V OUT | 360 mA | 0 |
| AUX 24V | 360 mA | 0 |
| NAC Channel 1 Regulated Output | 1.6 A continuous DC or 900 mA pulse DC | 750 mA continuous DC |
| NAC Channel 2 Special Application Output | Single NAC output 2.3 A continuous with combined NAC outputs not to exceed 3.1 A continuous | 925 mA continuous DC |
| Total Device Load | | 1.875 A |

- 5 Add the Total Device Load to the no-load-alarm current of the Elite-RS to obtain the Total-Load-Current.

Total Device Load + Elite-RS No-Load = Total-Load-Current

$$1.875 \quad + \quad 200 \text{ mA} \quad = \quad 2.075 \text{ A}$$

Total Load Current: 2.075 A

- 6 Verify that the current level is below 4 Amps:

2.075 A < 4 A This example demonstrates that device-loading *does not exceed* the 4 Amp capacity of the Elite-RS power supply.

Determining the Standby-Battery Rating

This section provides guidelines for determining the standby-battery rating of the Elite-RS Panel.

Battery Rating Equation

The equation below describes the process for determining the Amp-Hour Rating of the standby-batteries:

$$\text{Battery Rating} = (\text{Battery Derating Factor}) \times [(\text{Standby Amp Hours}) + (\text{Alarm Amp Hours})]$$

Or

$$\text{Battery Rating} = (\text{Battery Derating Factor}) \times [(24 \text{ Hours} \times \text{Standby-Current}) + (5 \text{ Minutes} \times \text{alarm current})]$$

Where the Battery Derating Factor = 1.2 and 5 minutes = 5 / 60 minutes = 1/12 = .0833 hours.

To determine the battery Amp-Hour-Rating:

- 1 Record the standby and alarm currents of Devices.
- 2 Record the standby and alarm currents of NAC Devices.
- 3 Record the standby and alarm currents of Auxiliary Devices.
- 4 Total the standby and alarm currents of SLC 1, SLC 2, NAC 1, NAC 2, AUX 24V and 24V OUT.
- 5 Calculate the Total Standby Amp Hours.
- 6 Calculate the Total Alarm Amp Hours.
- 7 Determine Total Amp-Hours by adding the Total Standby Amp Hours with the Total Alarm Amp Hours.
- 8 Determine the minimum Amp-Hour-Rating for the battery by multiplying the Total Amp-Hours with the Derating Factor (1.20).
- 9 Select a battery with a rating equal to or greater than the minimum Amp-Hour-Rating determined in step 8.

Complete the worksheets on the following pages to tabulate the total-current-load of the FACP system and to determine the minimum Amp-Hour-Rating for the standby-batteries.

Compare the sum of currents drawn by devices of the system and compare these to the values listed in the table of Appendix C. Select a corresponding standby-battery based on this comparison.

Tabulating Data

| | Category | Instruction | Standby-Current | Alarm-Current |
|-----------|---------------------------------|---|-----------------|---------------|
| 1 | SLC Devices | Enter the total standby and alarm current for SLC Devices. | Amps | Amps |
| 2 | NAC Devices | Enter the total standby and alarm current for NAC Devices. | Amps | Amps |
| 3 | Auxiliary Devices | Enter the total standby and alarm current for Auxiliary Devices. | Amps | Amps |
| 4 | Total Standby and Alarm Current | Total the Standby Current of steps 1, 2 and 3. Total the Alarm Current of steps 1, 2 and 3. | Amps | Amps |
| 5 | Total Standby Time | Enter a Total Standby Time of 24 or 60 hours. | Hours | |
| 6 | Total Standby Amp-Hours | Multiply the Total Standby Time of step 5 by the Total Standby Current of step 4. | AH | |
| 7 | Total Alarm Time | Enter a Total Alarm Time in hours, where 5 minutes = .083 hours and 15 minutes = .25 hours. | | Hours |
| 8 | Total Alarm Amp Hours | Multiply the Total Alarm Time in step 7 with the Total Alarm Current of step 4. | | AH |
| 9 | Total Amp-Hours | Add the Total Alarm Amp Hours of step 8 with the Total Standby Amp Hours of step 6. | | AH |
| 10 | Derating factor | The Derating Factor is 1.20. | | 1.20 |
| 11 | Minimum Battery Amp-Hour Rating | Multiply the Derating Factor of step 10 (1.20) by the Total Amp-Hours of step 9. The Amp-Hour-Rating of the battery selected must be equal to or greater than the minimum Amp-Hour-Rating obtained in this step. Note: The Maximum battery size is 50 AH. | | AH |

NAC Wiring Length

Determine the maximum wire length that can safely operate Notification Appliances under worst case conditions.
To determine the maximum wire length under worst case conditions:

- 1 Identify the minimum operating-voltage (V_{opmin}) of Notification Appliances on the NAC channel.
- 2 Calculate the maximum current of the circuit (I_{max}).
- 3 Identify the wire-resistance-per-foot of the circuit (R_{wire}).
- 4 Calculate the maximum wire length (L_{max}) of the circuit.

Sample L_{max} Calculation

Determine the maximum wire length (L_{max}) for three Notification Appliances on NAC channel 1 where,

- The manufacturer data sheet for the strobe indicates that the minimum operating-voltage (V_{opmin}) is 16 VDC.
- The manufacturer data sheet for the strobe indicates that the maximum current-draw (I_{strobe}) is 209mA DC.
- The circuit connection is provided with 18 AWG solid-copper-wire.
- The EOLD in the circuit is 10K Ohms.

To determine the maximum wire length (L_{max}) of this circuit:

- 1 Identify the minimum operating-voltage (V_{opmin}) of the strobe from the manufacturer data sheet.
From the manufacturer data sheet:

$$V_{opmin} = 16 \text{ VDC}$$

- 2 Calculate the total current of the parallel devices in the circuit (I_{total}) where,

$$\begin{aligned} I_{total} &= I_{strobe_1} + I_{strobe_2} + I_{strobe_3} + (V_{opmin} / EOLD)] \\ &= [(.209 + .209 + .209 + 16 / 10K)] A \\ &= (.627 + .0016) A \end{aligned}$$

$$I_{total} = .6286 \text{ A}$$

- 3 Identify the maximum resistance of the wire gage used in the circuit ($R_{wiremax}$) when using 18 AWG copper. An 18 AWG solid copper wire is 6.385 Ohms at 1000FT using the Resistance Table below:

| Gage | Resistance / 1000Ft @ 68F | R_{wire} |
|--------|---------------------------|--------------------|
| 18 AWG | 6.385 Ohms | 0.006385 Ohms / FT |
| 16 AWG | 4.016 Ohms | 0.004016 Ohms / FT |
| 14 AWG | 2.525 Ohms | 0.002525 Ohms / FT |

- 4 The calculation for the minimum output voltage of the NAC is:

$$V_{outmin} = V_{panel} \times 85\%$$

$$= 24 \text{ VDC} \times 85\%$$

$$V_{outmin} = 20.4 \text{ VDC}$$

- 5 The calculation for voltage-drop across the length of the wire is:

$$V_{drop} = V_{outmin} - V_{opmin}$$

$$= 20.4 \text{ VDC} - 16 \text{ VDC}$$

$$V_{drop} = 4.4 \text{ VDC}$$

- 6 The calculation for maximum wire length of this circuit is:

$$L_{max} = 1/2 (V_{drop} / I_{max}) / R_{wire}$$


where,

$$= 1/2 [(4.4 / .6286) / (.006385 \text{ Ohms / FT})]$$

$$L_{max} = 548 \text{ FT}$$

The figure below illustrates an example circuit for determining maximum wire length where values are provided for minimum operating-voltage of the NAC channel output (V_{opmin}), maximum current of the circuit (I_{max}), wire-resistance-per-foot of the circuit (R_{wire}) and maximum current-draw of the strobe (I_{strobe}):

Figure C-1
Example Circuit For Determining Maximum Wire Length

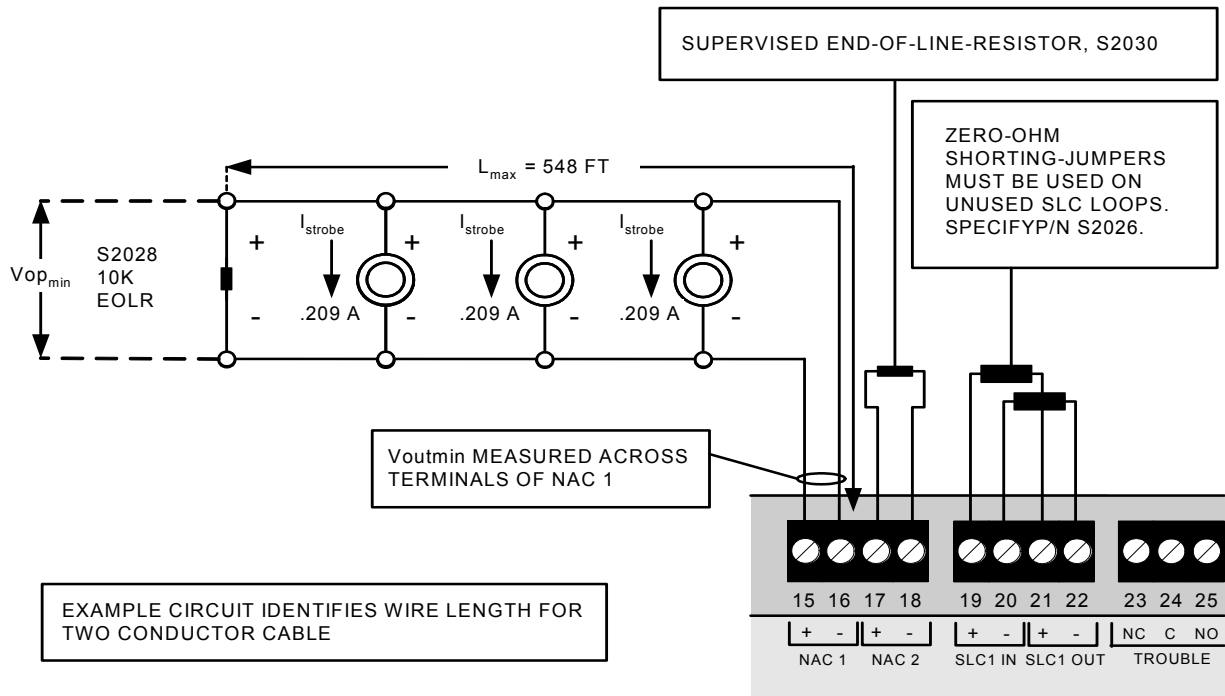

This page intentionally left blank.


This page intentionally left blank.

OPERATING INSTRUCTIONS


OPERATING INSTRUCTIONS FOR ALL MODELS OF THE eLAN-RS, AND ELITE-RS PANEL

PATENT PENDING

LED INDICATORS

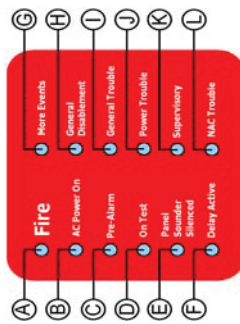

CONTROLS

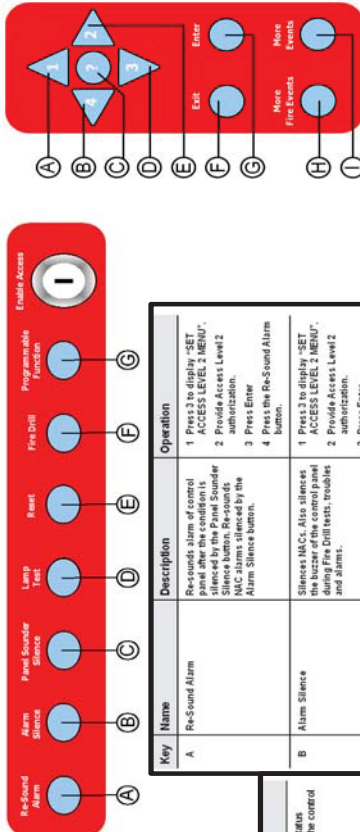

MAINTENANCE AND REPAIR

REPLACING THE 3 AMP POWER SUPPLY FUSE

| | |
|--------------------------|---|
| TO REMOVE THE FUSE: | |
| 1 | TURN OFF 120 VAC POWER TO THE CONTROL PANEL. |
| 2 | LOCATE THE 3 AMP FUSE ON THE MAIN CIRCUIT BOARD OF THE CONTROL PANEL. |
| 3 | GENTLY INSERT A SMALL FLAT-BLADE SCREW DRIVER INTO THE SLOT OF THE FUSE HOUSING. |
| 4 | SLIDE THE LENGTH OF THE SCREWDRIVER INTO THE SLOT OF THE FUSE HOUSING UNTIL THE UPPER-HALF DISLODGE FROM THE LOWER-HALF OF THE HOUSING. |
| 5 | REMOVE THE FUSE FROM THE UPPER-HALF OF THE FUSE-HOUSING. |
| TO INSTALL THE NEW FUSE: | |
| 1 | INSERT THE FUSE IN THE UPPER-HOUSING. |
| 2 | CENTER THE POSITION OF THE FUSE IN THE UPPER-HOUSING. |
| 3 | PRESS THE UPPER-HOUSING ON THE LOWER-HOUSING UNTIL THE HALVES SNAP TOGETHER. |
| 4 | RESTORE 120 VAC POWER TO THE CONTROL PANEL. |
| 5 | CHECK CONTROL PANEL OPERATION FOLLOWING THIS PROCEDURE. CONFIRM THAT FUSE REPLACEMENT RESTORED FUNCTIONALITY. |

REPLACING THE 10 AMP BATTERY FUSE

| | |
|--------------------------|--|
| TO REMOVE THE FUSE: | |
| 1 | DISCONNECT THE JUMPER-CABLE BETWEEN BATTERY 1 AND BATTERY 2. |
| 2 | DISCONNECT THE RED-CABLE FROM THE POSITIVE TERMINAL OF BATTERY 2. |
| 3 | DISCONNECT THE BLACK-CABLE FROM THE NEGATIVE TERMINAL OF BATTERY 1. |
| 4 | DISPOSE THE CABLES DESCRIBED IN THE STEPS ABOVE. |
| 5 | REMOVE BATTERY 1 AND BATTERY 2 FROM THE BOTTOM OF THE CABINET AND RECYCLE THEM ACCORDING TO MANUFACTURER GUIDELINES. |
| TO INSTALL THE NEW FUSE: | |
| 1 | MOUNT THE REPLACEMENT BATTERIES IN THE BASE OF THE CONTROL PANEL CABINET. |
| 2 | CONNECT THE REPLACEMENT JUMPER-CABLE FROM THE NEGATIVE TERMINAL OF BATTERY 1 TO THE POSITIVE TERMINAL OF BATTERY 2. |
| 3 | CONNECT THE BLACK-WIRE OF THE REPLACEMENT BATTERY-CABLE TO THE NEGATIVE TERMINAL OF BATTERY 2. |
| 4 | CONNECT THE RED-WIRE OF THE REPLACEMENT BATTERY-CABLE TO THE POSITIVE TERMINAL OF BATTERY 1. |
| 5 | DETERMINE THAT TROUBLE CONDITIONS ARE NOT REPORTED BY THE CONTROL PANEL FOLLOWING THE FUSE REPLACEMENT. |

OPERATING CHARACTERISTICS NORMAL STANDBY

THE FOLLOWING FORMAT APPEARS ON THE FRONT-PANEL DISPLAY WHEN OPERATING WITHOUT TROUBLES OR ALARMS:

TIME, DAY, DATE
DEFAULT OR USER DEFINED MESSAGE
USE ARROW KEYS TO DOUBLE PANEL
PRESS ? FOR HELP

TROUBLE-SEQUENCE

THE FOLLOWING CONDITIONS OCCUR AFTER PRESSING THE "PANEL SOUNDER SILENCE" BUTTON TO SILENCE A TROUBLE:

- THE GENERAL TROUBLE LED FLASHES YELLOW.
- THE POWER TROUBLE LED FLASHES YELLOW.
- THE INTERNAL SOUNDER DOES NOT ANNOUNCE THE LCD DISPLAY PROVIDES A MESSAGE TO IDENTIFY THE TROUBLE CONDITION.

REFERENCE MATERIAL

INSTALL CONTROL PANEL MODELS OF THE eLAN-RS OR ELITE-RS IN ACCORDANCE WITH THE FOLLOWING DOCUMENTS:

- eLAN-RS H INSTALLATION MANUAL, V3328-00, REV. EDI XX
- eLAN-RS A INSTALLATION MANUAL, V3331-00, REV. EDI XX
- ELITE-RS H INSTALLATION MANUAL, V3329-00, REV. EDI XX

INSTRUCTION PLACEMENT

FRAME THESE INSTRUCTIONS AND PLACE THEM ADJACENT TO THE CONTROL UNIT FOR READY REFERENCE.

IN THE EVENT OF TROUBLE

CONTACT:

NAME:

ADDRESS:

CITY:

STATE:

ZIP:

TELEPHONE:

STANDBY BATTERIES ARE SEALED-

RECHARGEABLE AND PROVIDE FACTORY RECOVERY IN THE EVENT OF POWER FAILURE. INSPECT STANDBY BATTERIES AND CONNECTIONS ANNUALLY. REPLACE STANDBY BATTERIES EVERY 3 TO 5 YEARS. CONNECT STANDBY BATTERIES IN SERIES. DO NOT CONNECT STANDBY BATTERIES IN PARALLEL.



PART NUMBER: S3355-00
REVISION EDI UPDATE: GE "A06P"

This page intentionally left blank

Appendix F

Communications Format

The Embedded Dialer of the Elite RS panel is capable of communicating signals to an Industry Standard Receiver in either SIA (level 2 or 3) or Contact ID formats. Both Formats use a predefined event library for transmission. In either of the formats the user may select whether they desire point ID reporting or Zone reporting.

In both Contact ID and SIA the library of translation codes sent to the monitoring center are fixed. There are no user methods for alteration of the translations.

Reference Appendix G, Reporting Formats for the appropriate matrix.

No matter the reporting format selection, one or two telephone lines may be used (NFPA mandates 2). The primary monitoring center may have one or two numbers in order to reach the Industry Standard Receiver. It is also permissible to have dual reporting to secondary monitoring center.

SIA is recommended reporting in point format. This method of reporting supplies the most detailed information possible to the monitoring center. Desired functionality and capabilities of your monitoring center should dictate your dialer reporting configuration.

Contact ID

Contact ID uses a 4 digit account number and a two digit partition number for transmission of all signals. The partition number is equivalent to the node number of the panel and is not alterable by any other means.

Zone ID Reporting

The zone number of the signal (0-500) will be reported in the zone field of the transmission. The event code generated will be based upon the point which tripped within the zone, and will reference the standard contact ID library.

Reference Appendix G, Reporting Formats for translation details between the panel event and the Contact ID Library.

Point ID Reporting

The point reporting uses the zone number field in order to depict the precise point of occurrence, regardless of the zone which the point resides in. Since Contact ID only provides a three digit field there are some limitations to this functionality.

Field Lpp

The field is depicted by Lpp:

Where L = loop (0-2) [0=panel I/O]

Where pp= Decimal point value (00-99)

Point Values

Only point values less than or equal to 99 are allowed. If you utilize points in excess of 99, truncation of the point value will occur. The least significant byte would be dropped from the transmission. Confusion by the monitoring center would be assured [SIA format does not have this limitation].

Subpoint Values

Subpoint values are not able to be sent to the monitoring center. If a subpoint was to activate the proper event code and main point number would be transmitted, although you would not know the subpoint value.

SIA

SIA uses a 4 digit account number along with a modifier code packet (ri) in order to indicate the area or group. The area or group number is equivalent to the node number of the panel and is not alterable by any other means.

Zone ID Reporting

The zone number of the signal (0-500) will be reported in the zone field of the transmission. The event code generated will be based upon the point which tripped within the zone, and will reference the standard SIA Event Block Data Code definitions.

Reference Appendix G, Reporting Formats for translation details between the panel event and the Block Data Code Definition.

Point ID Reporting

Point reporting uses the zone number field to depict the precise point of occurrence, regardless of the zone which the point resides in. Some interpretation is required to map the point number to what is sent to the monitoring center.

Reference the matrix to see precise representation of the calculations.

Field Lpp

The field is depicted by Lpps:

Where L = loop (0-2) [0=panel I/O]

Where pp= hexadecimal point value (00-FF)

Where s = subpoint value (0-3)

Point Value

As a result of the point number being represented in hexadecimal points from 00 – 255 can be annunciated.

Subpoint values are sent to the monitoring center with full subpoint reporting.

Point ID Reporting Format

Point ID reporting format provides the highest degree of information to the monitoring center.

Dialing Methodology

The embedded dialer uses an algorithm in order to attempt transmission to the monitoring center. This algorithm is affected by the number of lines in use.

Dialing Facilities

If the user selects both line 1 and line 2, not only will both lines be used to try and dial the monitoring center, both lines will be periodically checked to see voltage is present (this is not an assurance that the line is viable, although a standard test).

If 1 line is checked the transmission and voltage checking will occur on only that line.

If neither line is checked the dialer will never attempt to send a message.

Dialing Sequence

Two Phone Lines In Use

Single Monitoring Center telephone Number (Only Account 1 Tab filled in)

| Try Line | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 |
|----------|---|---|---|---|---|---|---|---|---|----|
| 1 | X | X | X | | | X | X | X | | |
| 2 | | | | X | X | | | | X | X |

After try 5, a communications failure is declared. This failure will restore once a transmission is successful. The user will note that another ten tries will occur after this sequence. These additional tries would be indicative of attempts to send the comm. failure event.

Answering Methodology

The embedded dialer allows incoming calls to line #1 only. The Incoming methodology allows users to remotely program through Loop Explorer configuration software. Additionally technical support can use this facility to assist with diagnostics of the system.

24 Hour Test Report

The embedded dialer will send a 24 hour test report signal based upon the test code time filled in within the Accounts tab of the configure dialer settings dialog. If the 4th reporting criteria (Report Service/Test) box is not enabled, no test signal will be generated.


Configure Dialer Settings

Loop Explorer PC Panel programming Software] allows the user to configure the embedded dialer based upon the elements of a particular installation and the monitoring center being used. Although the dialer may be configured through level 3 setting at the front of the panel, not all options are panel programmable, and ease of operation is much more favorable with Loop Explorer.

After an auto-learn, a RS panel even though equipped with a dialer, will not provide any dialer functionality without user programming. Once an auto-learn has been accomplished, connect a programming cable to your laptop and the computer port of the control panel. Make certain the slide switch on the control panel is set to PC and not dialer. Perform synchronization from the panel to your computer.

Once complete a screen similar to Figure F-1 will be present:

Figure F-1
Completed Screen

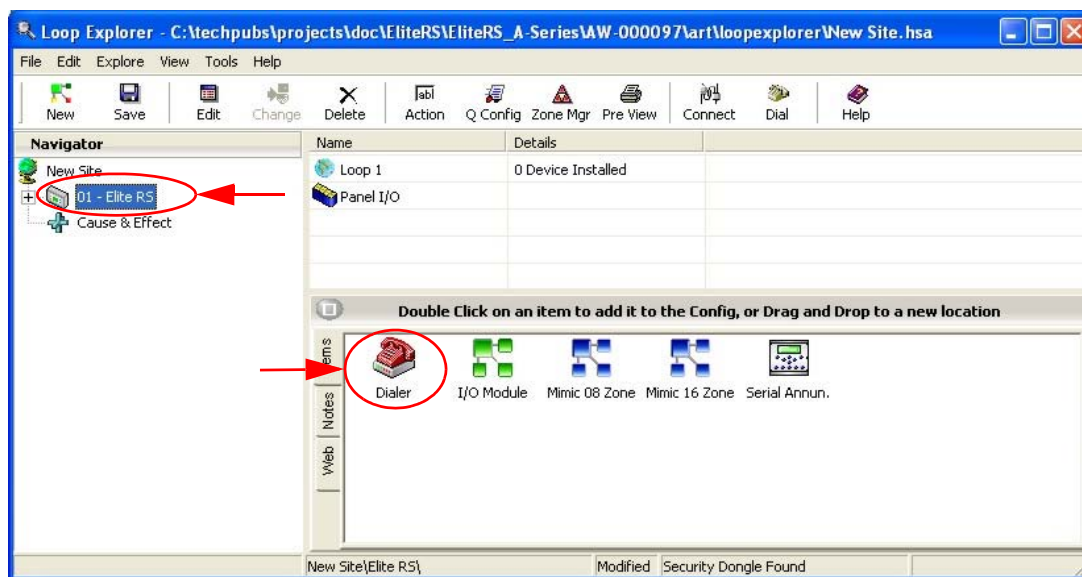


After all of your loop explorer programming is complete; make certain the slide switch is returned to the Dialer position. Failure to return this switch to the dialer position will disable dialer communications.

In the navigator (right pane) make certain the control panel is highlighted. Now Double click on the dialer icon located in the bottom pane.

This action will populate a dialer as illustrated in Figure F-2:

Figure F-2
Populated Dialer

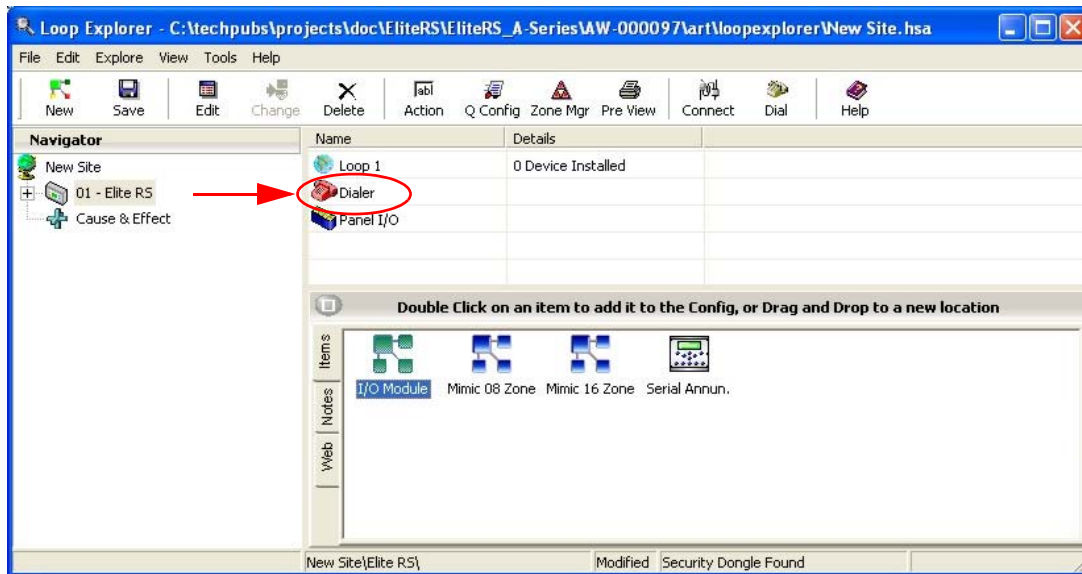

Double clicking on the dialer shown in Figure F-2 will bring you to the set-up screen illustrated in Figure F-3 and Figure F-4:

Figure F-3
Configure Dialer Settings


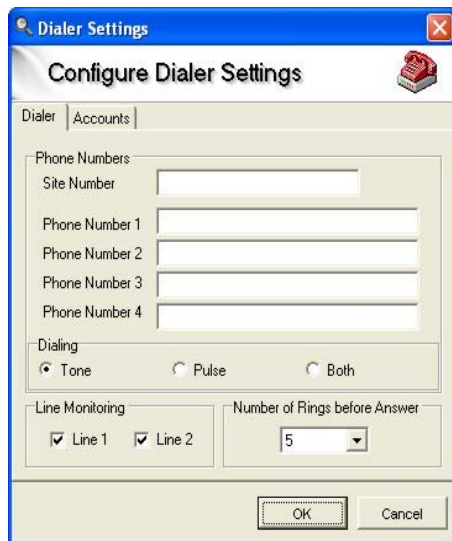


Figure F-4
Configure Account Settings

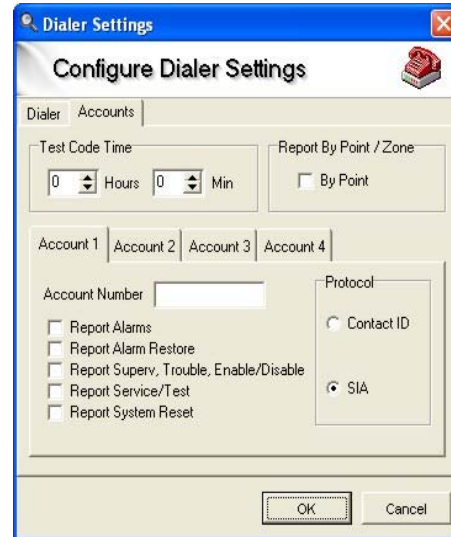

The **Dialer Tab** allows entry of information instructing the dialer how to call out and how to receive calls.


Phone Numbers

The embedded dialer allows a large array of reporting options based upon the setup options selected. Each of the phone number uses is explained below. In the most typical applications only phone number 1, or 1 & 2 are used. Each of the lines should be terminated by a RJ31X jack at the Control panel. Each of the lines should also be wired for loop start operation.

- Site Number** This is an optional field. If populated, this would be the telephone number of Line #1 connected to the RS Panel. This number would be dialed by Loop Explorer if a remote communication session from your PC was desired.
- Phone Number 1** This is the phone number of your monitoring center. Dialing modifiers may be used in the string (for example, = pause), although any modifiers must be valid for both telephone lines.
- Phone Number 2** Can be used for two purposes. The backup telephone number of your monitoring center (select backup reporting) and Redundant signal reporting.
- Reference Figure F-5 for the backup reporting selection.*
- Phone Number 3** This is the phone number used when redundant reporting is desired and Phone Number 2 is used for backup purposes.
- Phone Number 4** Can be used for two purposes. The backup telephone number of your monitoring center (select backup reporting) and Redundant signal reporting.
- Reference Figure F-5 for the backup reporting selection.*

Figure F-5 illustrates dialer configuration settings for the Account 2 tab:

Figure F-5
Account 2 tab

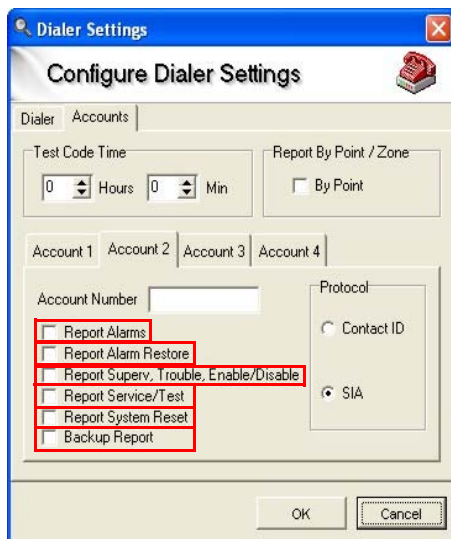

Dialing

Choose an option that would be used universally for both telephone lines; Tone, Pulse or Both. When 'both' is selected, the embedded dialer will attempt to dial touchtone and then attempt to dial using pulse if not successful.

Use Lines

Check the boxes for the phone lines which are active 1, 2 or both 1 & 2.

Voltage checks will only be conducted on those lines which are checked. Failure to check either line will result in no calls being made.

Number of rings before Answer

The capability for an incoming remote access call is available through the embedded dialer. Remote calls can only be answered on line #1. If no additional telephones are connected, the suggested value should be 2. If additional telephones are connected

Enter a value which will not cause conflict with other equipment on the telephone line.

The **Accounts Tab** allows entry of information instructing the dialer how to send data to the monitoring center.

Test Code Time

The embedded dialer will send a 24 hour test report signal based upon the test code time filled in within the Accounts tab of the configure dialer settings dialog. If the 4th reporting criteria (Report Service/Test) box is not enabled, no test signal will be generated.

Report By Zone or by Point

By Default signals are sent to the monitoring center by Zone. Checking this box will allow point reporting to occur.

Protocol

Choose the appropriate Protocol that you wish to transmit (SIA or Contact ID)

Account Number

Your monitoring center account number (4 digits in length). If contact ID this number should always be in Decimal, If SIA this number may be hexadecimal.

Reporting Criteria

By checking these boxes it is possible to alter the amount of information sent to the monitoring center. In a typical installation it would be recommended that boxes 1-4 be checked off.

Reference Figure F-5 for a typical installation example.

If the user would like to generate signals when the alarm silence or reset button have been activated, also check box 5 (typically you would not want to engage option 5, because of the additional traffic / calls which would be sent).

Within the account 2 & 4 tabs there is a sixth check box, Backup Report. This box should be checked if Account 2 is a backup telephone number for Account 1 or Account 4 is a backup telephone number for Account 3. The 'Backup Report' philosophy indicates that this number will only be tried if their compliments (1 & 3) do not reach the receiver.

Suspending Reporting

Incidents may arise where dialer configurations are calling an incorrect telephone number. While programming locally through Loop Explorer can directly and quickly correct this situation, sometimes panels are downloaded remotely. Waiting for the dialer to make many attempts to dial a bad telephone number before releasing the line can be time consuming.

By going into level 3 <Edit Configuration < Edit I/O < Set Remote Configuration <Enable, the panel will go into a trouble condition, and delete all messages queued for transmission. This procedure will allow line 1 to be free for an incoming call. The panel will remain in this trouble condition for 20 minutes or the receipt of a new configuration, whichever comes first.

All messages that were deleted when the remote configuration mode was entered will never be sent to the monitoring center, although these signals are stored in the event history log of the panel.

This page intentionally left blank.

Appendix G

Reporting Formats

This section describes reporting formats on the Elite-RS Panel for SIA point conversion, Contact ID conversion and Event Code translation.

SIA Point Conversion

| Logical Point # [Loop-Point-SubPoint] | Point Definition | Monitoring Point # Received in SIA | Monitoring Point # Received in SIA if sub point 1 used | Monitoring Point # Received in SIA if sub point 2 used | Monitoring Point # Received in SIA if sub point 3 used |
|--|-----------------------|---------------------------------------|---|---|---|
| Panel Output | NAC 1 Fault | 0140 | | | |
| Panel Output | NAC 2 Fault | 0150 | | | |
| Panel Input | Programmable Function | 00A0 | | | |
| Panel Input | Fire Drill | 0090 | | | |
| Panel Input | Reset | 00B0 | | | |
| Panel Input | Alarm Silence | 00C0 | | | |
| 1-01-0 | User Defined | 1010 | 1011 | 1012 | 1013 |
| 1-02-0 | User Defined | 1020 | 1021 | 1022 | 1023 |
| 1-03-0 | User Defined | 1030 | 1031 | 1032 | 1033 |
| 1-04-0 | User Defined | 1040 | 1041 | 1042 | 1043 |
| 1-05-0 | User Defined | 1050 | 1051 | 1052 | 1053 |
| 1-06-0 | User Defined | 1060 | 1061 | 1062 | 1063 |
| 1-07-0 | User Defined | 1070 | 1071 | 1072 | 1073 |
| 1-08-0 | User Defined | 1080 | 1081 | 1082 | 1083 |
| 1-09-0 | User Defined | 1090 | 1091 | 1092 | 1093 |
| 1-10-0 | User Defined | 10A0 | 10A1 | 10A2 | 10A3 |
| 1-11-0 | User Defined | 10B0 | 10B1 | 10B2 | 10B3 |
| 1-12-0 | User Defined | 10C0 | 10C1 | 10C2 | 10C3 |

| Logical Point # [Loop-Point-SubPoint] | Point Definition | Monitoring Point # Received in SIA | Monitoring Point # Received in SIA if sub point 1 used | Monitoring Point # Received in SIA if sub point 2 used | Monitoring Point # Received in SIA if sub point 3 used |
|--|------------------|---------------------------------------|---|---|---|
| 1-13-0 | User Defined | 10D0 | 10D1 | 10D2 | 10D3 |
| 1-14-0 | User Defined | 10E0 | 10E1 | 10E2 | 10E3 |
| 1-15-0 | User Defined | 10F0 | 10F1 | 10F2 | 10F3 |
| 1-16-0 | User Defined | 1100 | 1101 | 1102 | 1103 |
| 1-17-0 | User Defined | 1110 | 1111 | 1112 | 1113 |
| 1-18-0 | User Defined | 1120 | 1121 | 1122 | 1123 |
| 1-19-0 | User Defined | 1130 | 1131 | 1132 | 1133 |
| 1-20-0 | User Defined | 1140 | 1141 | 1142 | 1143 |
| 1-21-0 | User Defined | 1150 | 1151 | 1152 | 1153 |
| 1-22-0 | User Defined | 1160 | 1161 | 1162 | 1163 |
| 1-23-0 | User Defined | 1170 | 1171 | 1172 | 1173 |
| 1-24-0 | User Defined | 1180 | 1181 | 1182 | 1183 |
| 1-25-0 | User Defined | 1190 | 1191 | 1192 | 1193 |
| 1-26-0 | User Defined | 11A0 | 11A1 | 11A2 | 11A3 |
| 1-27-0 | User Defined | 11B0 | 11B1 | 11B2 | 11B3 |
| 1-28-0 | User Defined | 11C0 | 11C1 | 11C2 | 11C3 |
| 1-29-0 | User Defined | 11D0 | 11D1 | 11D2 | 11D3 |
| 1-30-0 | User Defined | 11E0 | 11E1 | 11E2 | 11E3 |
| 1-31-0 | User Defined | 11F0 | 11F1 | 11F2 | 11F3 |
| 1-32-0 | User Defined | 1200 | 1201 | 1202 | 1203 |
| 1-33-0 | User Defined | 1210 | 1211 | 1212 | 1213 |
| 1-34-0 | User Defined | 1220 | 1221 | 1222 | 1223 |
| 1-35-0 | User Defined | 1230 | 1231 | 1232 | 1233 |

| Logical Point # [Loop-Point-SubPoint] | Point Definition | Monitoring Point # Received in SIA | Monitoring Point # Received in SIA if sub point 1 used | Monitoring Point # Received in SIA if sub point 2 used | Monitoring Point # Received in SIA if sub point 3 used |
|--|-----------------------------|---|---|---|---|
| 1-36-0 | User Defined | 1240 | 1241 | 1242 | 1243 |
| 1-37-0 | User Defined | 1250 | 1251 | 1252 | 1253 |
| 1-38-0 | User Defined | 1260 | 1261 | 1262 | 1263 |
| 1-39-0 | User Defined | 1270 | 1271 | 1272 | 1273 |
| 1-40-0 | User Defined | 1280 | 1281 | 1282 | 1283 |
| 1-41-0 | User Defined | 1290 | 1291 | 1292 | 1293 |
| 1-42-0 | User Defined | 12A0 | 12A1 | 12A2 | 12A3 |
| 1-43-0 | User Defined | 12B0 | 12B1 | 12B2 | 12B3 |
| 1-44-0 | User Defined | 12C0 | 12C1 | 12C2 | 12C3 |
| 1-45-0 | User Defined | 12D0 | 12D1 | 12D2 | 12D3 |
| 1-46-0 | User Defined | 12E0 | 12E1 | 12E2 | 12E3 |
| 1-47-0 | User Defined | 12F0 | 12F1 | 12F2 | 12F3 |
| 1-48-0 | User Defined | 1300 | 1301 | 1302 | 1303 |
| 1-49-0 | User Defined | 1310 | 1311 | 1312 | 1313 |
| 1-50-0 | User Defined | 1320 | 1321 | 1322 | 1323 |
| 1-51-0 | User Defined | 1330 | 1331 | 1332 | 1333 |
| 1-52-0 | User Defined | 1340 | 1341 | 1342 | 1343 |
| 1-53-0 | User Defined | 1350 | 1351 | 1352 | 1353 |
| 1-54-0 | User Defined | 1360 | 1361 | 1362 | 1363 |
| 1-55-0 | User Defined | 1370 | 1371 | 1372 | 1373 |
| 1-56-0 | User Defined | 1380 | 1381 | 1382 | 1383 |
| 1-57-0 | User Defined | 1390 | 1391 | 1392 | 1393 |
| 1-58-0 | User Defined | 13A0 | 13A1 | 13A2 | 13A3 |

| Logical Point # [Loop-Point-SubPoint] | Point Definition | Monitoring Point # Received in SIA | Monitoring Point # Received in SIA if sub point 1 used | Monitoring Point # Received in SIA if sub point 2 used | Monitoring Point # Received in SIA if sub point 3 used |
|--|------------------|---------------------------------------|---|---|---|
| 1-59-0 | User Defined | 13B0 | 13B1 | 13B2 | 13B3 |
| 1-60-0 | User Defined | 13C0 | 13C1 | 13C2 | 13C3 |
| 1-61-0 | User Defined | 13D0 | 13D1 | 13D2 | 13D3 |
| 1-62-0 | User Defined | 13E0 | 13E1 | 13E2 | 13E3 |
| 1-63-0 | User Defined | 13F0 | 13F1 | 13F2 | 13F3 |
| 1-64-0 | User Defined | 1400 | 1401 | 1402 | 1403 |
| 1-65-0 | User Defined | 1410 | 1411 | 1412 | 1413 |
| 1-66-0 | User Defined | 1420 | 1421 | 1422 | 1423 |
| 1-67-0 | User Defined | 1430 | 1431 | 1432 | 1433 |
| 1-68-0 | User Defined | 1440 | 1441 | 1442 | 1443 |
| 1-69-0 | User Defined | 1450 | 1451 | 1452 | 1453 |
| 1-70-0 | User Defined | 1460 | 1461 | 1462 | 1463 |
| 1-71-0 | User Defined | 1470 | 1471 | 1472 | 1473 |
| 1-72-0 | User Defined | 1480 | 1481 | 1482 | 1483 |
| 1-73-0 | User Defined | 1490 | 1491 | 1492 | 1493 |
| 1-74-0 | User Defined | 14A0 | 14A1 | 14A2 | 14A3 |
| 1-75-0 | User Defined | 14B0 | 14B1 | 14B2 | 14B3 |
| 1-76-0 | User Defined | 14C0 | 14C1 | 14C2 | 14C3 |
| 1-77-0 | User Defined | 14D0 | 14D1 | 14D2 | 14D3 |
| 1-78-0 | User Defined | 14E0 | 14E1 | 14E2 | 14E3 |
| 1-79-0 | User Defined | 14F0 | 14F1 | 14F2 | 14F3 |
| 1-80-0 | User Defined | 1500 | 1501 | 1502 | 1503 |
| 1-81-0 | User Defined | 1510 | 1511 | 1512 | 1513 |

| Logical Point # [Loop-Point-SubPoint] | Point Definition | Monitoring Point # Received in SIA | Monitoring Point # Received in SIA if sub point 1 used | Monitoring Point # Received in SIA if sub point 2 used | Monitoring Point # Received in SIA if sub point 3 used |
|--|-----------------------------|---|---|---|---|
| 1-82-0 | User Defined | 1520 | 1521 | 1522 | 1523 |
| 1-83-0 | User Defined | 1530 | 1531 | 1532 | 1533 |
| 1-84-0 | User Defined | 1540 | 1541 | 1542 | 1543 |
| 1-85-0 | User Defined | 1550 | 1551 | 1552 | 1553 |
| 1-86-0 | User Defined | 1560 | 1561 | 1562 | 1563 |
| 1-87-0 | User Defined | 1570 | 1571 | 1572 | 1573 |
| 1-88-0 | User Defined | 1580 | 1581 | 1582 | 1583 |
| 1-89-0 | User Defined | 1590 | 1591 | 1592 | 1593 |
| 1-90-0 | User Defined | 15A0 | 15A1 | 15A2 | 15A3 |
| 1-91-0 | User Defined | 15B0 | 15B1 | 15B2 | 15B3 |
| 1-92-0 | User Defined | 15C0 | 15C1 | 15C2 | 15C3 |
| 1-93-0 | User Defined | 15D0 | 15D1 | 15D2 | 15D3 |
| 1-94-0 | User Defined | 15E0 | 15E1 | 15E2 | 15E3 |
| 1-95-0 | User Defined | 15F0 | 15F1 | 15F2 | 15F3 |
| 1-96-0 | User Defined | 1600 | 1601 | 1602 | 1603 |
| 1-97-0 | User Defined | 1610 | 1611 | 1612 | 1613 |
| 1-98-0 | User Defined | 1620 | 1621 | 1622 | 1623 |
| 1-99-0 | User Defined | 1630 | 1631 | 1632 | 1633 |
| 1-100-0 | User Defined | 1640 | 1641 | 1642 | 1643 |
| 1-101-0 | User Defined | 1650 | 1651 | 1652 | 1653 |
| 1-102-0 | User Defined | 1660 | 1661 | 1662 | 1663 |
| 1-103-0 | User Defined | 1670 | 1671 | 1672 | 1673 |
| 1-104-0 | User Defined | 1680 | 1681 | 1682 | 1683 |

| Logical Point # [Loop-Point-SubPoint] | Point Definition | Monitoring Point # Received in SIA | Monitoring Point # Received in SIA if sub point 1 used | Monitoring Point # Received in SIA if sub point 2 used | Monitoring Point # Received in SIA if sub point 3 used |
|--|-----------------------------|---|---|---|---|
| 1-105-0 | User Defined | 1690 | 1691 | 1692 | 1693 |
| 1-106-0 | User Defined | 16A0 | 16A1 | 16A2 | 16A3 |
| 1-107-0 | User Defined | 16B0 | 16B1 | 16B2 | 16B3 |
| 1-108-0 | User Defined | 16C0 | 16C1 | 16C2 | 16C3 |
| 1-109-0 | User Defined | 16D0 | 16D1 | 16D2 | 16D3 |
| 1-110-0 | User Defined | 16E0 | 16E1 | 16E2 | 16E3 |
| 1-111-0 | User Defined | 16F0 | 16F1 | 16F2 | 16F3 |
| 1-112-0 | User Defined | 1700 | 1701 | 1702 | 1703 |
| 1-113-0 | User Defined | 1710 | 1711 | 1712 | 1713 |
| 1-114-0 | User Defined | 1720 | 1721 | 1722 | 1723 |
| 1-115-0 | User Defined | 1730 | 1731 | 1732 | 1733 |
| 1-116-0 | User Defined | 1740 | 1741 | 1742 | 1743 |
| 1-117-0 | User Defined | 1750 | 1751 | 1752 | 1753 |
| 1-118-0 | User Defined | 1760 | 1761 | 1762 | 1763 |
| 1-119-0 | User Defined | 1770 | 1771 | 1772 | 1773 |
| 1-120-0 | User Defined | 1780 | 1781 | 1782 | 1783 |
| 1-121-0 | User Defined | 1790 | 1791 | 1792 | 1793 |
| 1-122-0 | User Defined | 17A0 | 17A1 | 17A2 | 17A3 |
| 1-123-0 | User Defined | 17B0 | 17B1 | 17B2 | 17B3 |
| 1-124-0 | User Defined | 17C0 | 17C1 | 17C2 | 17C3 |
| 1-125-0 | User Defined | 17D0 | 17D1 | 17D2 | 17D3 |
| 1-126-0 | User Defined | 17E0 | 17E1 | 17E2 | 17E3 |
| 2-01-0 | User Defined | 2010 | 2011 | 2012 | 2013 |

| Logical Point # [Loop-Point-SubPoint] | Point Definition | Monitoring Point # Received in SIA | Monitoring Point # Received in SIA if sub point 1 used | Monitoring Point # Received in SIA if sub point 2 used | Monitoring Point # Received in SIA if sub point 3 used |
|--|-----------------------------|---|---|---|---|
| 2-02-0 | User Defined | 2020 | 2021 | 2022 | 2023 |
| 2-03-0 | User Defined | 2030 | 2031 | 2032 | 2033 |
| 2-04-0 | User Defined | 2040 | 2041 | 2042 | 2043 |
| 2-05-0 | User Defined | 2050 | 2051 | 2052 | 2053 |
| 2-06-0 | User Defined | 2060 | 2061 | 2062 | 2063 |
| 2-07-0 | User Defined | 2070 | 2071 | 2072 | 2073 |
| 2-08-0 | User Defined | 2080 | 2081 | 2082 | 2083 |
| 2-09-0 | User Defined | 2090 | 2091 | 2092 | 2093 |
| 2-10-0 | User Defined | 20A0 | 20A1 | 20A2 | 20A3 |
| 2-11-0 | User Defined | 20B0 | 20B1 | 20B2 | 20B3 |
| 2-12-0 | User Defined | 20C0 | 20C1 | 20C2 | 20C3 |
| 2-13-0 | User Defined | 20D0 | 20D1 | 20D2 | 20D3 |
| 2-14-0 | User Defined | 20E0 | 20E1 | 20E2 | 20E3 |
| 2-15-0 | User Defined | 20F0 | 20F1 | 20F2 | 20F3 |
| 2-16-0 | User Defined | 2100 | 2101 | 2102 | 2103 |
| 2-17-0 | User Defined | 2110 | 2111 | 2112 | 2113 |
| 2-18-0 | User Defined | 2120 | 2121 | 2122 | 2123 |
| 2-19-0 | User Defined | 2130 | 2131 | 2132 | 2133 |
| 2-20-0 | User Defined | 2140 | 2141 | 2142 | 2143 |
| 2-21-0 | User Defined | 2150 | 2151 | 2152 | 2153 |
| 2-22-0 | User Defined | 2160 | 2161 | 2162 | 2163 |
| 2-23-0 | User Defined | 2170 | 2171 | 2172 | 2173 |
| 2-24-0 | User Defined | 2180 | 2181 | 2182 | 2183 |

| Logical Point # [Loop-Point-SubPoint] | Point Definition | Monitoring Point # Received in SIA | Monitoring Point # Received in SIA if sub point 1 used | Monitoring Point # Received in SIA if sub point 2 used | Monitoring Point # Received in SIA if sub point 3 used |
|--|------------------|---------------------------------------|---|---|---|
| 2-25-0 | User Defined | 2190 | 2191 | 2192 | 2193 |
| 2-26-0 | User Defined | 21A0 | 21A1 | 21A2 | 21A3 |
| 2-27-0 | User Defined | 21B0 | 21B1 | 21B2 | 21B3 |
| 2-28-0 | User Defined | 21C0 | 21C1 | 21C2 | 21C3 |
| 2-29-0 | User Defined | 21D0 | 21D1 | 21D2 | 21D3 |
| 2-30-0 | User Defined | 21E0 | 21E1 | 21E2 | 21E3 |
| 2-31-0 | User Defined | 21F0 | 21F1 | 21F2 | 21F3 |
| 2-32-0 | User Defined | 2200 | 2201 | 2202 | 2203 |
| 2-33-0 | User Defined | 2210 | 2211 | 2212 | 2213 |
| 2-34-0 | User Defined | 2220 | 2221 | 2222 | 2223 |
| 2-35-0 | User Defined | 2230 | 2231 | 2232 | 2233 |
| 2-36-0 | User Defined | 2240 | 2241 | 2242 | 2243 |
| 2-37-0 | User Defined | 2250 | 2251 | 2252 | 2253 |
| 2-38-0 | User Defined | 2260 | 2261 | 2262 | 2263 |
| 2-39-0 | User Defined | 2270 | 2271 | 2272 | 2273 |
| 2-40-0 | User Defined | 2280 | 2281 | 2282 | 2283 |
| 2-41-0 | User Defined | 2290 | 2291 | 2292 | 2293 |
| 2-42-0 | User Defined | 22A0 | 22A1 | 22A2 | 22A3 |
| 2-43-0 | User Defined | 22B0 | 22B1 | 22B2 | 22B3 |
| 2-44-0 | User Defined | 22C0 | 22C1 | 22C2 | 22C3 |
| 2-45-0 | User Defined | 22D0 | 22D1 | 22D2 | 22D3 |
| 2-46-0 | User Defined | 22E0 | 22E1 | 22E2 | 22E3 |
| 2-47-0 | User Defined | 22F0 | 22F1 | 22F2 | 22F3 |

| Logical Point # [Loop-Point-SubPoint] | Point Definition | Monitoring Point # Received in SIA | Monitoring Point # Received in SIA if sub point 1 used | Monitoring Point # Received in SIA if sub point 2 used | Monitoring Point # Received in SIA if sub point 3 used |
|--|------------------|---------------------------------------|---|---|---|
| 2-48-0 | User Defined | 2300 | 2301 | 2302 | 2303 |
| 2-49-0 | User Defined | 2310 | 2311 | 2312 | 2313 |
| 2-50-0 | User Defined | 2320 | 2321 | 2322 | 2323 |
| 2-51-0 | User Defined | 2330 | 2331 | 2332 | 2333 |
| 2-52-0 | User Defined | 2340 | 2341 | 2342 | 2343 |
| 2-53-0 | User Defined | 2350 | 2351 | 2352 | 2353 |
| 2-54-0 | User Defined | 2360 | 2361 | 2362 | 2363 |
| 2-55-0 | User Defined | 2370 | 2371 | 2372 | 2373 |
| 2-56-0 | User Defined | 2380 | 2381 | 2382 | 2383 |
| 2-57-0 | User Defined | 2390 | 2391 | 2392 | 2393 |
| 2-58-0 | User Defined | 23A0 | 23A1 | 23A2 | 23A3 |
| 2-59-0 | User Defined | 23B0 | 23B1 | 23B2 | 23B3 |
| 2-60-0 | User Defined | 23C0 | 23C1 | 23C2 | 23C3 |
| 2-61-0 | User Defined | 23D0 | 23D1 | 23D2 | 23D3 |
| 2-62-0 | User Defined | 23E0 | 23E1 | 23E2 | 23E3 |
| 2-63-0 | User Defined | 23F0 | 23F1 | 23F2 | 23F3 |
| 2-64-0 | User Defined | 2400 | 2401 | 2402 | 2403 |
| 2-65-0 | User Defined | 2410 | 2411 | 2412 | 2413 |
| 2-66-0 | User Defined | 2420 | 2421 | 2422 | 2423 |
| 2-67-0 | User Defined | 2430 | 2431 | 2432 | 2433 |
| 2-68-0 | User Defined | 2440 | 2441 | 2442 | 2443 |
| 2-69-0 | User Defined | 2450 | 2451 | 2452 | 2453 |
| 2-70-0 | User Defined | 2460 | 2461 | 2462 | 2463 |

| Logical Point # [Loop-Point-SubPoint] | Point Definition | Monitoring Point # Received in SIA | Monitoring Point # Received in SIA if sub point 1 used | Monitoring Point # Received in SIA if sub point 2 used | Monitoring Point # Received in SIA if sub point 3 used |
|--|-----------------------------|---|---|---|---|
| 2-71-0 | User Defined | 2470 | 2471 | 2472 | 2473 |
| 2-72-0 | User Defined | 2480 | 2481 | 2482 | 2483 |
| 2-73-0 | User Defined | 2490 | 2491 | 2492 | 2493 |
| 2-74-0 | User Defined | 24A0 | 24A1 | 24A2 | 24A3 |
| 2-75-0 | User Defined | 24B0 | 24B1 | 24B2 | 24B3 |
| 2-76-0 | User Defined | 24C0 | 24C1 | 24C2 | 24C3 |
| 2-77-0 | User Defined | 24D0 | 24D1 | 24D2 | 24D3 |
| 2-78-0 | User Defined | 24E0 | 24E1 | 24E2 | 24E3 |
| 2-79-0 | User Defined | 24F0 | 24F1 | 24F2 | 24F3 |
| 2-80-0 | User Defined | 2500 | 2501 | 2502 | 2503 |
| 2-81-0 | User Defined | 2510 | 2511 | 2512 | 2513 |
| 2-82-0 | User Defined | 2520 | 2521 | 2522 | 2523 |
| 2-83-0 | User Defined | 2530 | 2531 | 2532 | 2533 |
| 2-84-0 | User Defined | 2540 | 2541 | 2542 | 2543 |
| 2-85-0 | User Defined | 2550 | 2551 | 2552 | 2553 |
| 2-86-0 | User Defined | 2560 | 2561 | 2562 | 2563 |
| 2-87-0 | User Defined | 2570 | 2571 | 2572 | 2573 |
| 2-88-0 | User Defined | 2580 | 2581 | 2582 | 2583 |
| 2-89-0 | User Defined | 2590 | 2591 | 2592 | 2593 |
| 2-90-0 | User Defined | 25A0 | 25A1 | 25A2 | 25A3 |
| 2-91-0 | User Defined | 25B0 | 25B1 | 25B2 | 25B3 |
| 2-92-0 | User Defined | 25C0 | 25C1 | 25C2 | 25C3 |
| 2-93-0 | User Defined | 25D0 | 25D1 | 25D2 | 25D3 |

| Logical Point # [Loop-Point-SubPoint] | Point Definition | Monitoring Point # Received in SIA | Monitoring Point # Received in SIA if sub point 1 used | Monitoring Point # Received in SIA if sub point 2 used | Monitoring Point # Received in SIA if sub point 3 used |
|--|-----------------------------|---|---|---|---|
| 2-94-0 | User Defined | 25E0 | 25E1 | 25E2 | 25E3 |
| 2-95-0 | User Defined | 25F0 | 25F1 | 25F2 | 25F3 |
| 2-96-0 | User Defined | 2600 | 2601 | 2602 | 2603 |
| 2-97-0 | User Defined | 2610 | 2611 | 2612 | 2613 |
| 2-98-0 | User Defined | 2620 | 2621 | 2622 | 2623 |
| 2-99-0 | User Defined | 2630 | 2631 | 2632 | 2633 |
| 2-100-0 | User Defined | 2640 | 2641 | 2642 | 2643 |
| 2-101-0 | User Defined | 2650 | 2651 | 2652 | 2653 |
| 2-102-0 | User Defined | 2660 | 2661 | 2662 | 2663 |
| 2-103-0 | User Defined | 2670 | 2671 | 2672 | 2673 |
| 2-104-0 | User Defined | 2680 | 2681 | 2682 | 2683 |
| 2-105-0 | User Defined | 2690 | 2691 | 2692 | 2693 |
| 2-106-0 | User Defined | 26A0 | 26A1 | 26A2 | 26A3 |
| 2-107-0 | User Defined | 26B0 | 26B1 | 26B2 | 26B3 |
| 2-108-0 | User Defined | 26C0 | 26C1 | 26C2 | 26C3 |
| 2-109-0 | User Defined | 26D0 | 26D1 | 26D2 | 26D3 |
| 2-110-0 | User Defined | 26E0 | 26E1 | 26E2 | 26E3 |
| 2-111-0 | User Defined | 26F0 | 26F1 | 26F2 | 26F3 |
| 2-112-0 | User Defined | 2700 | 2701 | 2702 | 2703 |
| 2-113-0 | User Defined | 2710 | 2711 | 2712 | 2713 |
| 2-114-0 | User Defined | 2720 | 2721 | 2722 | 2723 |
| 2-115-0 | User Defined | 2730 | 2731 | 2732 | 2733 |
| 2-116-0 | User Defined | 2740 | 2741 | 2742 | 2743 |

| Logical Point # [Loop-Point-SubPoint] | Point Definition | Monitoring Point # Received in SIA | Monitoring Point # Received in SIA if sub point 1 used | Monitoring Point # Received in SIA if sub point 2 used | Monitoring Point # Received in SIA if sub point 3 used |
|--|------------------|---------------------------------------|---|---|---|
| 2-117-0 | User Defined | 2750 | 2751 | 2752 | 2753 |
| 2-118-0 | User Defined | 2760 | 2761 | 2762 | 2763 |
| 2-119-0 | User Defined | 2770 | 2771 | 2772 | 2773 |
| 2-120-0 | User Defined | 2780 | 2781 | 2782 | 2783 |
| 2-121-0 | User Defined | 2790 | 2791 | 2792 | 2793 |
| 2-122-0 | User Defined | 27A0 | 27A1 | 27A2 | 27A3 |
| 2-123-0 | User Defined | 27B0 | 27B1 | 27B2 | 27B3 |
| 2-124-0 | User Defined | 27C0 | 27C1 | 27C2 | 27C3 |
| 2-125-0 | User Defined | 27D0 | 27D1 | 27D2 | 27D3 |
| 2-126-0 | User Defined | 27E0 | 27E1 | 27E2 | 27E3 |

Contact ID Conversion

| Logical Point # [Loop-Point-SubPoint] | Point Definition | Monitoring Point # Received in Contact ID |
|--|-----------------------|--|
| Panel Output | NAC 1 Fault | 020 |
| Panel Output | NAC 2 Fault | 021 |
| Panel Input | Programmable Function | 010 |
| Panel Input | Fire Drill | 009 |
| Panel Input | Reset | 011 |
| Panel Input | Alarm Silence | 012 |
| 1-01-0 | User Defined | 101 |
| 1-02-0 | User Defined | 102 |
| 1-03-0 | User Defined | 103 |
| 1-04-0 | User Defined | 104 |

| Logical Point # [Loop-Point-SubPoint] | Point Definition | Monitoring Point # Received in Contact ID |
|--|-------------------------|--|
| 1-05-0 | User Defined | 105 |
| 1-06-0 | User Defined | 106 |
| 1-07-0 | User Defined | 107 |
| 1-08-0 | User Defined | 108 |
| 1-09-0 | User Defined | 109 |
| 1-10-0 | User Defined | 110 |
| 1-11-0 | User Defined | 111 |
| 1-12-0 | User Defined | 112 |
| 1-13-0 | User Defined | 113 |
| 1-14-0 | User Defined | 114 |
| 1-15-0 | User Defined | 115 |
| 1-16-0 | User Defined | 116 |
| 1-17-0 | User Defined | 117 |
| 1-18-0 | User Defined | 118 |
| 1-19-0 | User Defined | 119 |
| 1-20-0 | User Defined | 120 |
| 1-21-0 | User Defined | 121 |
| 1-22-0 | User Defined | 122 |
| 1-23-0 | User Defined | 123 |
| 1-24-0 | User Defined | 124 |
| 1-25-0 | User Defined | 125 |
| 1-26-0 | User Defined | 126 |
| 1-27-0 | User Defined | 127 |
| 1-28-0 | User Defined | 128 |

| Logical Point # [Loop-Point-SubPoint] | Point Definition | Monitoring Point # Received in Contact ID |
|--|------------------|--|
| 1-29-0 | User Defined | 129 |
| 1-30-0 | User Defined | 130 |
| 1-31-0 | User Defined | 131 |
| 1-32-0 | User Defined | 132 |
| 1-33-0 | User Defined | 133 |
| 1-34-0 | User Defined | 134 |
| 1-35-0 | User Defined | 135 |
| 1-36-0 | User Defined | 136 |
| 1-37-0 | User Defined | 137 |
| 1-38-0 | User Defined | 138 |
| 1-39-0 | User Defined | 139 |
| 1-40-0 | User Defined | 140 |
| 1-41-0 | User Defined | 141 |
| 1-42-0 | User Defined | 142 |
| 1-43-0 | User Defined | 143 |
| 1-44-0 | User Defined | 144 |
| 1-45-0 | User Defined | 145 |
| 1-46-0 | User Defined | 146 |
| 1-47-0 | User Defined | 147 |
| 1-48-0 | User Defined | 148 |
| 1-49-0 | User Defined | 149 |
| 1-50-0 | User Defined | 150 |
| 1-51-0 | User Defined | 151 |
| 1-52-0 | User Defined | 152 |
| 1-53-0 | User Defined | 153 |

| Logical Point # [Loop-Point-SubPoint] | Point Definition | Monitoring Point # Received in Contact ID |
|--|-------------------------|--|
| 1-54-0 | User Defined | 154 |
| 1-55-0 | User Defined | 155 |
| 1-56-0 | User Defined | 156 |
| 1-57-0 | User Defined | 157 |
| 1-58-0 | User Defined | 158 |
| 1-59-0 | User Defined | 159 |
| 1-60-0 | User Defined | 160 |
| 1-61-0 | User Defined | 161 |
| 1-62-0 | User Defined | 162 |
| 1-63-0 | User Defined | 163 |
| 1-64-0 | User Defined | 164 |
| 1-65-0 | User Defined | 165 |
| 1-66-0 | User Defined | 166 |
| 1-67-0 | User Defined | 167 |
| 1-68-0 | User Defined | 168 |
| 1-69-0 | User Defined | 169 |
| 1-70-0 | User Defined | 170 |
| 1-71-0 | User Defined | 171 |
| 1-72-0 | User Defined | 172 |
| 1-73-0 | User Defined | 173 |
| 1-74-0 | User Defined | 174 |
| 1-75-0 | User Defined | 175 |
| 1-76-0 | User Defined | 176 |
| 1-77-0 | User Defined | 177 |
| 1-78-0 | User Defined | 178 |

| Logical Point # [Loop-Point-SubPoint] | Point Definition | Monitoring Point # Received in Contact ID |
|--|-------------------------|--|
| 1-79-0 | User Defined | 179 |
| 1-80-0 | User Defined | 180 |
| 1-81-0 | User Defined | 181 |
| 1-82-0 | User Defined | 182 |
| 1-83-0 | User Defined | 183 |
| 1-84-0 | User Defined | 184 |
| 1-85-0 | User Defined | 185 |
| 1-86-0 | User Defined | 186 |
| 1-87-0 | User Defined | 187 |
| 1-88-0 | User Defined | 188 |
| 1-89-0 | User Defined | 189 |
| 1-90-0 | User Defined | 190 |
| 1-91-0 | User Defined | 191 |
| 1-92-0 | User Defined | 192 |
| 1-93-0 | User Defined | 193 |
| 1-94-0 | User Defined | 194 |
| 1-95-0 | User Defined | 195 |
| 1-96-0 | User Defined | 196 |
| 1-97-0 | User Defined | 197 |
| 1-98-0 | User Defined | 198 |
| 1-99-0 | User Defined | 199 |
| 1-100-0 | User Defined | 110 |
| 1-101-0 | User Defined | 110 |
| 1-102-0 | User Defined | 110 |
| 1-103-0 | User Defined | 110 |

| Logical Point # [Loop-Point-SubPoint] | Point Definition | Monitoring Point # Received in Contact ID |
|--|-------------------------|--|
| 1-104-0 | User Defined | 110 |
| 1-105-0 | User Defined | 110 |
| 1-106-0 | User Defined | 110 |
| 1-107-0 | User Defined | 110 |
| 1-108-0 | User Defined | 110 |
| 1-109-0 | User Defined | 110 |
| 1-110-0 | User Defined | 111 |
| 1-111-0 | User Defined | 111 |
| 1-112-0 | User Defined | 111 |
| 1-113-0 | User Defined | 111 |
| 1-114-0 | User Defined | 111 |
| 1-115-0 | User Defined | 111 |
| 1-116-0 | User Defined | 111 |
| 1-117-0 | User Defined | 111 |
| 1-118-0 | User Defined | 111 |
| 1-119-0 | User Defined | 111 |
| 1-120-0 | User Defined | 112 |
| 1-121-0 | User Defined | 112 |
| 1-122-0 | User Defined | 112 |
| 1-123-0 | User Defined | 112 |
| 1-124-0 | User Defined | 112 |
| 1-125-0 | User Defined | 112 |
| 1-126-0 | User Defined | 112 |
| 2-01-0 | User Defined | 201 |
| 2-02-0 | User Defined | 202 |

| Logical Point # [Loop-Point-SubPoint] | Point Definition | Monitoring Point # Received in Contact ID |
|--|-------------------------|--|
| 2-03-0 | User Defined | 203 |
| 2-04-0 | User Defined | 204 |
| 2-05-0 | User Defined | 205 |
| 2-06-0 | User Defined | 206 |
| 2-07-0 | User Defined | 207 |
| 2-08-0 | User Defined | 208 |
| 2-09-0 | User Defined | 209 |
| 2-10-0 | User Defined | 210 |
| 2-11-0 | User Defined | 211 |
| 2-12-0 | User Defined | 212 |
| 2-13-0 | User Defined | 213 |
| 2-14-0 | User Defined | 214 |
| 2-15-0 | User Defined | 215 |
| 2-16-0 | User Defined | 216 |
| 2-17-0 | User Defined | 217 |
| 2-18-0 | User Defined | 218 |
| 2-19-0 | User Defined | 219 |
| 2-20-0 | User Defined | 220 |
| 2-21-0 | User Defined | 221 |
| 2-22-0 | User Defined | 222 |
| 2-23-0 | User Defined | 223 |
| 2-24-0 | User Defined | 224 |
| 2-25-0 | User Defined | 225 |
| 2-26-0 | User Defined | 226 |
| 2-27-0 | User Defined | 227 |

| Logical Point # [Loop-Point-SubPoint] | Point Definition | Monitoring Point # Received in Contact ID |
|--|-------------------------|--|
| 2-28-0 | User Defined | 228 |
| 2-29-0 | User Defined | 229 |
| 2-30-0 | User Defined | 230 |
| 2-31-0 | User Defined | 231 |
| 2-32-0 | User Defined | 232 |
| 2-33-0 | User Defined | 233 |
| 2-34-0 | User Defined | 234 |
| 2-35-0 | User Defined | 235 |
| 2-36-0 | User Defined | 236 |
| 2-37-0 | User Defined | 237 |
| 2-38-0 | User Defined | 238 |
| 2-39-0 | User Defined | 239 |
| 2-40-0 | User Defined | 240 |
| 2-41-0 | User Defined | 241 |
| 2-42-0 | User Defined | 242 |
| 2-43-0 | User Defined | 243 |
| 2-44-0 | User Defined | 244 |
| 2-45-0 | User Defined | 245 |
| 2-46-0 | User Defined | 246 |
| 2-47-0 | User Defined | 247 |
| 2-48-0 | User Defined | 248 |
| 2-49-0 | User Defined | 249 |
| 2-50-0 | User Defined | 250 |
| 2-51-0 | User Defined | 251 |
| 2-52-0 | User Defined | 252 |

| Logical Point # [Loop-Point-SubPoint] | Point Definition | Monitoring Point # Received in Contact ID |
|--|-------------------------|--|
| 2-53-0 | User Defined | 253 |
| 2-54-0 | User Defined | 254 |
| 2-55-0 | User Defined | 255 |
| 2-56-0 | User Defined | 256 |
| 2-57-0 | User Defined | 257 |
| 2-58-0 | User Defined | 258 |
| 2-59-0 | User Defined | 259 |
| 2-60-0 | User Defined | 260 |
| 2-61-0 | User Defined | 261 |
| 2-62-0 | User Defined | 262 |
| 2-63-0 | User Defined | 263 |
| 2-64-0 | User Defined | 264 |
| 2-65-0 | User Defined | 265 |
| 2-66-0 | User Defined | 266 |
| 2-67-0 | User Defined | 267 |
| 2-68-0 | User Defined | 268 |
| 2-69-0 | User Defined | 269 |
| 2-70-0 | User Defined | 270 |
| 2-71-0 | User Defined | 271 |
| 2-72-0 | User Defined | 272 |
| 2-73-0 | User Defined | 273 |
| 2-74-0 | User Defined | 274 |
| 2-75-0 | User Defined | 275 |
| 2-76-0 | User Defined | 276 |
| 2-77-0 | User Defined | 277 |

| Logical Point # [Loop-Point-SubPoint] | Point Definition | Monitoring Point # Received in Contact ID |
|--|-------------------------|--|
| 2-78-0 | User Defined | 278 |
| 2-79-0 | User Defined | 279 |
| 2-80-0 | User Defined | 280 |
| 2-81-0 | User Defined | 281 |
| 2-82-0 | User Defined | 282 |
| 2-83-0 | User Defined | 283 |
| 2-84-0 | User Defined | 284 |
| 2-85-0 | User Defined | 285 |
| 2-86-0 | User Defined | 286 |
| 2-87-0 | User Defined | 287 |
| 2-88-0 | User Defined | 288 |
| 2-89-0 | User Defined | 289 |
| 2-90-0 | User Defined | 290 |
| 2-91-0 | User Defined | 291 |
| 2-92-0 | User Defined | 292 |
| 2-93-0 | User Defined | 293 |
| 2-94-0 | User Defined | 294 |
| 2-95-0 | User Defined | 295 |
| 2-96-0 | User Defined | 296 |
| 2-97-0 | User Defined | 297 |
| 2-98-0 | User Defined | 298 |
| 2-99-0 | User Defined | 299 |
| 2-100-0 | User Defined | 210 |
| 2-101-0 | User Defined | 210 |
| 2-102-0 | User Defined | 210 |

| Logical Point # [Loop-Point-SubPoint] | Point Definition | Monitoring Point # Received in Contact ID |
|--|-------------------------|--|
| 2-103-0 | User Defined | 210 |
| 2-104-0 | User Defined | 210 |
| 2-105-0 | User Defined | 210 |
| 2-106-0 | User Defined | 210 |
| 2-107-0 | User Defined | 210 |
| 2-108-0 | User Defined | 210 |
| 2-109-0 | User Defined | 210 |
| 2-110-0 | User Defined | 210 |
| 2-111-0 | User Defined | 211 |
| 2-112-0 | User Defined | 211 |
| 2-113-0 | User Defined | 211 |
| 2-114-0 | User Defined | 211 |
| 2-115-0 | User Defined | 211 |
| 2-116-0 | User Defined | 211 |
| 2-117-0 | User Defined | 211 |
| 2-118-0 | User Defined | 211 |
| 2-119-0 | User Defined | 211 |
| 2-120-0 | User Defined | 212 |
| 2-121-0 | User Defined | 212 |
| 2-122-0 | User Defined | 212 |
| 2-123-0 | User Defined | 212 |
| 2-124-0 | User Defined | 212 |
| 2-125-0 | User Defined | 212 |
| 2-126-0 | User Defined | 212 |

Event Code Translation

| Input Action | Device Setting | SIA Event Reporting Code | SIA Event Restoring Code | Contact ID Reporting Code | Contact ID Restoring Code |
|-------------------|----------------------------|--------------------------|--------------------------|---------------------------|---------------------------|
| Fire | Manual Pull Station | FA | FH | E110 | R110 |
| | Waterflow Alarm | SA | SH | E113 | R113 |
| | Duct Detector | FA | FH | E110 | R110 |
| | Detector | FA | FH | E110 | R110 |
| | General Purpose N/O EOL | FA | FH | E110 | R110 |
| | General Purpose N/C EOL | FA | FH | E110 | R110 |
| | General Purpose N/C no EOL | FA | FH | E110 | R110 |
| | Waterflow Alarm N/S | SA | SH | E113 | R113 |
| Fire Drill | | FI | FK | E604 | R604 |
| Trouble | General Purpose N/O EOL | FT | FJ | E373 | R373 |
| | General Purpose N/C EOL | FT | FJ | E373 | R373 |
| | General Purpose N/C no EOL | FT | FJ | E373 | R373 |
| PreAlarm | General Purpose N/O EOL | FT | FJ | E118 | R118 |
| | General Purpose N/C EOL | FT | FJ | E118 | R118 |
| | General Purpose N/C no EOL | FT | FJ | E118 | R118 |

| Input Action | Device Setting | SIA Event Reporting Code | SIA Event Restoring Code | Contact ID Reporting Code | Contact ID Restoring Code |
|--------------------|----------------------------------|--------------------------|--------------------------|---------------------------|---------------------------|
| Supervisory | Waterflow Alarm | FS | FV | E200 | R200 |
| | Valve Monitoring N/O EOL | SS | SR | E203 | R203 |
| | Valve Monitoring N/C EOL | SS | SR | E203 | R203 |
| | Duct Detector | SS | SR | E203 | R203 |
| | Detector | SS | SR | E203 | R203 |
| | Temperature | KS | KR | E203 | R203 |
| | Pressure | SS | SR | E203 | R203 |
| | Level | SS | SR | E203 | R203 |
| | Position | SS | SR | E203 | R203 |
| | Power | SS | SR | E203 | R203 |
| | General Supervision | SS | SR | E203 | R203 |
| | General Purpose N/O EOL | SS | SR | E203 | R203 |
| | General Purpose N/C EOL | SS | SR | E203 | R203 |
| | General Purpose N/C no EOL | SS | SR | E203 | R203 |
| Emergency | General Purpose N/O EOL | QA | QR | E150 | R150 |
| | General Purpose N/C EOL | QA | QR | E150 | R150 |
| | General Purpose N/C no EOL | QA | QR | E150 | R150 |

| Input Action | Device Setting | SIA Event Reporting Code | SIA Event Restoring Code | Contact ID Reporting Code | Contact ID Restoring Code |
|------------------|-------------------------------|--------------------------|--------------------------|---------------------------|---------------------------|
| Auxiliary | General Purpose N/O EOL | IA | IR | E140 | R140 |
| | General Purpose N/C EOL | IA | IR | E140 | R140 |
| | General Purpose N/C no EOL | IA | IR | E140 | R140 |
| Security | General Purpose N/O EOL | BA | BH | E130 | R130 |
| | General Purpose N/C EOL | BA | BH | E130 | R130 |
| | General Purpose N/C no EOL | BA | BH | E130 | R130 |
| Silence | General Purpose N/O EOL | - | - | - | - |
| | General Purpose N/C EOL | - | - | - | - |
| | General Purpose N/C no EOL | - | - | - | - |
| Reset | General Purpose N/O EOL | - | - | - | - |
| | General Purpose N/C EOL | - | - | - | - |
| | General Purpose N/C no EOL | - | - | - | - |

| Input Action | Device Setting | SIA Event Reporting Code | SIA Event Restoring Code | Contact ID Reporting Code | Contact ID Restoring Code |
|--------------------|-------------------------------|--------------------------|--------------------------|---------------------------|---------------------------|
| Fire Drill | General Purpose N/O EOL | FI | FK | E604 | R604 |
| | General Purpose N/C EOL | FI | FK | E604 | R604 |
| | General Purpose N/C no EOL | FI | FK | E604 | R604 |
| Transparent | General Purpose N/O EOL | - | - | - | - |
| | General Purpose N/C EOL | - | - | - | - |
| | General Purpose N/C no EOL | - | - | - | - |
| Disablement | General Purpose N/O EOL | - | - | - | - |
| | General Purpose N/C EOL | - | - | - | - |
| | General Purpose N/C no EOL | - | - | - | - |
| Test Mode | General Purpose N/O EOL | - | - | - | - |
| | General Purpose N/C EOL | - | - | - | - |
| | General Purpose N/C no EOL | - | - | - | - |

| Input Action | Device Setting | SIA Event Reporting Code | SIA Event Restoring Code | Contact ID Reporting Code | Contact ID Restoring Code |
|--|-----------------------|---------------------------------|---------------------------------|----------------------------------|----------------------------------|
| Telco Line 1 Failure | Panel Action | LT | LR | E351 | R351 |
| Telco Line 2 Failure | Panel Action | LT | LR | E352 | R352 |
| AC Power Failure | Panel Action | AT | AR | E301 | R301 |
| Battery Missing | Panel Action | YM | YR | E311 | R311 |
| Low Battery | Panel Action | YT | YR | E302 | R302 |
| Earth Ground | Panel Action | YP | YQ | E310 | R310 |
| Panel Reboot | Panel Action | FT | FJ | E305 | R305 |
| SLC Loop 1 Open | Panel Action | ET | ER | E331 | R331 |
| SLC Loop 2 Open | Panel Action | ET | ER | E332 | R332 |
| Comm Fail 1 | Panel Action | YC | YK | E354 | R354 |
| Comm Fail 2 | Panel Action | YC | YK | E354 | R354 |
| Aux 24V fuse trouble | Panel Action | YP | YQ | E312 | R312 |
| Network Troubles (open circuit or short) | Panel Action | NT | NR | E330 | R330 |
| Troubles on RS-454 devices (missing addr5) | Panel Action | ET0450 | ER0450 | E330 069 | R330 069 |
| Troubles on RS-454 devices (unexpected addr4) | Panel Action | ET0440 | ER0440 | E330 068 | R330 068 |
| Test Signal | | RP or RY | | E602 or E608 | - |

Index

Numerics

5.25 Amp Power Supply 15

A

Access Level 2 49
 Access Level 3 54
 Access Level 3 controls 49
 Activates inputs, outputs or actions 12
 additional requirements 26
 Address restrictions 8
 addressable device 27
 Alarm Silence 12
 Alarm Silence button 12
 anchor the empty cabinet 20
 Anchoring 20
 anchoring the Elite-RS 20
 Audible Devices 30
 Authorized Special Application Devices 93
 Automatic-retry 15
 Auxiliary 24 VDC 101

B

Battery Cabinet 32
 battery disconnected 37
 Battery-backup 15
 Battery-boost 15
 battery-lead-kit 59
 before beginning the installation process 18

C

Cabling 69
 cancel disablements 52
 Cancels the current menu selection 11
 circuit overloads 59
 Class A, Style 6 26
 Class A, Style 6 compliance 28
 Class B connections 29
 Class B, Style Y Notification Appliances 31
 clearance beyond the door 19
 Clearing the Event Log 43
 Closed Nipple 27
 Closed Nipple devices 27
 closed-nippling 27
 common enclosure 27
 Compatible Devices for Auxiliary 24V 93
 Compatible Notification Appliance Circuits 77

Configures the Elite-RS Panel 34
 Confirming a Successful Installation 34
 Connect Class B loops 29
 Connecting 24VDC Devices 25
 Connecting Batteries 32
 Connecting Class A Loops 32
 Contact ID format 8
 Contacting Kentec for Repair 4
 contamination status 53
 Control Unit Board 65
 Current Draw Worksheet 95, 107

D

daylight saving time 53
 Denotes a displayed variable 4
 Details of the fire activation 54
 Detector Sensitivity 29
 Detector Spacing 29
 Determining 97
 Determining Battery Capacity 18
 device-loading 95
 digital communication format 8
 Disable 51
 Disable Addresses 51
 Disable Loops 50
 Disable Panel I/O 51
 Disable Zones 50
 Disablements Menu 50
 Disables or enables NAC 1 51
 Disables or enables NAC 2 51
 Disables or enables the front panel
 Programmable Function button 51
 Disables or enables the front-panel Fire Drill button 51
 disconnected-battery and low-battery indicators 57
 Displaying the Event Log 41
 Displays after a successful boot 34
 Displays the number of alarms present 11
 Displays the number of events present 11
 Document Conventions 4

E

| | |
|--------------------------------|----|
| electrostatic discharge | 18 |
| electrostatic discharge damage | 18 |
| Enables the menu selection | 11 |
| Enter | 11 |
| EVENT LOG | 38 |
| Event Log | 41 |
| event log | 38 |
| event log clear | 38 |
| Events and Status | 53 |
| Exit | 11 |
| expansion boards | 32 |

F

| | |
|----------------------------------|--------|
| field-programmable software | 1 |
| Fire | 32 |
| Fire Drill | 12, 51 |
| Fire Event | 54 |
| Fire warning NACs | 54 |
| Fire Zone indicator | 54 |
| front panel lamps | 36 |
| Front-Panel Menu | |
| Access Level 3 | 53 |
| Disables | 50 |
| Events and Status | 53 |
| Sensor Maintenance Early Warning | 53 |
| Set System Time | 53 |
| Test Zones | 52 |
| Fuse failure | 59 |

G

| | |
|---------------------------|----|
| General Trouble indicator | 54 |
| ground strap | 18 |
| Ground straps | 18 |

H

| | |
|-------------|----|
| heart-beat | 57 |
| help screen | 11 |

I

| | |
|---|----|
| if front panel lamps do not light | 36 |
| If You Need Help | |
| technical assistance contact | 4 |
| Indicates text displayed on a computer screen | 4 |
| industry-standard receivers | 8 |
| Initiate zone testing | 52 |
| Input Delay Settings | 29 |
| Inspecting Batteries | 57 |
| Installation | |
| Before you begin | 18 |
| Confirming a Successful Installation | 34 |
| Connecting Class B Loops | 29 |
| Connecting the Power Supply and Batteries | 19 |
| Event Log | 41 |
| Loop Data Test | 45 |
| NFPA 72, Style 6 | 29 |
| NFPA 72, Style 7 | 27 |
| TEST ZONES | 38 |
| Testing the Panel Lamps | 36 |
| Wiring AC Power and TELCO | 20 |
| Installation Procedures | 25 |
| installing audible and visual Notification Appliances | 30 |
| Installing SLC Devices | 29 |
| Installing the 10 Amp Battery-Fuse | 59 |
| Installing the 3 Amp Power Supply Fuse | 60 |
| Installing the Standby-Batteries | 57 |
| Introduction | 1 |

K

| | |
|---------------|----|
| knockout tabs | 20 |
|---------------|----|

L

| | |
|-------------------------------|--------|
| Lamp Test | 12 |
| lamp test button | 36 |
| LCD status display | 54 |
| Local NAC On – Off | 52 |
| Logon | 17, 49 |
| LOOP DATA TEST | 38 |
| Loop Initialization | 34 |
| Loop Outputs On – Off | 52 |
| Low battery voltage | 37 |
| low current auxiliary devices | 32 |

M

| | |
|-------------------------------|-----|
| maintain and repair | 57 |
| Maintenance | 57 |
| Marking the Location | 19 |
| maximum current draw | 99 |
| maximum line loss | 32 |
| maximum Pre-Alarm event delay | 54 |
| maximum resistance | 100 |
| maximum Trouble event delay | 54 |
| maximum wire length | 99 |
| minimum operating-voltage | 99 |
| monitoring and reporting | 7 |
| More Events | 11 |
| More Fire Events | 11 |
| Mounting Hardware | 18 |
| mounting site | 18 |
| Mutes the internal buzzer | 12 |

N

| | |
|--|--------|
| NAC Circuit 1 | 51 |
| NAC Circuit 2 | 51 |
| NAC Trouble indicator | 51 |
| navigate down to TEST ZONES | 39 |
| Navigate the menu | 49 |
| Navigates menu selections down | 11 |
| Navigates menu selections to the left | 11 |
| Navigates menu selections to the right | 11 |
| Navigates menu selections up | 11 |
| NFPA 72, Class A, Style 7 requirements | 27 |
| non-latching inputs | 12 |
| Non-latching inputs are cleared | 12 |
| Normal Standby | 35 |
| normally-open contact | 32 |
| Normal-Standby | 34, 35 |
| Notification Appliance (NA) | 30 |

O

| | |
|-------------------------------|----|
| Operating Environment | 71 |
| Overview | 7 |
| Panel Controls and Indicators | 9 |

P

| | |
|-----------------------------------|--------|
| panel buzzer | 54 |
| Panel Initialization | 34 |
| Panel Outputs On – Off | 52 |
| Panel Sounder Silence | 12 |
| Part Numbers | 4 |
| Appendix B | 4 |
| Part numbers | |
| Appendix B | 4 |
| Appendix D | 4 |
| Physical Specifications | 71 |
| Planning | 18 |
| Points and addresses | 7 |
| points per loop | 7 |
| points per panel | 7 |
| polarized and suppressed circuits | 32 |
| Power-Supply | 15 |
| power-supply fuse | 59 |
| Pre-alarm Event | 54 |
| Preparation | 17, 49 |
| Preparing for Mounting | 20 |
| Programmable | 51 |
| Programmable Function | 12 |
| protect SLC loop devices | 26 |
| Provides a fire drill test | 12 |

Q

| | |
|---------------------|----|
| qualified personnel | 18 |
|---------------------|----|

R

| | |
|--------------------------------------|-----|
| raceways | 27 |
| Re Sound Alarm | 12 |
| red FIRE lamp | 54 |
| Related Documentation | 3 |
| Relay | 32 |
| Relay Contacts | 32 |
| Relay contacts | 32 |
| removes the event log | 43 |
| Removing Knockout Tabs | 20 |
| Removing the 10 Amp Battery-Fuse | 59 |
| Removing the 3 Amp Power Supply Fuse | 60 |
| Removing the Door | 62 |
| Removing the Standby-Batteries | 57 |
| Replacement Parts | 76 |
| replacement standby-batteries | 58 |
| Replacing Fuses | 59 |
| Replacing Standby-Batteries | 57 |
| Reporting | 115 |
| Reset | 12 |
| Reset button | 12 |
| Resets latching inputs | 12 |
| Riser conductors | 92 |

S

| | |
|---|----|
| Selecting Standby-Batteries | 19 |
| Sensor Maintenance Early Warning | 53 |
| sets the panel date and time | 53 |
| Short Circuit Isolator Modules | 26 |
| Short-circuit protection | 15 |
| SIA or Contact ID | 8 |
| Silence the sounder | 37 |
| Silences NACs connected to the Elite-RS | 12 |
| silencing operation | 36 |
| single housings | 27 |
| SLC | 65 |
| SLC detectors | 29 |
| SLC loop | 26 |
| SLC loop installation | 30 |
| Specifying Wire Size | 25 |
| Standard for Control Units and Accessories for Fire Alarm Systems | 1 |
| Status | 15 |
| status monitoring and reporting | 8 |
| Sub-addresses | 51 |
| sum of device-loads | 95 |
| Supervisory | 32 |

T

| | |
|--|--------|
| termination jumpers | 29 |
| test example | 47 |
| Test Mode condition | 52 |
| TEST ZONES | 38 |
| Testing the Installation | 20, 25 |
| Tests | 38 |
| Tests Elite-RS Panel NACs | 38 |
| Tests front panel indicators and the internal buzzer | 12 |
| Tests internal hardware and firmware | 34 |
| Tests loop driven outputs | 38 |
| Timed disabling | 51 |
| To cancel disablements | 52 |
| To complete the installation | 17 |
| to comply with NFPA 72, Class A, Style 6 or Style 7 | 26 |
| toggle disablements | 52 |
| total-current | 95 |
| Trouble | 32 |
| trouble condition | 36 |
| Trouble Event | 54 |
| trouble signal | 26, 29 |
| Troubleshooting | 38 |
| Trouble-Silence Test | 36 |

U

| | |
|-------------------|----|
| upper control pad | 38 |
| used for emphasis | 4 |
| Using This Manual | 3 |

V


| | |
|------------------------------------|----|
| variable that you must type | 4 |
| View & Restore Disabled Features | 52 |
| View / Restore Disablements option | 52 |
| View Devices | 52 |
| Visual Devices | 30 |
| voltage reversing outputs | 32 |

W

| | |
|----------------------|----|
| wire length maximums | 66 |
| Writing styles | 4 |

Z

| | |
|---------------------------|--------|
| zero-ohm shorting-jumpers | 26, 29 |
|---------------------------|--------|

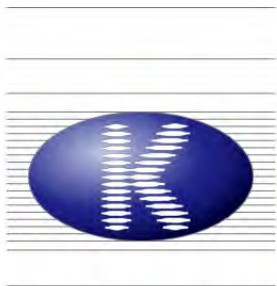

Kentec Electronics Ltd.